# 590 Turbo
# Loader Backhoe

## Parts Catalog

Bur 8-6962


MidWestTech | Case 590 Turbo, 590T Loader Backhoe Parts Catalog | Publication 8-6962

Order the manual at mid-west-tech.com >

# PICTORIAL SECTION INDEX



GENERAL 1

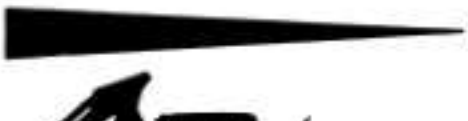

ENGINE 2



FUEL 3



ELECTRICAL 4



TRACK/
STEER. 5



POWER TRAIN 6



BRAKES 7



HYDRAULICS 8



CHASSIS/
MTD. EQUIP. 9

NUMERICAL
INDEX 10

B902106J

Bur 8-6962 Issued May, 1994 Printed in U.S.A.

MidWestTech | Case 590 Turbo, 590T Loader Backhoe Parts Catalog | Publication 8-6962 Order the manual at mid-west-tech.com >

# GENERAL INFORMATION

## Indexes

Section 1 of this catalog contains a SN and P.I.N. location guide, alphabetical index, pictorial index of the sections included, and pictorial index(es) for quick location of hoses and tubes (and other system components in some catalogs). An alphabetical index also appears at the beginning of each section. Section 10 is the Numerical Index which lists all part numbers in alpha/numeric order with their page location and reference number.

## Illustration and Text

The arrangement of this parts catalog is for easy identification of parts. All parts are illustrated in "exploded views" in proper relation to each other. Reference numbers used in the illustrations refer to those on the text pages. The text pages list reference number, part number, part description and the quantity required.

## Abbreviations

P.I.N. "Product Identification Number"
SN "Serial Number"
NSS "Not Serviced Separately" in the part number column indicates this part is not available for service.
REF "Reference" in the part number column indicates this part has special service information. The page where this information can be found is given in the part description column.
UAR "Use As Required" in the quantity required column indicates the number of parts used is determined by service needs.

## Right-Hand and Left-Hand Identification

The reference to right-hand and left-hand in this catalog is identified by the operator standing at the rear of the basic unit (without rear attachment), looking toward the front of the machine (in normal forward travel). For pages covering any machine attachments, right-hand and left-hand are defined by the operator sitting in the position for proper operation of the attachment.

## Catalog Revisions and Supplements

Changes to the product may make it necessary to revise or add pages to this catalog. A cover sheet will list all pages released in a revision or supplement. Each new or revised page will have a new issue date. All revised and new pages must be put into the parts catalog as soon as they are received.

## Parts Orders

Orders must specify product model, all necessary serial numbers, correct part number, complete description, quantity required, method of shipment, and shipping address.

## Text Format Explanation

An assembly may contain many service items. The component parts of an assembly or subassembly are indented. The quantity required column lists the number of assemblies required for a complete machine, and the number of components required in a complete assembly or subassembly.

The example below illustrates the use of indents and other text page elements explained on this page.

| REF. | PART NO. | DESCRIPTION | REQ'D. |
|---|---|---|---|
| 1 | D43567 | FILTER ASSEMBLY - hydraulic oil, P.I.N. 7534840 and after | 1 |
| | D61903 | HEAD ASSEMBLY - filter | 1 |
| 2 | NSS | HEAD - filter, order D61903 head assembly | 1 |
| 3 | D58199 | VALVE - bypass | 1 |
| | D43800 | KIT - filter element, replaces D35700 kit | 1 |
| 4 | NSS | ELEMENT - filter, order D43800 element kit | 1 |
| 5 | A27994 | O-RING - filter | 1 |
| 6 | D61948 | HOUSING - filter | 1 |
| 7 | REF | CANOPY - ROPS, machinery item, order from Machinery Price List | 1 |
| 8 | 843065C1 | HOSE - 132 inch long, reservoir to pump | 1 |
| 9 | 113-323 | BOLT - hex, 7/16 NC x 1-3/4 inch | 2 |
| 10 | 814-8030 | BOLT - hex, 8 - 1.25 x 30 mm | 4 |

MidWestTech | Case 590 Turbo, 590T Loader Backhoe Parts Catalog | Publication 8-6962 Order the manual at mid-west-tech.com >

# ALPHABETICAL INDEX


A

Air Cleaner ..... 2-7
Air Cleaner Mounting ..... 2-5
Air Conditioner
- Blower ..... 9-129
- Compressor ..... 4-11
- Compressor Mounting ..... 4-15
- Condenser ..... 9-137
- Controls ..... 9-135,9-137
- Evaporator Core ..... 9-135
- Filter - air ..... 9-127
- Receiver-Drier ..... 9-137

Alarm - backup ..... 4-49,4-49B
Alarm - warning ..... 4-51
Alternator - electrical ..... 4-7,4-9
Alternator Mounting ..... 4-13
Antirollback - loader ..... 9-9
Armrests - seat ..... 9-103
Attachment Kit - hand held tools ..... 8-55B,8-55D
Auxiliary Fuel Reservoir ..... 3-5
Axle
- Front - four wheel drive ..... 6-35 - 6-47
- Front - two wheel drive ..... 5-17
- Rear - four wheel drive ..... 6-65

Axle Mounting - front four wheel drive ..... 6-31

B

Backhoe
- Boom ..... 9-39
- Boom Latch ..... 9-43
- Bucket Links - attachments ..... 9-47
- Buckets ..... 9-53 - 9-65
- Controls (See Controls)
- Control Tower ..... 9-21
- Dipper ..... 9-45,9-47
- Extendable Dipper ..... 9-49,9-51
- Frost Point ..... 9-47
- Hydraulics (See Hydraulic Systems)
- Stabilizers ..... 9-35
- Swing Tower ..... 9-37

Backup Alarm ..... 4-49,4-49B
Baffle Plates ..... 9-71
Battery ..... 4-19,4-23
Beacon - rotating ..... 4-55
Bearings - front wheel ..... 5-19
Belts - fan, alternator, and compressor ..... 2-3,4-15
Belts - seat ..... 9-87,9-89
Block - cylinder ..... 2-39 - 2-45
Blower - air conditioner ..... 9-129
Boom Latch ..... 9-43
Boom Lock ..... 8-53,8-55

B

Box - battery ..... 4-19
Box - loader valve ..... 9-79
Box - operators tool ..... 4-19
Brake - differential, transaxle ..... 7-3
Brake - parking ..... 7-13
Brake - parking, transaxle ..... 7-5
Brake Master Cylinder ..... 7-11
Brake Pedals ..... 7-7
Buckets - backhoe ..... 9-53 - 9-65
Buckets - loader ..... 9-17,9-19

C

Cab
- Air Conditioner ..... 9-135 - 9-139
- Air Filter ..... 9-127
- Blower ..... 9-129
- Consoles - control ..... 9-109
- Covers - interior ..... 9-107
- Doors and Windows/ Glass ..... 9-105,9-111 - 9-115
- Electrical and Lighting ..... 4-37, ..... 4-37B,4-41,4-41B,4-45,9-119,9-125
- Frame and Roof Cap ..... 9-107
- Headliner, Louvers, and Dome Lamps ..... 9-125
- Heater ..... 9-131,9-133
- Mounting Parts ..... 9-105
- Panel - cab control ..... 9-119
- Windshield Wipers ..... 9-121,9-123

Cables - battery ..... 4-19,4-23
Camshaft - engine ..... 2-37
Canopy - ROPS ..... 9-141
Chassis - tractor ..... 9-69
Cluster - instrument ..... 4-33
Clutch - power shuttle ..... 6-13,6-15
Clutch Cutout ..... 4-27
Cold Start System ..... 2-11,4-23
Column - steering ..... 5-9
Compressor - air conditioner ..... 4-11
Compressor Mounting ..... 4-15
Concrete Breaker Fork ..... 9-65B
Controls
- Antirollback - loader ..... 9-9
- Backhoe ..... 9-23 - 9-31
- Boom Latch ..... 9-43
- Brake ..... 7-7,7-13
- Clutch Cutout ..... 4-27
- Engine Speed - throttle ..... 3-7,3-9
- Extendable Dipper ..... 9-27,9-31
- Front Drive Axle - 4WD ..... 6-29,6-29B
- Loader - lift, bucket, and clam ..... 9-3 - 9-7
- Return-to-Dig - loader ..... 9-11
- Shuttle ..... 6-21




MidWestTech | Case 590 Turbo, 590T Loader Backhoe Parts Catalog | Publication 8-6962 Order the manual at mid-west-tech.com >