NEW HOLLAND
3 Cylinder Tractors
3230 4130 3430 4630 3930

SERVICE PARTS CATALOG



87022077 8/02

Order the manual at mid-west-tech.com >

TABLE OF CONTENTS

01A01		FRONT WHEEL & HUBS
01A02		FRONT WHEEL, (2) PIECE - 3430 LCG, 4630-O, 3930
01A03		FRONT WHEEL ASSEMBLY, W/FWD
01A03	A	FRONT WHEEL ASSEMBLY, WHEEL 2000 DESIGN, W/FWD
01A04		STANDARD REAR WHEELS, ROUND DISC
01A05		STANDARD REAR WHEELS, SQUARE DISC
01A07		POWER ADJUSTABLE WHEEL, 28"
01A08		POWER ADJUSTABLE WHEEL, 30" & 38"
01B01		REAR WEIGHTS, MANUAL ADJUSTABLE WHEEL, W/SQUARE DISC, 24", 28", 30", 34", 36", 38"
01B02		WEIGHTS, POWER ADJUSTABLE WHEEL (NHNA), 30" & 34"
01B03		WEIGHTS, POWER ADJUSTABLE WHEEL, 38"
01B04		WEIGHTS, MANUAL ADJUSTABLE WHEEL, 24" - 3930, 4630, 4630-O
01B05		REAR WHEEL WEIGHT KIT, PRESSED STEEL DISC
01B06		WEIGHTS, FRONT END
02A01		BRAKES, 3 & 4 PLATE
02B01		BRAKE CONTROLS & RELATED PARTS (NH-E) - 3430, 3930, 4130, 4630
02B02		BRAKE CONTROLS & RELATED PARTS, W/CAB - 3430, 3930, 3930H, 4130, 4630
02B03		BRAKE CONTROLS & RELATED PARTS, L/CAB - 3230, 3430, 3930, 4630, 4630-O
02B04		TRANSMISSION HANDBRAKE, W/4WD, L/CAB - 3430, 3930, 3930N, 3930NO, 4130, 4630
02C01		TRAILER BRAKES (NH-E) - 3430, 3930, 4130, 4630
03A01		FRONT AXLE, STEERING & RELATED PARTS (3-90/5-93)
03A02		FRONT AXLE, STEERING & RELATED PARTS, W/MANUAL (3-90/5-93) - 3430,3930, 4130; W/MANUAL & POWER - 4630
03A03		FRONT AXLE, STEERING & RELATED PARTS (6-93/5-94)
03A04		FRONT AXLE, STEERING & RELATED PARTS (6-94/)
03A05		FRONT AXLE ASSEMBLY (6-94/) - EXCEPT 3230
03B01		STEERING GEAR ASSEMBLY, MANUAL
03B02		STEERING GEAR ASSEMBLY, POWER, SINGLE DROP ARM
03B03		STEERING COLUMN, L/CAB - EXCEPT 3930H
03B04		STEERING COLUMN, TILT, W/CAB - 3430, 3930, 3930H, 4130, 4630
03C01		POWER STEERING PUMP & RESERVOIR
03D01		POWER STEERING CYLINDER (3-90/5-94)
03D02		POWER STEERING CYLINDER, W/2WD (6-94/)
03E01		POWER STEERING MOTOR, E9NN3A244BA & E8NN3A244AA BREAKDOWN
03G01		AXLE SUPPORTS, HOUSINGS, STEERING CYLINDER & RELATED PARTS - 3230, 3430, 3930, 3930H, 4130, 4630
03G02		AXLE ASSEMBLY, W/FWD, 3930N, 3930NO, 4130N, 4130NO, 4630N & 4630NO
03G03		AXLE SHAFT & PLANETARY ASSEMBLIES - 3230, 3430, 3930, 4130, 4630
03G04		RING GEAR, PINION & DIFFERENTIAL ASSEMBLY
03G05		DRIVE SHAFT & SHIELD ASSEMBLY
03G06		FRONT TRANSFER CASE, W/4WD
03G08		TRANSFER CASE & CONTROLS, W/4 WHEEL BRAKING
03G09		WATERPROOF DRIVE SHAFT - 3930, 4130, 4630
04A01		REAR AXLE CENTER HOUSING
04A02		REAR AXLE CENTER HOUSING, L/4WD
04B01		REAR AXLE FINAL DRIVE DIFFERENTIAL
04B02		REAR AXLE & RELATED PARTS
04C01		REAR FINAL DRIVE, RING GEAR & PINION
04D01		DIFFERENTIAL LOCK CONTROLS

MidWestTech | Ford New Holland 3230, 4130, 3430, 4630, 3930 Tractor Parts Catalog | Pu... Order the manual at mid-west-tech.com >


TABLE OF CONTENTS

05A01	AUXILIARY SERVICE CONTROL VALVE
05A02	AUXILIARY SERVICE CONTROL PIPE & COUPLER
05B01	LIFT CONTROL & DRAFT CONTROL, W/CAB - 3430, 3930, 3930H, 4130, 4630
05B02	LIFT CONTROL & DRAFT CONTROL, L/CAB (3-90/3-94) - EXCEPT 3930H
05B03	LIFT CONTROL & DRAFT CONTROL, L/CAB (4-94/) - 3430, 3930, 3930N, 3930NO, 4130, 4630
05C01	FLOW CONTROL VALVE, FILTER & RELATED PARTS
05C02	FLOW CONTROL VALVE COMPONENTS
05C03	HYDRAULIC MANIFOLD, L/FLOW CONTROL VALVE (5-93/)
05D01	LIFT ARMS & SHAFTS
05D02	LIFT COVER
05D03	LIFT CYLINDER & RELATED PARTS
05D04	LIFT LINKAGE
05E01	LIFT LEVELING BOX ASSEMBLY, L/IN CAB LEVELING
05E02	LIFT LEVELING BOX ASSEMBLY, W/IN CAB
05E03	LIFT LEVELING BOX ASSEMBLY
05E04	LIFT LEVELING BOX ASSEMBLY (NH-E)
05F01	TRANSPORT LOCK, HPL, SWEDEN & KOREA
05G01	LIFT ASSIST RAM (NH-E)
05H01	REMOTE CONTROL VALVE ASSEMBLY, SINGLE SPOOL
05H02	REMOTE CONTROL VALVE ASSEMBLY, DOUBLE SPOOL
05H03	REMOTE CONTROL VALVE COUPLER & HOSES
05J01	REMOTE CONTROL VALVE ASSEMBLY, DELUXE
05J02	HANDLES, RH, DELUXE REMOTE CONTROL VALVE
05J03	MANIFOLD & TUBES, DELUXE REMOTE CONTROL
05J04	COUPLER KITS, DELUXE REMOTE CONTROL
05J05	COUPLER ASSEMBLY, DELUXE REMOTE CONTROL
05J06	ATTACHING PARTS, 3RD & 4TH DELUXE REMOTE CONTROL VALVE, L/CAB
05J07	ATTACHING PARTS, 3RD & 4TH DELUXE REMOTE, W/CAB - 3230, 3430, 3930, 3930H, 4130, 4630
05K01	UNLOAD VALVE
05K02	UNLOAD VALVE & TUBING, W/(2) HYDRAULIC PUMPS, L/REMOTES
05L01	AUXILIARY PUMP KIT & RELATED PARTS, CENTER FOR LOADER APPLICATIONS
05M01	PUMP ASSEMBLY & RELATED PARTS, CENTER HOUSING MOUNTED
05M02	PUMP ASSEMBLY & RELATED PARTS, ENGINE MOUNTED
06A01	ENGINE, CYLINDER BLOCK, HEAD & RELATED PARTS
06B01	CRANKSHAFT, FLYWHEEL & RELATED PARTS
06C01	CAMSHAFT, ROCKER ARMS, VALVES & RELATED PARTS
06D01	PISTONS & CONNECTING RODS
06E01	OIL PUMP & OIL PAN
06F01	MANIFOLD & EXHAUST SYSTEM
06F02	TURBOCHARGER, MANIFOLD & RELATED PARTS - 4630, 3930 & 4630 EMISSIONIZED
06G01	TURBOCHARGER ASSEMBLY - 4630, 3930 & 4630 EMISSIONIZED
06H01	GASKET KITS
07A01	SYNCHRONIZED TRANSMISSION, W/8 X 8, 16 X 8, L/CAB - EXCEPT 3930H
07A02	SYNCHRONIZED TRANSMISSION, W/8 X 8, 16 X 8, W/CAB - 3430, 3930, 3930H, 4130, 4630
07B01	REAR COVER, W/SYNCHRONIZED TRANSMISSION, W/8 X 8, 16 X 8
07C01	FRONT COVER, W/SYNCHRONIZED TRANSMISSION, W8 X 8
07C02	FRONT COVER, W/SYNCHRONIZED TRANSMISSION, W/16 X 8
07D01	FRONT HOUSING, W/SYNCHRONIZED TRANSMISSION, W/8 X 8

MidWestTech | Ford New Holland 3230, 4130, 3430, 4630, 3930 Tractor Parts Catalog | Pu... Order the manual at mid-west-tech.com >

05J05		p1	09/01

COUPLER ASSEMBLY, DELUXE REMOTE CONTROL

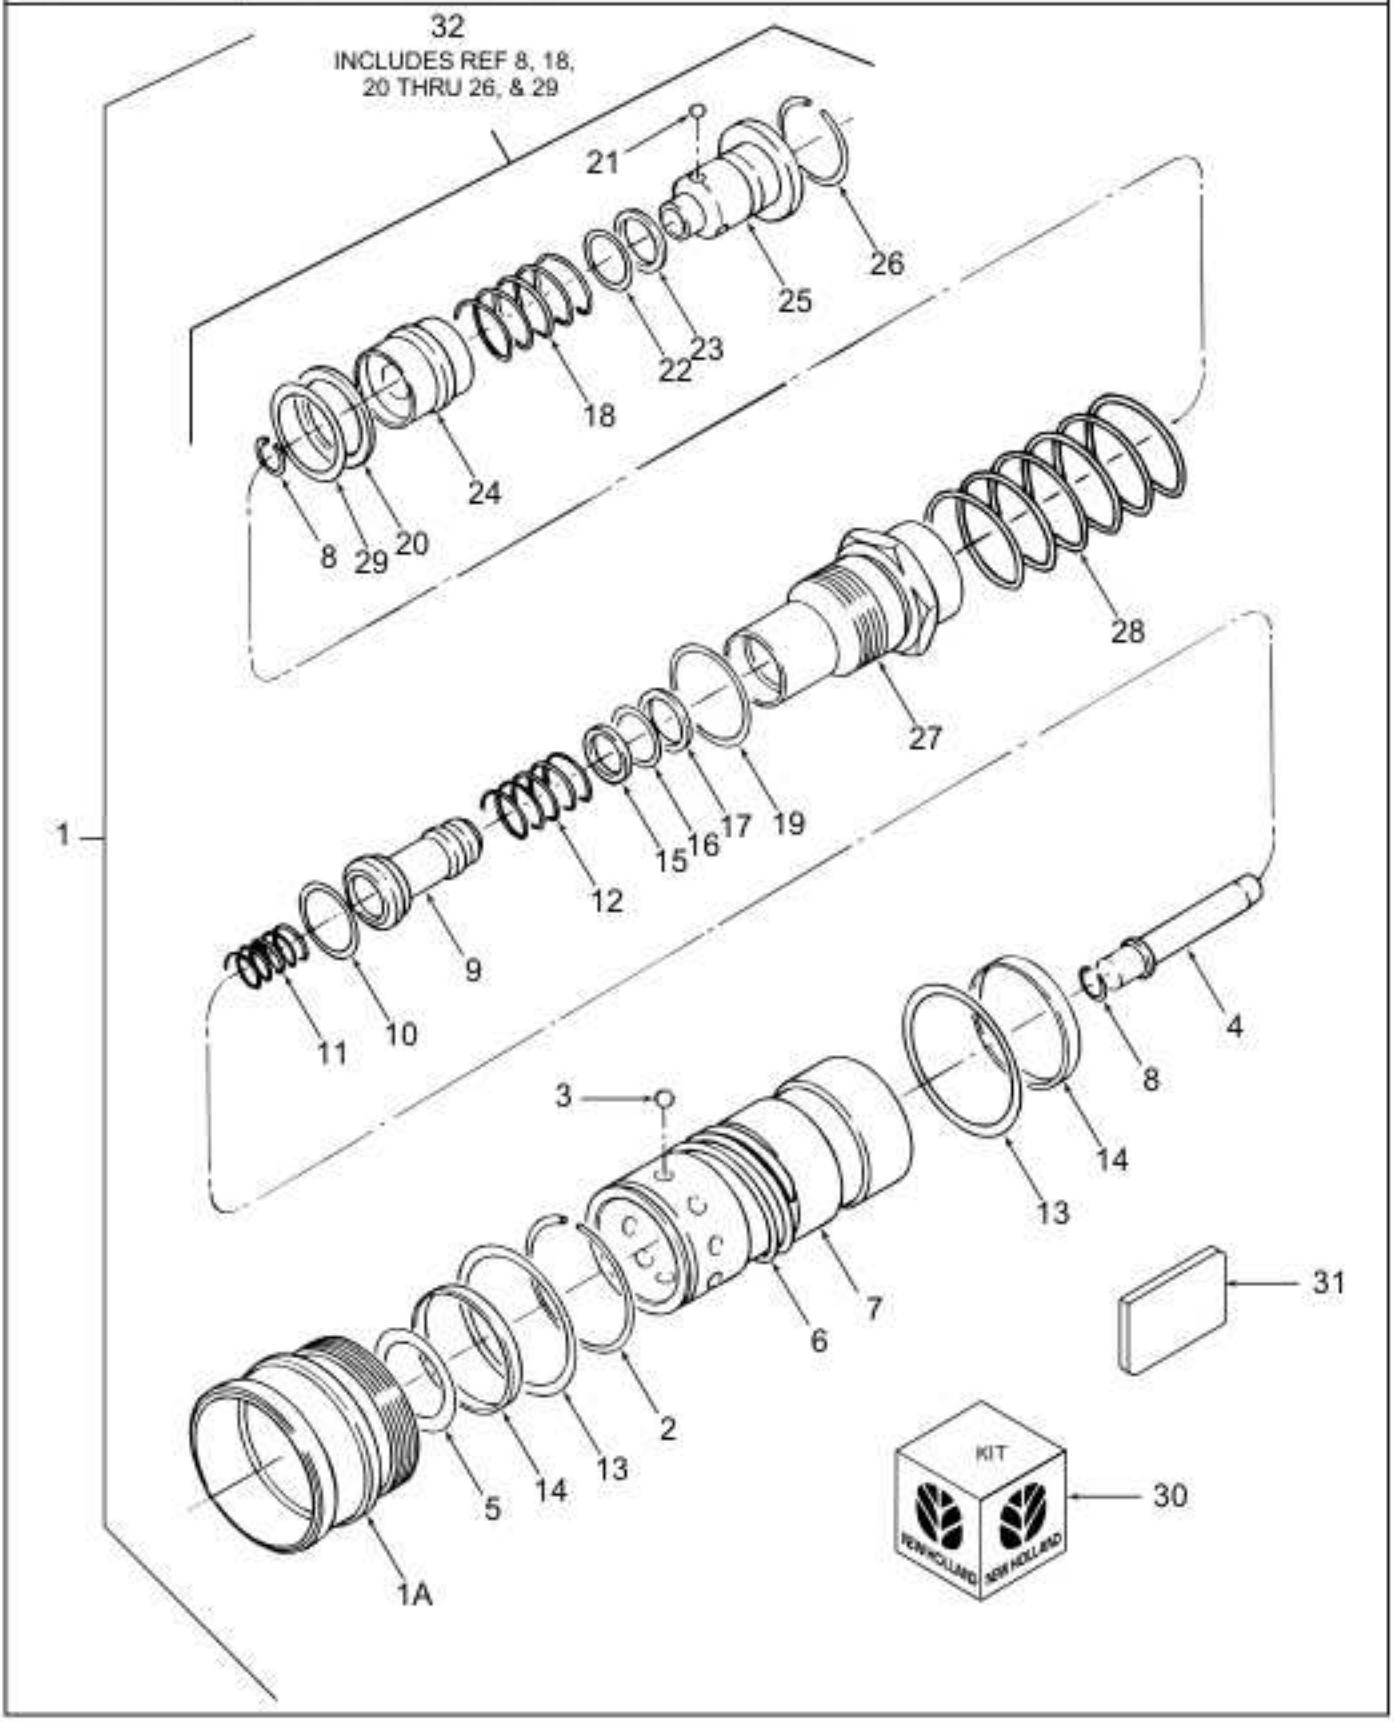

Order the manual at mid-west-tech.com >