995 Tractor

Parts Catalog


8-7161

CASE IH AGRICULTURE


MidWestTech | Case 995 Tractor Parts Catalog | Publication 8-7161

Order the manual at mid-west-tech.com >

ILLUSTRATION AND TEXT
The arrangement of this parts catalog is for easy identification of Case parts. All parts are illustrated in "Exploded views". This places each part in normal reference to each other. Reference numbers are used in the illustrations. These numbers are in reference to those on the text pages. The text pages list reference

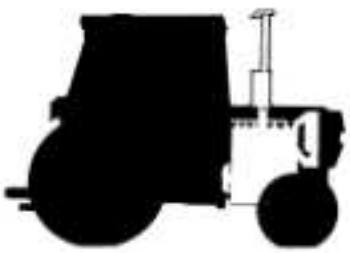



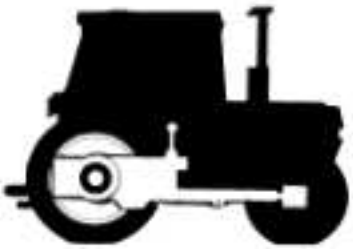



GENERAL 1

ENGINE 2

FUEL 3

ELECTRICAL 4

STEERING 5


POWER TRAIN 6

BRAKES 7

HYDRAULIC 8


CHASSIS 9

NUMERICAL INDEX 10

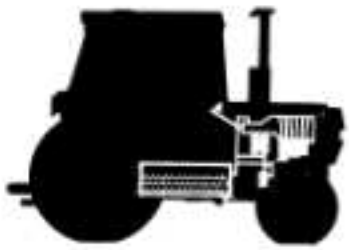





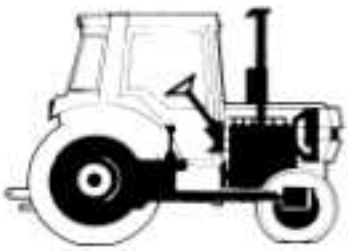

PART NO	PAGE	REF
3228620R92	37	30
3228677R91	33	16
3228677R91	57	12
3229114R1	217	9

Don 8-7161 Issued September, 1993 Printed in U.S.A.

MidWestTech | Case 995 Tractor Parts Catalog | Publication 8-7161 Order the manual at mid-west-tech.com >

ILLUSTRATION AND TEXT

The arrangement of this parts catalog is for easy identification of Case parts. All parts are illustrated in "Exploded Views." This places each part in normal reference to each other. Reference numbers are used in the illustrations. These numbers are in reference to those on the text pages. The text pages list reference number, part number, part description and the amount required (Quantity).

UAR

"Use As Required" in the amount required column is an indication the number of parts used is controlled by service.

REF

"Reference" in the parts number column is an indication this part has many applications or has special service information.

TEXT DESCRIPTION

An assembly may contain many service items. The component parts of an assembly will be indented. The amount required column will list the number of components required for a complete assembly or sub-assemblies. See example.

INDEX

A numberical index which lists the part number and subsection page number on which the part number is located, is on the last pages of this catalog.

CATALOG CHANGES

Changes to the product will make it necessary to revise or add pages to this catalog. Each new or revised page will have a new issue date. A cover sheet will list all pages released for each revision. All revised and new pages must be put into the parts catalog as soon as they are received.

PARTS ORDER

Order must give the complete description, correct part number, the total amount required, the product model, all the necessary serial numbers, the method of shipment and the shipping address.

NSS

"Not Serviced Separately" in the part number column is an indication this part is not available for repairs.

Ref.	Part no	Description	Required
1	125617	FITTING - grease, straight drive type, 3/16 inch	1
2	273359	FITTING - grease, 65 degree drive type, 3/16 inch	1
3	3116435R93	AXLE - front, centre section	1
4	405574R1	BUSHING - cylinder mounting bracket	2
4	376160R1	BUSHING - (Optional to 405574 R1)	2
5	405570R1	BUSHING - pivot	2
6	3125304R1	BUSHING - spring steel	1
7	539128R1	SHAFT - front axle pivot	1
7	99897C1	SHAFT - front axle pivot (Note A)	1
8	179883	BOLT - hex, 1/2 NC x 1-1/4 inch, grade 5	2
9	103323	WASHER - lock, 1/2 inch	2
10	273352	FITTING - grease, 90 degree, 1/8 inch PTF	1
11	15943DA	WASHER - felt, steering knuckle	1
12	3125872R91	KNUCKLE - steering, low low spindle ('A' = 12.14 inch, Note B)	2

RIGHT-HAND AND LEFT-HAND IDENTIFICATION

The reference to right-hand (RH) and left-hand (LH) as used in this publication is identified by the operator standing at the rear of the unit, looking toward the front of the machine.

MidWestTech | Case 995 Tractor Parts Catalog | Publication 8-7161 Order the manual at mid-west-tech.com >

ALPHABETICAL INDEX

A

Air cleaner 2-15
Coopers (With safety element) 2-17
Alternator mounting and shield 4-51
Alternators 4-53

B

Bar axle hub clamp 6-115,117,119,123
Brake master cylinder:
Tractor without cab 7-11
Tractor with cab 7-11
Brake pedals:
Tractor without cab 7-3
Tractor with cab 7-7
Brake reservoir and pipes:
Tractor without cab 7-5
Tractor with cab 7-9

C

Cab 9-35
Air vents 9-65
Blower assembly 9-73,75
Control lever covers 9-61,
Doors 9-41,43
Doors, windows and trim 9-45
Draft control lever housing 9-63
Frame 9-37,39
Heater assembly 9-71
Heater controls 9-69
Heater pipes 9-67
Mountings 9-31,33
Operators compartment covering 9-59
Radio, loudspeaker and antenna 9-57
Rear window wiper 9-83
Roof frame 9-51,53
Roof hatch seal service kit 9-55
Rear windows 9-49
Windshield 9-47
Windshield wash and wipe unit 9-81
Wing mirrors 9-77
Wing mirrors - "D" type 9-79
Camshaft 2-43
Clutch 6-3
Clutch controls 6-47,49,51
Clutch housing 6-5
Clutch housing top cover 6-7,9
Clutch hydraulic cylinders 6-53
Connecting rods 2-51
Coolant system:
Coolant filter 2-13
Water pump carrier and manifold 2-11
Crankshaft 2-47
Crankshaft balancer 2-49

C

Creeper control 6-75,77,79
Creeper shift control (Internal) 6-81
Cylinder block 2-39
Front cover 2-37
Side cover 2-41
Cylinder head 2-35

D

Decals 9-119,121,123
Differential 6-43
Differential brakes 7-13
Differential lock 6-91,93
Draft control 8-45
Cylinder and valve assembly 8-49
External levers and linkage 8-55,57,59
Hydraulic housing 8-47
Internal control linkage 8-53
Unloading and flow control valve 8-51

E

Electrical (With cab):
Battery box, battery and cables 4-43
Bulkhead electrics 4-33
Chassis harness and switches 4-5
Instruments and switches 4-29
Lights and harness 4-11
Lights work and warning 4-19,21
Electrical (Without cab):
Battery tray, battery and cables 4-41
Bulkhead electrics 4-31
Chassis harness and switches 4-3
Instruments and switches 4-23
With ammeter,voltmeter and oil pressure gauge 4-27
Lights work stop and tail 4-15
Lights and harness:
Crown top fenders 4-7
Flat top fenders 4-9
Clips, straps and grommets 4-57
Engine service kit:
Engine heater kit 2-41
Cylinder head gaskets 2-51
Crankcase gaskets 2-59
Ether starting 2-19
Exhaust:
Vertical 2-23
Downswept 2-25

F

Fan 2-9

MidWestTech | Case 995 Tractor Parts Catalog | Publication 8-7161 Order the manual at mid-west-tech.com >