NEW HOLLAND

COMPACT EXCAVATOR

E15

OPERATOR'S MANUAL

87359378 NA

Issued 01-2006

NEW HOLLAND

www.newhollandconstruction.com

MidWestTech | New Holland E15 Compact Excavator Operator's Manual | Publication 8735... Order the manual at mid-west-tech.com >

TABLE OF CONTENTS

CHAPTER 1
GENERAL INFORMATION
To the Owner 1-1
Right, Left, Front, and Rear of the Machine 1-2
Identification Numbers 1-3

CHAPTER 2
SAFETY, AND DECALS
Table of Contents 2-1
Safety Rules 2-3
Personal Safety 2-3
Safety Area 2-3
Utility Safety 2-4
Operator Precautions 2-4
safety Decals 2-9

CHAPTER 3
INSTRUMENTS AND CONTROLS
Table of Contents 3-1
Steps and Access Handles 3-3
Operator's Compartment Controls and Accessories 3-4
Instrument Panel 3-5
Switches 3-7
Control Levers 3-8
Access Covers and guards 3-12
Operator's Seat Adjustment 3-13
Seat Belt 3-13

CHAPTER 4
OPERATING INSTRUCTIONS
Table of Contents 4-1
Before Operating the Machine 4-3
Operating the Machine 4-3
Run-In Period 4-4
Starting the engine 4-4
Bringing the Machine Up To Operating Temperature 4-6
Engine Operation 4-7
Stopping the Engine 4-7
Operating the Machine in Cold Weather 4-8
Operating the Machine in Hot Weather 4-8
Operation 4-8
Machine Travel 4-9
Transporting the Machine 4-10
Operating the Machine in Water 4-13
Parking the Machine 4-14
Operating the Machine on Sloping Ground 4-14
Moving A Disabled Machine 4-14
Lowering the Attachment in the Event of a Machine Failure 4-14
Operating the Bucket 4-15
Machine Storage 4-16

MidWestTech | New Holland E15 Compact Excavator Operator's Manual | Publication 8735... Order the manual at mid-west-tech.com >

CHAPTER 5
LUBRICATION, FILTERS, AND FLUIDS
Table of Contents 5-1
Servicing Instructions 5-3
Fluids and Lubricants 5-4
Daily Inspections 5-7
Lubrication and Maintenance Chart 5-8
Grease Fittings and Lubrication Points 5-10
Engine Oil 5-14
Cooling System 5-16
Fuel System 5-19
Releasing Pressure in the Hydraulic System 5-24
Hydraulic System 5-25
Air Filter 5-31
Travel Reduction Gears 5-32

CHAPTER 6
MAINTENANCE AND ADJUSTMENTS
Table of Contents 6-1
Tracks 6-3
Checking the Condition of Rubber Tracks 6-6
Track Rollers and idlers 6-8
Replacing a Bucket 6-9
Fan and alternator Drive Belt 6-11
Inspecting and Cleaning the Machine 6-11
Checking for Cylinder Leakage 6-11
Fire Extinguisher (Not Supplied) 6-12
Plastic and Resin Parts 6-12
Welding on the Machine 6-12
Metric Torque Specifications 6-13

CHAPTER 7
ELECTRICAL
Table of Contents 7-1
Alternator 7-3
Starter Motor 7-3
Fuses 7-3
Battery 7-4
Connecting A Booster Battery 7-6
Attachment (Boom) Lamp 7-7

CHAPTER 8
SPECIFICATIONS
Table of Contents 8-1
Engine 8-3
Hydraulic Components 8-3
Speed and Gradeability 8-3
Boom Swing and Dozer Blade 8-3
Machine Overall Dimensions - ROPS Canopy 8-4
Working Range 8-5

CHAPTER 9
INDEX

MidWestTech | New Holland E15 Compact Excavator Operator's Manual | Publication 8735... Order the manual at mid-west-tech.com >

Chapter 2
SAFETY, AND DECALS
TABLE OF CONTENTS


SAFETY RULES 2-3
PERSONAL SAFETY 2-3
SAFETY AREA 2-3
UTILITY SAFETY 2-4
OPERATOR PRECAUTIONS 2-4
- Personnel 2-4
- General 2-4
- Mounting and Dismounting Precautions 2-5
- Starting and Stopping Precautions 2-5
- Operating Precautions 2-5
- Maintenance Precautions 2-6
- Fuel Handling Precautions 2-7
- Burn Prevention 2-7
- Hazardous Chemical Precautions 2-8
- Transporting Precautions 2-8
- Roll-Over Protective Structure 2-8
- Fire Extinguisher 2-8
- Seat Belt Precautions 2-8
- Specific Precautions to this Machine 2-9

DECALS 2-10

MidWestTech | New Holland E15 Compact Excavator Operator's Manual | Publication 8735... Order the manual at mid-west-tech.com >

2. LEFT-HAND CONTROL LEVER (SAE Pattern)

3. RIGHT-HAND CONTROL LEVER (SAE Pattern)

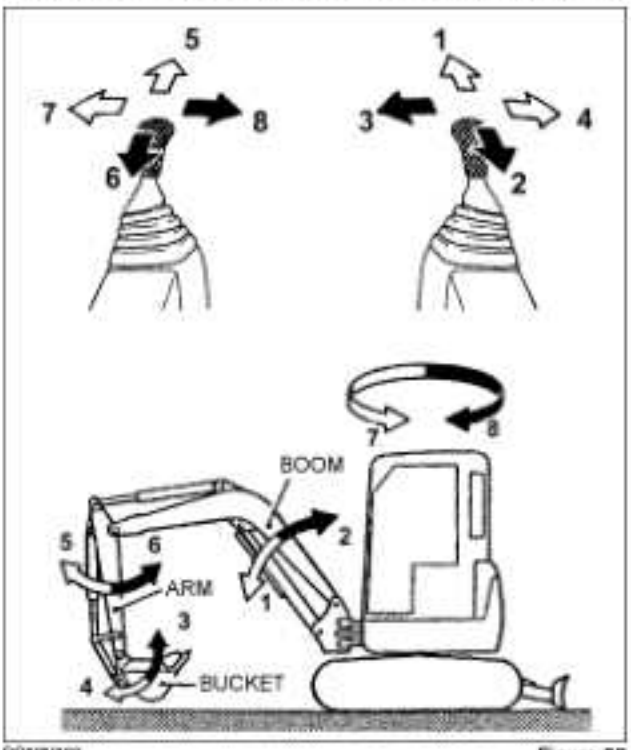

BC02N066 Figure 22

1. BOOM DOWN (RIGHT-HAND CONTROL LEVER)
2. BOOM UP (RIGHT-HAND CONTROL LEVER)
3. BUCKET IN (RIGHT-HAND CONTROL LEVER)
4. BUCKET OUT (RIGHT-HAND CONTROL LEVER)
5. ARM OUT (LEFT-HAND CONTROL LEVER)
6. ARM IN (LEFT-HAND CONTROL LEVER)
7. ROTATION LEFT (LEFT-HAND CONTROL LEVER)
8. ROTATION RIGHT (LEFT-HAND CONTROL LEVER)

These two levers activate each operation shown in the illustration.

All functions can be activated simultaneously.


The operator's control levers return to the neutral position when released, and the operation of attachment is stopped.

WARNING: *Confirm for safety around the working area. Also ensure that each lever operation is in accordance with the operating pattern indicated on the labels.*

If labels do not match the operator's control pattern, replace them immediately to avoid accidents and/or injury.

CE-NA000

Boom Swing Function Switch

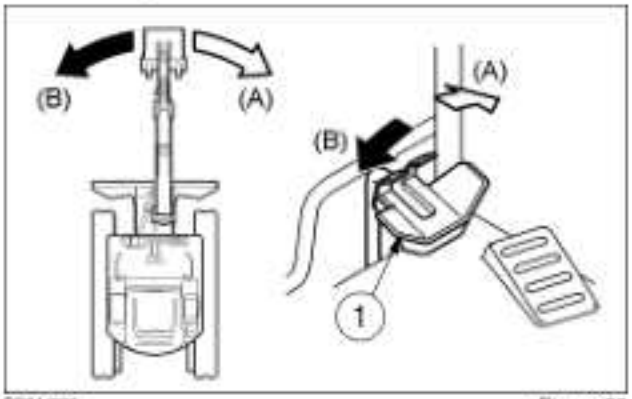

BS04J282 Figure 23

1. BOOM SWING CONTROL PEDAL
A. RIGHT-HAND SWING
B. LEFT-HAND SWING


Depress the pedal to the right to activate the boom Right-Swing.

Depress the pedal to the left to activate the boom Left-Swing.

WARNING: *Lock the boom swing control pedal when this function is not being used, failure to do so may cause serious accidents.*

WARNING: *Because the boom swing operation range is wide, carefully operate the attachment paying attention to the surrounding conditions.*


Option Pedal (Nibbler & Breaker)

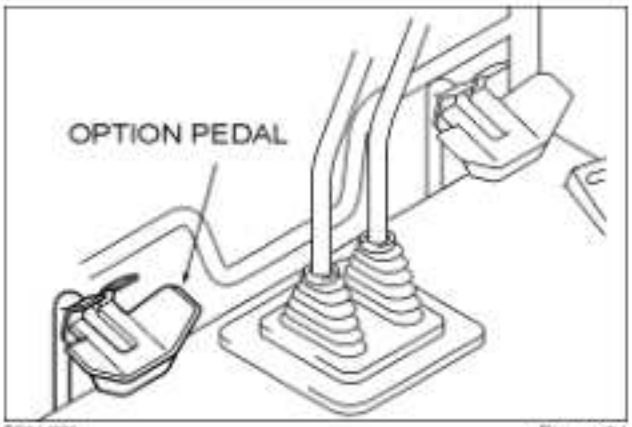

BS04J271 Figure 24

This pedal is used to operate optional attachments, nibbler & breaker.

MidWestTech | New Holland E15 Compact Excavator Operator's Manual | Publication 8735... Order the manual at mid-west-tech.com >

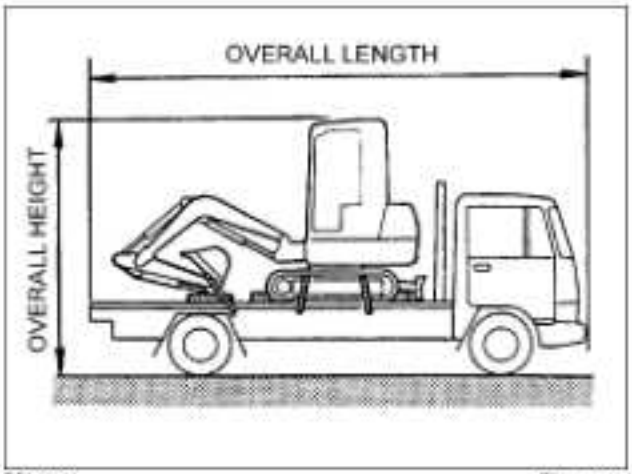

BS04J240 Figure 29

15. Measure the distance between the ground and the highest point of the machine. You must know the overall height. See Machine overall dimensions in the Chapter 8 (Specifications).

LIFTING PROCEDURES FOR THE MACHINE

WARNING: *Lifting the machine must be done very slowly.*


CE-NA000

WARNING: *Make sure that there is no one under or near the machine while it is being lifted.*

CE-NA000

WARNING: *Improper lifting method and/or roping manner might cause a movement or slip of the machine while it is lifted up, resulting serious injury or damages on the machine.*

CE-NA000

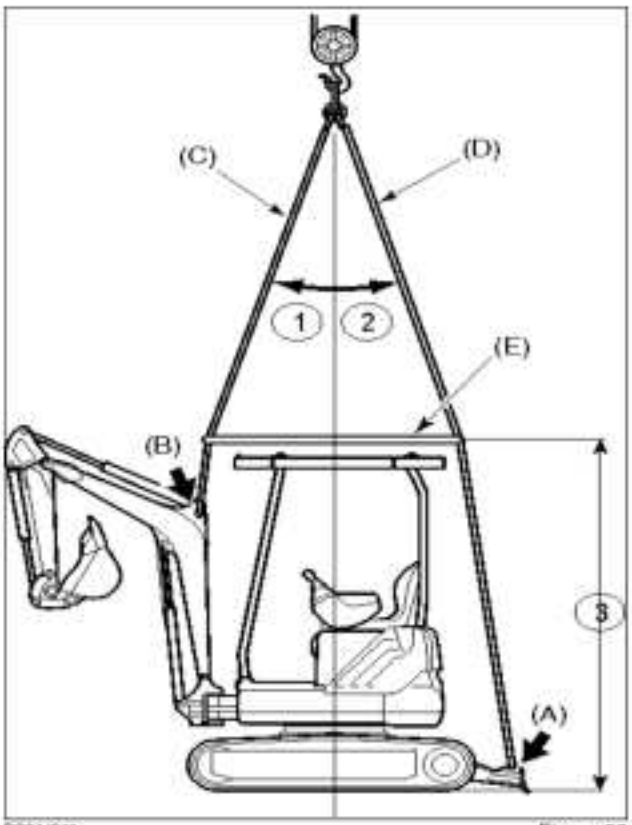


BS04J241 Figure 30

A. CONNECT 2 CABLE SHACKLES HERE. 1 EACH SIDE OF BLADE
B. CONNECT 1 CABLE SHACKLE HERE
C. 3000 MM (118 IN)
D. 4 500 MM (177 IN)
E. SPREADER BARS (3) 1300MM (51.2 IN)
1. 35 DEGREES
2. 35 DEGREES
3. 2700 MM (106.3 IN)
APPROXIMATE WEIGHT: 1 390 KG (3 064 LBS). WITH 50KG (110 LB. BUCKET)

IMPORTANT: *The cables (wire ropes) to be used for lifting the machine should have sufficient capacity for the machine weight.*

MidWestTech | New Holland E15 Compact Excavator Operator's Manual | Publication 8735... Order the manual at mid-west-tech.com >

Lubricating the Turntable (Swing) Bearing

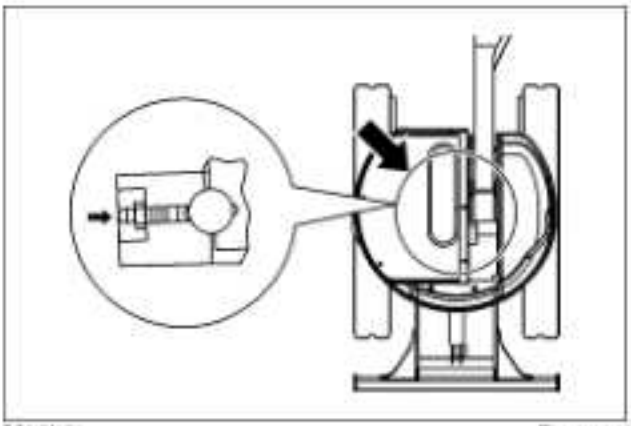

BC02N256 Figure 13

1. Apply grease at the grease fitting until the old grease is replaced.
2. Rotate the upper structure 90°.
3. Repeat steps 1 and 2 until all four positions are lubricated.

IMPORTANT: *If the grease is white because of moisture content or contamination, replace with new grease.*

LUBRICATION - 2000 HOURS

LUBRICATING THE TURNTABLE (SWING) GEAR

Contact your dealer for procedures. Change the grease immediately if the machine has been immersed in water in order to protect the pinion and internal gears from damage.

MidWestTech | New Holland E15 Compact Excavator Operator's Manual | Publication 8735... Order the manual at mid-west-tech.com >