NEW HOLLAND

COMPACT EXCAVATOR

E27

OPERATOR'S MANUAL

87359615 NA

Issued 01-2006

NEW HOLLAND

www.newhollandconstruction.com

MidWestTech | New Holland E27 Compact Excavator Operator's Manual | Publication 8735... Order the manual at mid-west-tech.com >

TABLE OF CONTENTS

CHAPTER 1
GENERAL INFORMATION
To the Owner 1-1
Right, Left, Front, and Rear of the Machine 1-2
Identification Numbers 1-3

CHAPTER 2
SAFETY, AND DECALS
Table of Contents 2-1
Safety Rules 2-3
Personal Safety 2-3
Safety Area 2-3
Utility Safety 2-4
Operator Precautions 2-4
Decals 2-9

CHAPTER 3
INSTRUMENTS AND CONTROLS
Table of Contents 3-1
Cab (If Equipped) 3-3
Steps and Access Handles 3-5
Operator's Compartment Controls and Accessories 3-6
Instrument Panel 3-7
Switches 3-9
Control Levers 3-11
Access Covers and guards 3-14
Operator's Seat Adjustment 3-15
Seat Belt 3-15

CHAPTER 4
OPERATING INSTRUCTIONS
Table of Contents 4-1
Before Operating the Machine 4-3
Operating the Machine 4-3
Run-In Period 4-4
Starting the engine 4-4
Bringing the Machine Up To Operating Temperature 4-6
Engine Operation 4-7
Stopping the Engine 4-7
Operating the Machine in Cold Weather 4-8
Operating the Machine in Hot Weather 4-8
Operation 4-8
Machine Travel 4-9
Transporting the Machine 4-10
Operating the Machine in Water 4-13
Parking the Machine 4-14
Operating the Machine on Sloping Ground 4-14
Moving A Disabled Machine 4-14
Lowering the Attachment in the Event of a Machine Failure 4-14
Operating the Bucket 4-15
Machine Storage 4-16

MidWestTech | New Holland E27 Compact Excavator Operator's Manual | Publication 8735... Order the manual at mid-west-tech.com >

CHAPTER 5
LUBRICATION, FILTERS, AND FLUIDS
Table of Contents 5-1
Servicing Instructions 5-3
Fluids and Lubricants 5-4
Daily Inspections 5-7
Lubrication and Maintenance Chart 5-8
Grease Fittings and Lubrication Points 5-10
Engine Oil 5-14
Cooling System 5-16
Fuel System 5-19
Releasing Pressure in the Hydraulic System 5-23
Hydraulic System 5-24
Air Filter 5-32
Travel Reduction Gears 5-33

CHAPTER 6
MAINTENANCE AND ADJUSTMENTS
Table of Contents 6-1
Tracks 6-3
Checking the Condition of Rubber Tracks 6-6
Track Rollers and idlers 6-8
Replacing a Bucket 6-9
Fan and alternator Drive Belt 6-11
Inspecting and Cleaning the Machine 6-11
Checking for Cylinder Leakage 6-11
Fire Extinguisher (Not Supplied) 6-12
Plastic and Resin Parts 6-12
Welding on the Machine 6-12
Metric Torque Specifications 6-13

CHAPTER 7
ELECTRICAL
Table of Contents 7-1
Alternator 7-3
Starter Motor 7-3
Fuses 7-3
Battery 7-4
Connecting A Booster Battery 7-6
Attachment (Boom) Lamp 7-7

CHAPTER 8
SPECIFICATIONS
Table of Contents 8-1
Engine 8-3
Hydraulic Components 8-3
Speed and Gradeability 8-3
Boom Swing and Dozer Blade 8-3
Machine Overall Dimensions - ROPS Canopy 8-4
Machine Overall Dimensions - Cab Model 8-5
Working Range 8-6

CHAPTER 9
INDEX

MidWestTech | New Holland E27 Compact Excavator Operator's Manual | Publication 8735... Order the manual at mid-west-tech.com >


Chapter 2
SAFETY, AND DECALS
TABLE OF CONTENTS

SAFETY RULES 2-3
PERSONAL SAFETY 2-3
SAFETY AREA 2-3
UTILITY SAFETY 2-4
OPERATOR PRECAUTIONS 2-4
- Personnel 2-4
- General 2-4
- Mounting and Dismounting Precautions 2-5
- Starting and Stopping Precautions 2-5
- Operating Precautions 2-5
- Maintenance Precautions 2-6
- Fuel Handling Precautions 2-7
- Burn Prevention 2-7
- Hazardous Chemical Precautions 2-8
- Transporting Precautions 2-8
- Roll-Over Protective Structure 2-8
- Fire Extinguisher 2-8
- Seat Belt Precautions 2-8
- Specific Precautions to this Machine 2-9

DECALS 2-10

MidWestTech | New Holland E27 Compact Excavator Operator's Manual | Publication 8735... Order the manual at mid-west-tech.com >

OPERATOR'S COMPARTMENT CONTROLS AND ACCESSORIES

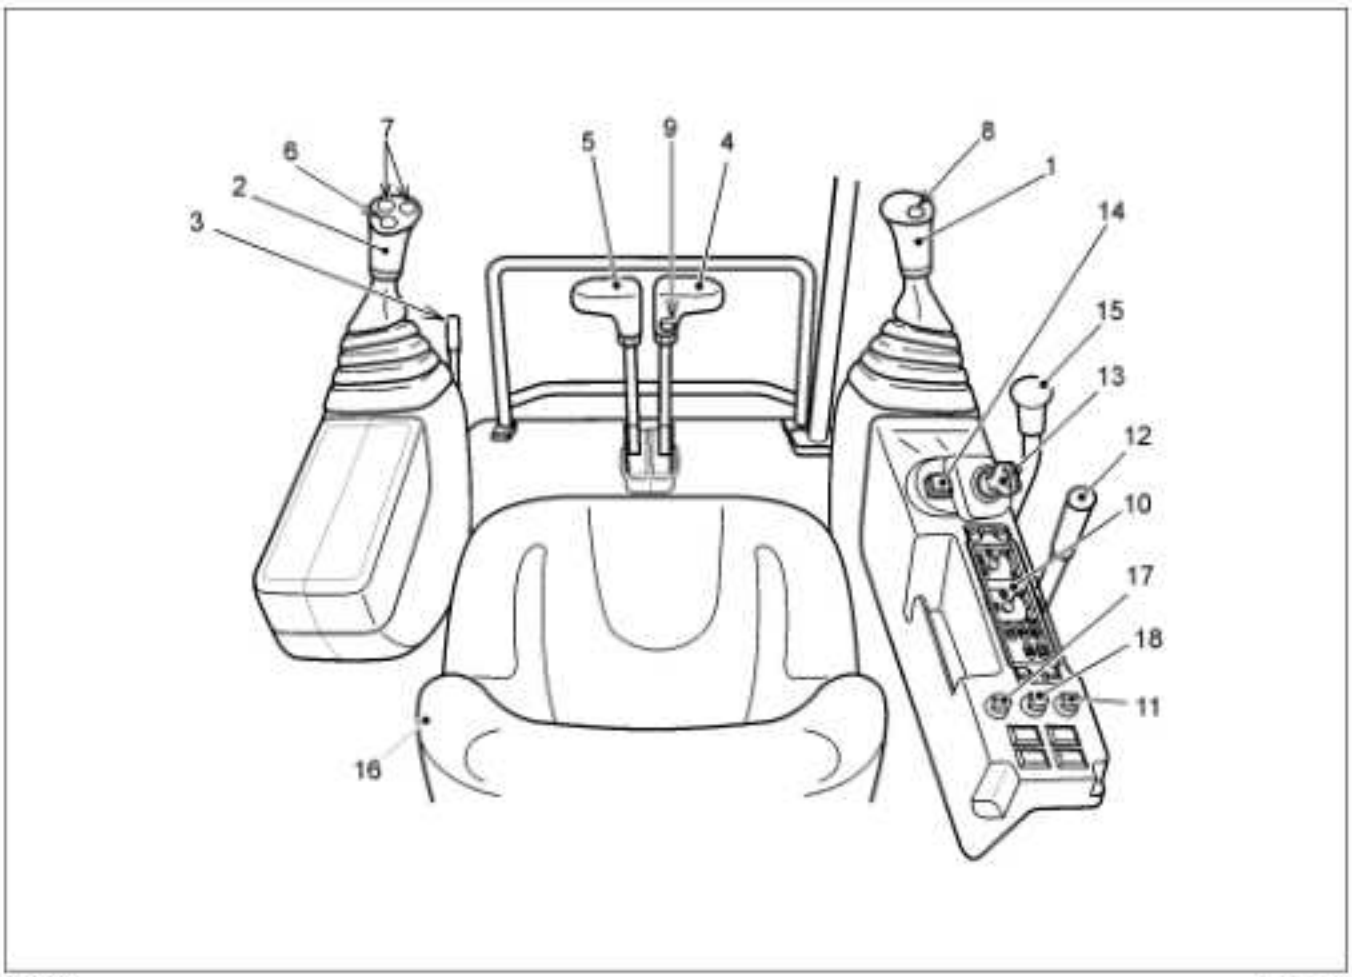

B5048230


Figure 10

1. RIGHT-HAND CONTROL LEVER
2. LEFT-HAND CONTROL LEVER
3. FUNCTION CANCELLATION LEVER
4. RIGHT-HAND TRAVEL LEVER
5. LEFT-HAND TRAVEL LEVER
6. BOOM SWING SWITCH
7. NIBBLER AND BREAKER SWITCH
8. HORN SWITCH
9. TRAVEL SPEED SELECT SWITCH
10. GUAGE CLUSTER
11. WORKING LIGHT SWITCH
12. THROTTLE LEVER
13. KEY SWITCH
14. DECELERATION SWITCH
15. DOZER BLADE LEVER
16. OERATOR SEAT
17. WIPER SWITCH (CAB ONLY)
18. HEATER SWITCH (CAB ONLY)

WARNING: *Before starting the engine, make sure that you are fully aware of the location of and the function of each control. Incorrect operation of the controls can cause serious injuries.*

CE-NA030

MidWestTech | New Holland E27 Compact Excavator Operator's Manual | Publication 8735... Order the manual at mid-west-tech.com >

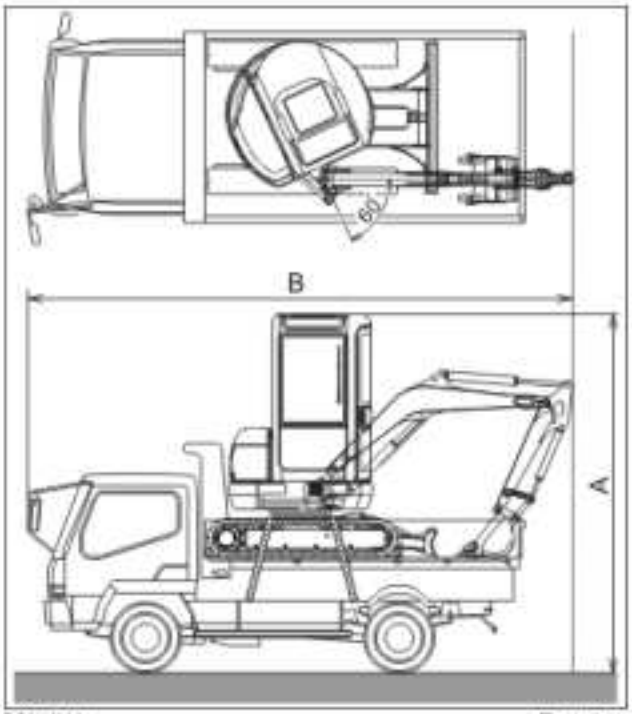

BC02N398 Figure 28

A. OVERALL HEIGHT B. OVERALL LENGTH

14. Measure the distance between the ground and the highest point of the machine. You must know the overall height. See Machine overall dimensions in the Chapter 8 (Specifications).

LIFTING PROCEDURES FOR THE MACHINE

WARNING: *Lifting the machine must be done very slowly.*


CE-NA000

WARNING: *Make sure that there is no one under or near the machine while it is being lifted.*

CE-NA000

WARNING: *Improper lifting method and/or roping manner might cause a movement or slip of the machine while it is lifted up, resulting serious injury or damages on the machine.*

CE-NA000

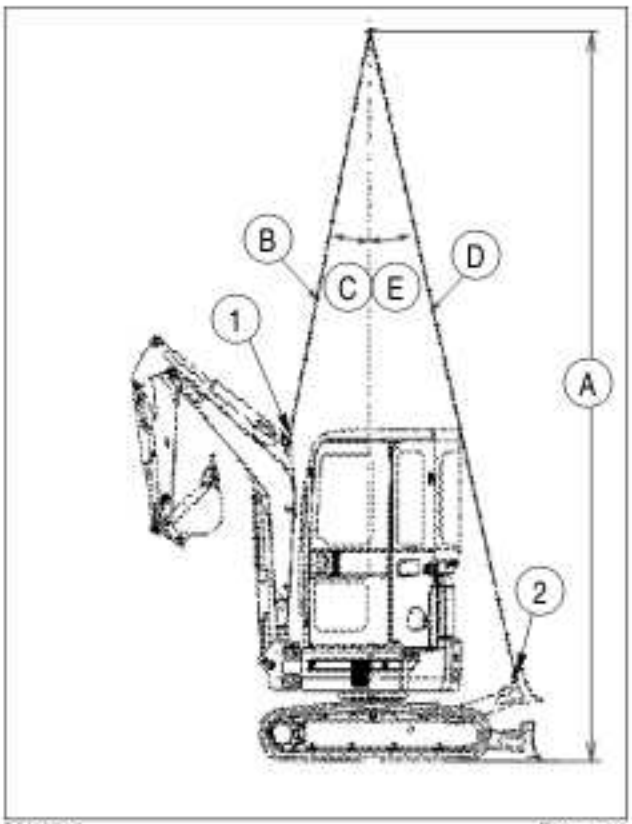


BS04H237 Figure 29

A. 5 000 MM (197 IN)
B. 2 800 MM (110 IN)
C. 15 DEGREES
D. 4 600 MM (181 IN)
E. 16 DEGREES
1. CONNECT 1 CABLE SHACKLE HERE
2. CONNECT 2 CABLE SHACKLES HERE. 1 EACH SIDE OF BLADE
   APPROXIMATE WEIGHT WITH RUBBER SHOE: 2 660 KG (5 870 LBS).
   APPROXIMATE WEIGHT WITH IRON SHOE: 2 790 KG (6 150 LBS).

IMPORTANT: *The cables (wire ropes) to be used for lifting the machine should have sufficient capacity for the machine weight.*

MidWestTech | New Holland E27 Compact Excavator Operator's Manual | Publication 8735... Order the manual at mid-west-tech.com >

Lubricating the Turntable (Swing) Bearing

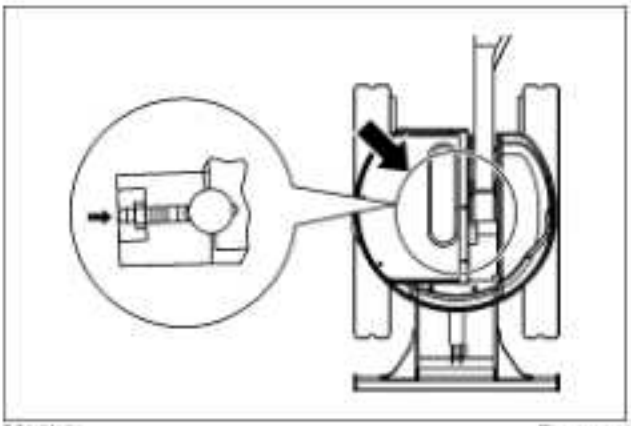

BC02N256 Figure 13

1. Apply grease at the grease fitting until the old grease is replaced.
2. Rotate the upper structure 90°. (4 times).
3. Repeat steps 1 and 2 until all four positions are lubricated.

IMPORTANT: *If the grease is white because of moisture content or contamination, replace with new grease.*

LUBRICATION - 2000 HOURS

LUBRICATING THE TURNTABLE (SWING) GEAR

Contact your dealer for procedures. Change the grease immediately if the machine has been immersed in water in order to protect the pinion and internal gears from damage.

MidWestTech | New Holland E27 Compact Excavator Operator's Manual | Publication 8735... Order the manual at mid-west-tech.com >