NEW HOLLAND

COMPACT EXCAVATOR

E50

OPERATOR'S MANUAL

87359641 NA

Issued 01-2006

NEW HOLLAND

www.newhollandconstruction.com

MidWestTech | New Holland E50 Compact Excavator Operator's Manual | Publication 8735... Order the manual at mid-west-tech.com >

TABLE OF CONTENTS

CHAPTER 1
GENERAL INFORMATION
To the Owner 1-1
Right, Left, Front, and Rear of the Machine 1-2
Identification Numbers 1-3

CHAPTER 2
SAFETY, DECALS, AND HAND SIGNALS
Table of Contents 2-1
Safety Rules 2-3
Personal Safety 2-3
Safety Area 2-3
Utility Safety 2-4
Operator Precautions 2-4
Decals 2-9

CHAPTER 3
INSTRUMENTS AND CONTROLS
Table of Contents 3-1
Cab (If Equipped) 3-3
Steps and Access Handles 3-5
Operator's Compartment Controls and Accessories 3-6
Instrument Panel 3-7
Switches 3-10
Control Levers 3-12
Access Covers and guards 3-15
Operator's Seat Adjustment 3-16
Seat Belt 3-16

CHAPTER 4
OPERATING INSTRUCTIONS
Table of Contents 4-1
Before Operating the Machine 4-3
Operating the Machine 4-3
Run-In Period 4-4
Starting the engine 4-4
Bringing the Machine Up To Operating Temperature 4-6
Engine Operation 4-7
Stopping the Engine 4-7
Operating the Machine in Cold Weather 4-8
Operating the Machine in Hot Weather 4-8
Operation 4-8
Machine Travel 4-9
Transporting the Machine 4-10
Operating the Machine in Water 4-13
Parking the Machine 4-14
Operating the Machine on Sloping Ground 4-14
Moving A Disabled Machine 4-14
Lowering the Attachment in the Event of a Machine Failure 4-14
Operating the Bucket 4-15
Machine Storage 4-16

MidWestTech | New Holland E50 Compact Excavator Operator's Manual | Publication 8735... Order the manual at mid-west-tech.com >

CHAPTER 5
LUBRICATION, FILTERS, AND FLUIDS
Table of Contents 5-1
Servicing Instructions 5-3
Fluids and Lubricants 5-4
Daily Inspections 5-7
Lubrication and Maintenance Chart 5-8
Grease Fittings and Lubrication Points 5-10
Engine Oil 5-14
Cooling System 5-16
Fuel System 5-19
Draining and Cleaning the Water Separator 5-20
Releasing Pressure in the Hydraulic System 5-22
Hydraulic System 5-23
Air Filter 5-31
Travel Reduction Gears 5-32

CHAPTER 6
MAINTENANCE AND ADJUSTMENTS
Table of Contents 6-1
Tracks 6-3
Checking the Condition of Rubber Tracks 6-6
Track Rollers and idlers 6-8
Replacing a Bucket 6-9
Fan and alternator Drive Belt 6-11
Inspecting and Cleaning the Machine 6-11
Checking for Cylinder Leakage 6-12
Fire Extinguisher (Not Supplied) 6-12
Plastic and Resin Parts 6-13
Welding on the Machine 6-13
Metric Torque Specifications 6-14

CHAPTER 7
ELECTRICAL
Table of Contents 7-1
Alternator 7-3
Starter Motor 7-3
Fuses 7-3
Battery 7-4
Connecting A Booster Battery 7-6
Attachment LampS 7-7

CHAPTER 8
SPECIFICATIONS
Table of Contents 8-1
Engine 8-3
Hydraulic Components 8-3
Speed and Gradeability 8-3
Boom Swing and Dozer Blade 8-3
Machine Overall Dimensions - ROPS Canopy 8-4
Machine Overall Dimensions - Cab Model 8-5
Working range - canopy model 8-6
WORKING RANGE - cab model 8-7

CHAPTER 9
INDEX

MidWestTech | New Holland E50 Compact Excavator Operator's Manual | Publication 8735... Order the manual at mid-west-tech.com >

Chapter 2
SAFETY, AND DECALS
TABLE OF CONTENTS


SAFETY RULES 2-3
PERSONAL SAFETY 2-3
SAFETY AREA 2-3
UTILITY SAFETY 2-4
OPERATOR PRECAUTIONS 2-4
- Personnel 2-4
- General 2-4
- Mounting and Dismounting Precautions 2-5
- Starting and Stopping Precautions 2-5
- Operating Precautions 2-5
- Maintenance Precautions 2-6
- Fuel Handling Precautions 2-7
- Burn Prevention 2-7
- Hazardous Chemical Precautions 2-8
- Transporting Precautions 2-8
- Roll-Over Protective Structure 2-8
- Fire Extinguisher 2-8
- Seat Belt Precautions 2-8
- Specific Precautions to this Machine 2-9

DECALS 2-10

MidWestTech | New Holland E50 Compact Excavator Operator's Manual | Publication 8735... Order the manual at mid-west-tech.com >

2. LEFT-HAND CONTROL LEVER (SAE Pattern)

3. RIGHT-HAND CONTROL LEVER (SAE Pattern)

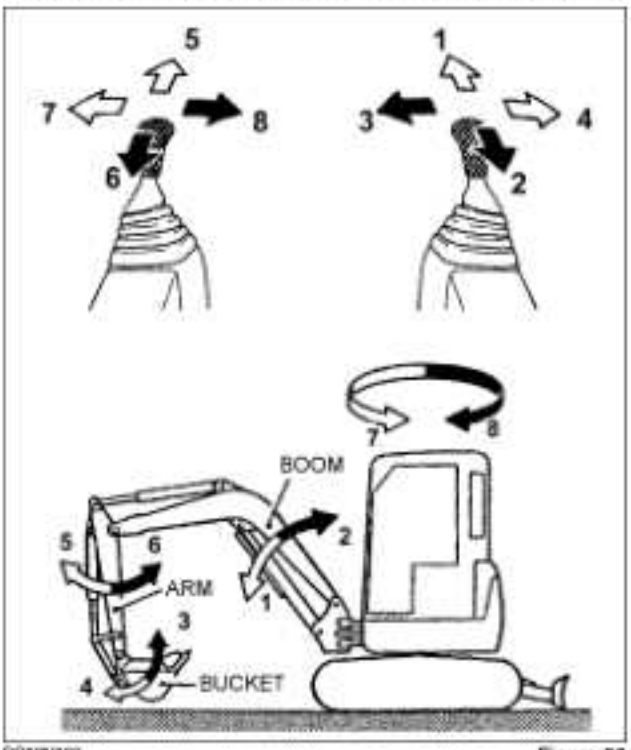

BC02N066 Figure 36

1. BOOM DOWN (RIGHT-HAND CONTROL LEVER)
2. BOOM UP (RIGHT-HAND CONTROL LEVER)
3. BUCKET IN (RIGHT-HAND CONTROL LEVER)
4. BUCKET OUT (RIGHT-HAND CONTROL LEVER)
5. ARM OUT (LEFT-HAND CONTROL LEVER)
6. ARM IN (LEFT-HAND CONTROL LEVER)
7. ROTATION LEFT (LEFT-HAND CONTROL LEVER)
8. ROTATION RIGHT (LEFT-HAND CONTROL LEVER)

These two levers activate each operation shown in the illustration.

All functions can be activated simultaneously.


The operator's control levers return to the neutral position when released, and the operation of attachment is stopped.

WARNING: *Confirm for safety around the working area. Also ensure that each lever operation is in accordance with the operating pattern indicated on the labels.*

If labels do not match the operator's control pattern, replace them immediately to avoid accidents and/or injury.

CE-NA000

Boom Swing Function Switch

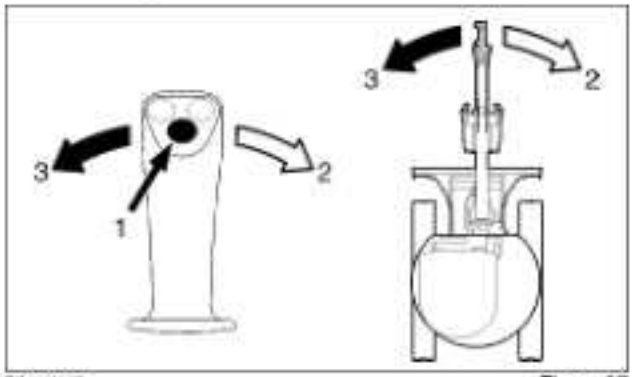

BC02N067 Figure 37

1. BOOM SWING/REMOTE CONTROL SWITCH
2. RIGHT-HAND SWING
3. LEFT-HAND SWING

Operate the control lever right and left keeping the switch on the grip of the left-hand control lever pressed, and the boom swings right and left.


1. Switch . . . . . Pressed (ON)
2. Operate lever right . . . . . Right-hand boom swing
3. Operate lever left . . . . . Left-hand boom swing

IMPORTANT: *The swing operation does not stop even if the switch is turned off during the swing operation. To switch from boom swing to upperstructure swing the left control lever must return to the neutral position.*

WARNING: *Because the boom swing operating range is wide, carefully operate the attachment paying attention to the surrounding conditions.*

CE-NA000

MidWestTech | New Holland E50 Compact Excavator Operator's Manual | Publication 8735... Order the manual at mid-west-tech.com >

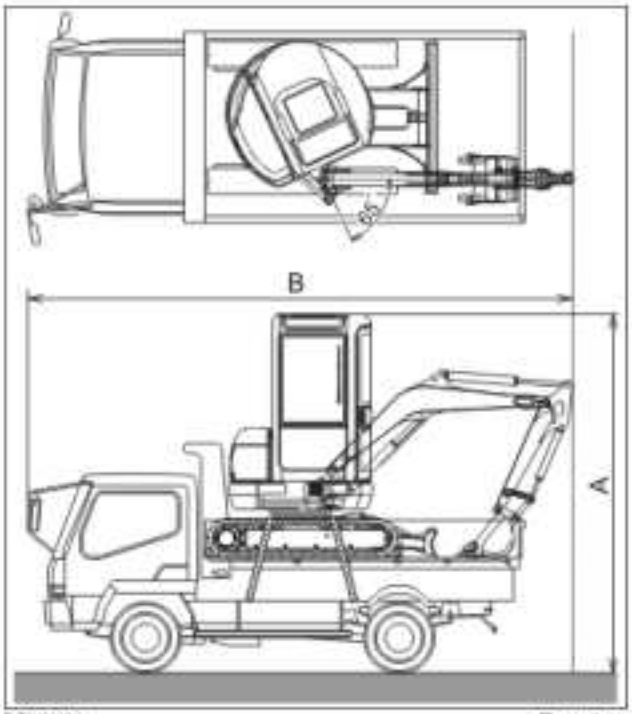

BS04H028

Figure 28
Figure 29

A. OVERALL HEIGHT B. OVERALL LENGTH

14. Measure the distance between the ground and the highest point of the machine. You must know the overall height. See Machine overall dimensions in the Chapter 8 (Specifications).

LIFTING PROCEDURES FOR THE MACHINE

WARNING: *Lifting the machine must be done very slowly.*


CE-NA000

WARNING: *Make sure that there is no one under or near the machine while it is being lifted.*

CE-NA000

WARNING: *Improper lifting method and/or roping manner might cause a movement or slip of the machine while it is lifted up, resulting serious injury or damages on the machine.*

CE-NA000

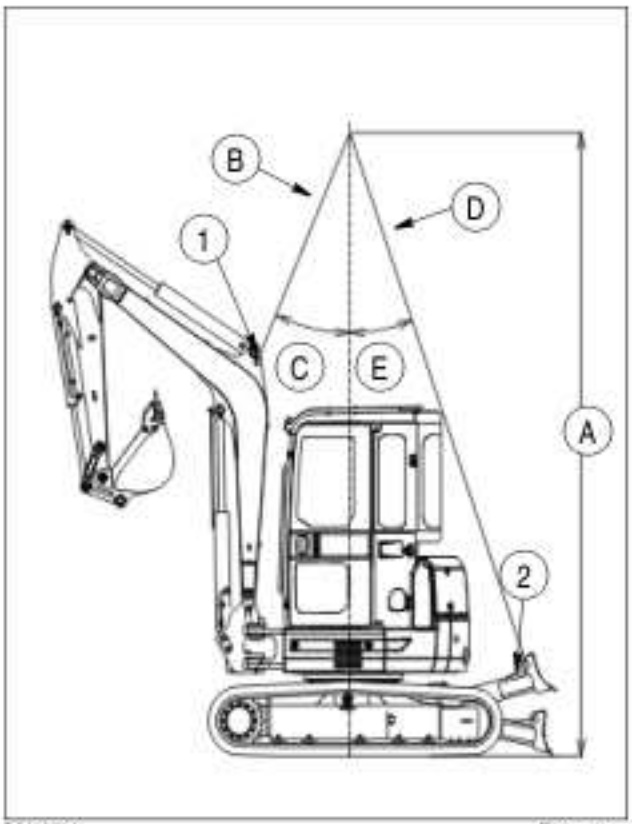


BS04H283

Figure 30

A. 4 800 MM (190 IN)
B. 2 000 MM (78.7 IN)
C. 24 DEGREES
D. 4 400 MM (173.2 IN)
E. 20 DEGREES
1. CONNECT 1 CABLE SHACKLE HERE
2. CONNECT 2 CABLE SHACKLES HERE. 1 EACH SIDE OF BLADE
   APPROXIMATE WEIGHT WITH RUBBER SHOE: 4 800 KG (10 580 LBS).
   APPROXIMATE WEIGHT WITH IRON SHOE: 4 900 KG (10 800 LBS)

IMPORTANT: *The cables (wire ropes) to be used for lifting the machine should have sufficient capacity for the machine weight.*


MidWestTech | New Holland E50 Compact Excavator Operator's Manual | Publication 8735... Order the manual at mid-west-tech.com >

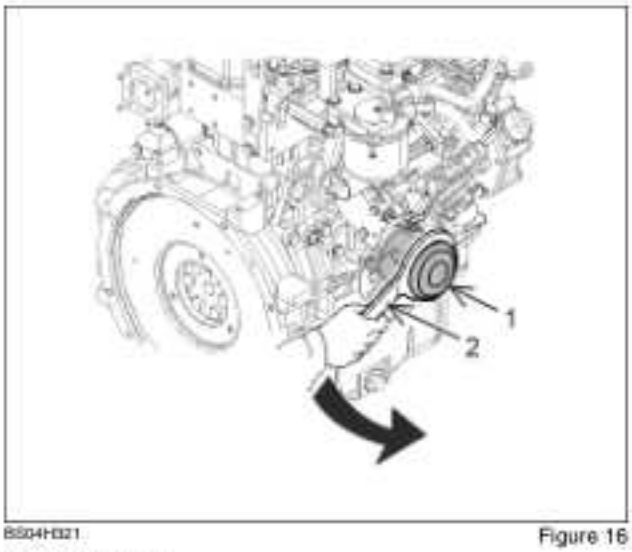

BS04H021 Figure 16

1. OIL FILTER
2. FILTER WRENCH

7. Use the filter wrench (2) to rotate the oil filter (1) counterclockwise to loosen the oil filter. Remove the oil filter (1).

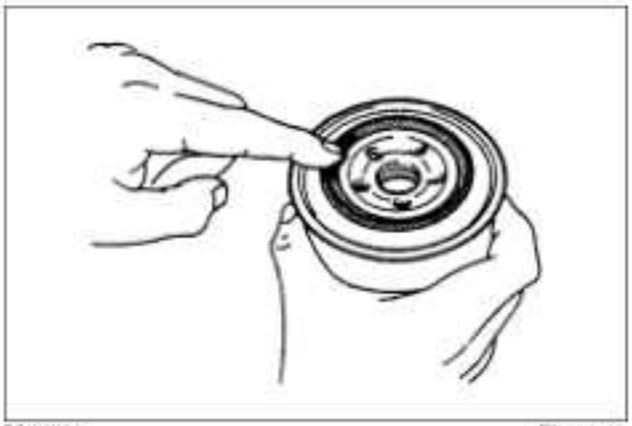

BC02N232 Figure 17

8. Coat the seal of the new filter with a light film of engine oil.
9. Install the new filter. Turn the filter until the seal comes into contact with the filter head by hand. Then tighten an additional 1/2 to 2/3 turn.

   IMPORTANT: *Do not use a filter wrench to tighten the filter. Excessive tightening can damage the filter and the seals.*
10. Fill the engine with new engine oil. Install the filler cap.
11. Run the engine for a few minutes and check that there are no leaks. Stop the engine.
12. Install the access cover below the engine oil drain plug.
13. Check the oil level and add additional oil if necessary.

    IMPORTANT: *Always wait approximately ten minutes to allow the oil to return to the reservoir before checking the oil level.*

MidWestTech | New Holland E50 Compact Excavator Operator's Manual | Publication 8735... Order the manual at mid-west-tech.com >