CASE
PROFESSIONAL PARTNER

OPERATOR'S MANUAL

SKID STEER COMPACT TRACK LOADER

450
450CT
465

87364592 NA
Replaces 6-82092 NA

Revised 01-2007
Issued 08-2005

MidWestTech | Case 450, 450CT, 465 Skid Steer Compact Track Loader Operator's Manual... Order the manual at mid-west-tech.com >

TABLE OF CONTENTS

TO THE OWNER 1
RIGHT, LEFT, FRONT AND REAR OF MACHINE 3
PRODUCT IDENTIFICATION AND SERIAL NUMBERS 4
MACHINE COMPONENTS 6
SAFETY RULES 9
UTILITY SAFETY 11
PERSONNEL 12
GENERAL 12
PROPER ENTRY AND EXIT 13
STARTING AND STOPPING PRECAUTIONS 14
OPERATING PRECAUTIONS 15
MAINTENANCE PRECAUTIONS 17
FUEL HANDLING PRECAUTIONS 18
BURN PREVENTION 19
HAZARDOUS CHEMICAL PRECAUTIONS 19
TRANSPORTING PRECAUTIONS 19
ROLL-OVER PROTECTIVE STRUCTURE 20
FIRE EXTINGUISHER 20
SEAT BELT PRECAUTIONS 21
SPECIFIC PRECAUTIONS TO THIS MACHINE 22
450 LOADER LIFT ARM SUPPORT STRUT 24
EMERGENCY EXIT 26
SAFETY DECALS 29

INSTRUMENTS AND CONTROLS 41
INSTRUMENT PANEL 41
BATTERY MASTER DISCONNECT SWITCH 49
STEERING AND TRAVEL WITH H PATTERN CONTROLS 50
STEERING AND TRAVEL WITH H PATTERN CONTROLS 51
LIFT ARM AND BUCKET CONTROL WITH ISO PATTERN PILOT CONTROLS 58
THROTTLE CONTROLS 61
LIFT ARM HYDRAULIC BYPASS CONTROL 62
AUXILIARY HYDRAULIC ATTACHMENT CONTROL PEDAL 64
AUXILIARY ELECTRO-HYDRAULIC CONTROLS (If Equipped) 67
OPERATOR'S SEAT 69
SLIDING SIDE WINDOWS (IF EQUIPPED) 71
WINDSHIELD WASHER CONTROLS 72

OPERATING INSTRUCTIONS 75
DAILY INSPECTION 75
STARTING THE ENGINE 78
PARKING THE MACHINE AND STOPPING THE ENGINE 79
RUN-IN PERIOD 79
OPERATING IN COLD WEATHER 80

TRIM THIS EDGE

TRIM THIS EDGE

RIGHT PAGE (Chapter First Page)

Bur 87364592na

MidWestTech | Case 450, 450CT, 465 Skid Steer Compact Track Loader Operator's Manual... Order the manual at mid-west-tech.com >

OPERATING IN HOT WEATHER 81
BOOSTER BATTERY CONNECTION 82
MACHINE OPERATION 84
JOB SITE OPERATION 84
OPERATING THE LOADER 85
MANUAL ATTACHMENT COUPLER 87
HYDRAULIC ATTACHMENT COUPLER (IF EQUIPPED) 90
HIGH FLOW HYDRAULIC SYSTEM 94
TRANSPORTING THE MACHINE 98
PRIOR TO LOADING 98
Craning the Machine 99

WHEEL AND TIRES 101

LUBRICATION / MAINTENANCE 105
465 LOADER LIFT ARM LOCK PIN 106
450 - 450CT LOADER LIFT ARM SUPPORT STRUT 108
TILTING THE OPERATORS COMPARTMENT FORWARD 110
LOWERING THE OPERATORS COMPARTMENT 112
ENGINE HOURMETER 113
MAINTENANCE LUBRICATION SCHEDULE 113
SYSTEMGARD LUBRICATION ANALYSIS PROGRAM 114
ENVIRONMENT 114
FLUIDS AND LUBRICANTS 115
ACCESS DOORS 116
LUBRICATION/MAINTENANCE CHART 118
EVERY 10 HOURS OR DAILY 119
INITIAL 100 HOURS 131
EVERY 250 HOURS 132
EVERY 500 HOURS 138
EVERY 1000 HOURS 145
EVERY 2000 HOURS 149

ADJUSTMENT/MAINTENANCE 153
STEEL TRACK ADJUSTMENTS 153
ADJUSTING THE HAND THROTTLE 155
ADJUSTING THE DRIVE CHAIN TENSION 156
MAINTENANCE OF THE SEAT BELT 158
ROLL-OVER PROTECTION STRUCTURE 159
FIRE EXTINGUISHER 161
PLASTIC AND RESIN PARTS 161
REMOVAL OF SLIDING SIDE WINDOWS (IF EQUIPPED) 162

ELECTRICAL SYSTEM 163
ALTERNATOR CHARGING SYSTEM 163
WORK LAMPS 164
TAIL LAMPS 165

TRIM THIS EDGE

LEFT PAGE

Bur 87364592na

TRIM THIS EDGE

MidWestTech | Case 450, 450CT, 465 Skid Steer Compact Track Loader Operator's Manual... Order the manual at mid-west-tech.com >

MACHINE STORAGE 169
STORAGE PREPARATION 169
STORAGE REMOVAL 170

SPECIFICATIONS 171
450 / 450CT / 465 ENGINE 171
ELECTRICAL SYSTEM 172
COOLING SYSTEM 173
HYDRAULIC SYSTEM 173
POWER TRAIN 173
BRAKES 173
OPERATING WEIGHTS 174
SHIPING WEIGHTS (APPROXIMATE) 174
ADDITIONAL WEIGHTS FOR OPTIONAL EQUIPMENT 174
BUCKET CAPACITIES 175
MATERIAL WEIGHT 176
GENERAL TORQUE SPECIFICATIONS 177
450 OPERATING DATA AND DIMENSIONS 180
450CT OPERATING DATA AND DIMENSIONS 184
465 OPERATING DATA AND DIMENSIONS 188
PALLET FORK WITH BRICK GUARD 192

AFTER DELIVERY CHECK 197


TRIM THIS EDGE

TRIM THIS EDGE

RIGHT PAGE

Bur 87364592na

MidWestTech | Case 450, 450CT, 465 Skid Steer Compact Track Loader Operator's Manual... Order the manual at mid-west-tech.com >

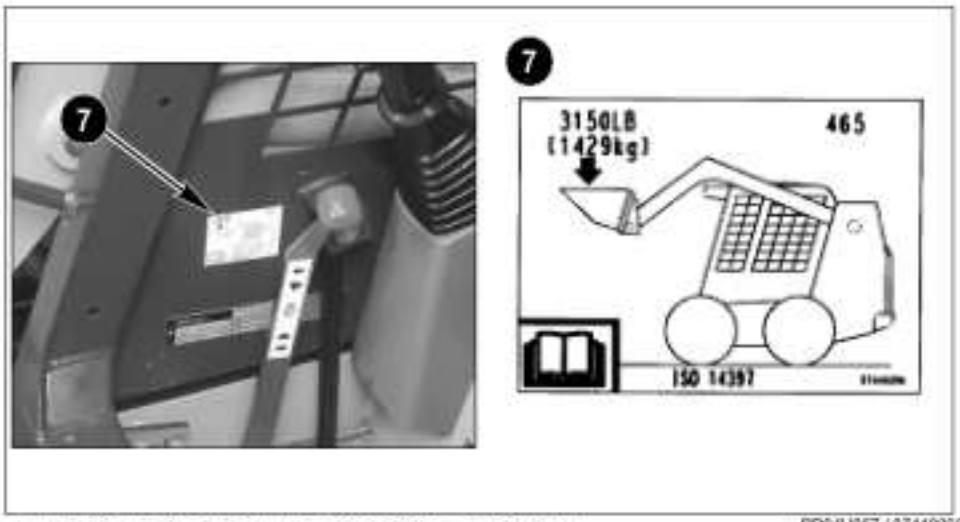

BD04H057 / 87440296

7. INFORMATION DECAL: LIFT CAPACITY - 465 SHOWN

450 capacity.....1111 kg (2450 lbs)
450CT capacity.....1111 kg (2450 lbs)
465 capacity.....1360kg (3000 lbs)

TRIM THIS EDGE



BX07E009

8. WARNING: USE THE SUPPORT STRUT

TRIM THIS EDGE


LEFT PAGE

Bur 87364592na

MidWestTech | Case 450, 450CT, 465 Skid Steer Compact Track Loader Operator's Manual... Order the manual at mid-west-tech.com >

AUXILIARY HYDRAULIC ATTACHMENT CONTROL PEDAL

TRIM THIS EDGE

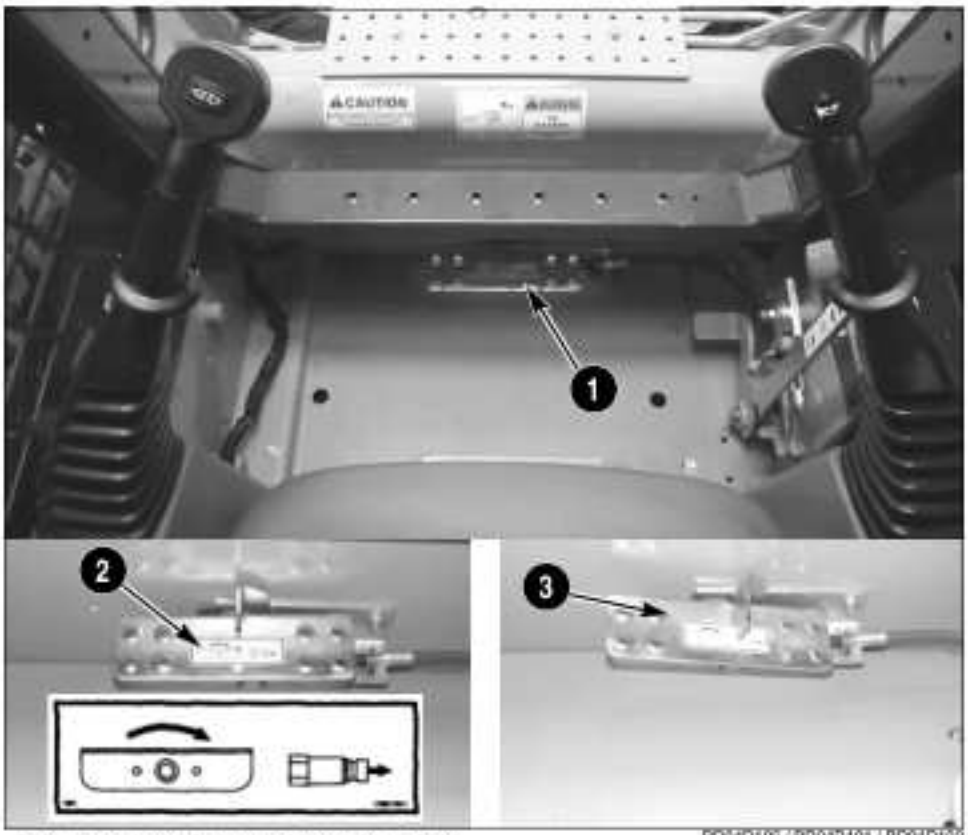

BD04D100 / BD04D101 / BD04D102

1. AUXILIARY HYDRAULIC CONTROL PEDAL
2. AUXILIARY HYDRAULIC FLOW CONTROL PEDAL DECAL
3. PEDAL IN **ON** POSITION

WARNING: *Always relieve hydraulic pressure before attaching or removing auxiliary hydraulic attachments.*

To relieve pressure:


1. Turn off engine.
2. While sitting in the seat, with the seat bar down, turn key switch to ON position.
3. Push the brake release button.
4. Actuate auxiliary controls switch in both directions several times.
5. Turn key switch to OFF.

TRIM THIS EDGE

LEFT PAGE

Bur 87364592na

MidWestTech | Case 450, 450CT, 465 Skid Steer Compact Track Loader Operator's Manual... Order the manual at mid-west-tech.com >

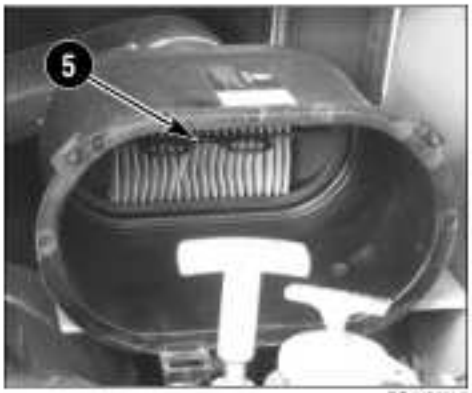

4. SECONDARY FILTER

5. Remove the secondary filter. There are finger holds on the filter.




5. AIR FILTER HOUSING

6. Clean the filter housing before installing the new filters.

7. Install a new secondary filter.

8. Install a new primary filter.

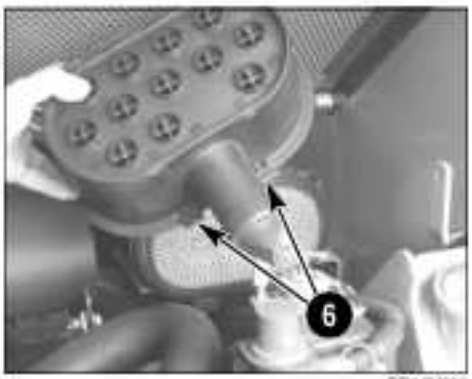

6. HINGE TABS

9. Install the filter cover and secure the latch. Be sure to get the hinge tabs into the slots on the filter housing.

IMPORTANT: *When installing the filters make sure the seals are making proper contact.*

TRIM THIS EDGE

TRIM THIS EDGE

RIGHT PAGE

Bur 87364592na

MidWestTech | Case 450, 450CT, 465 Skid Steer Compact Track Loader Operator's Manual... Order the manual at mid-west-tech.com >