
NEW HOLLAND

TT60A
TT75A

OPERATOR'S MANUAL

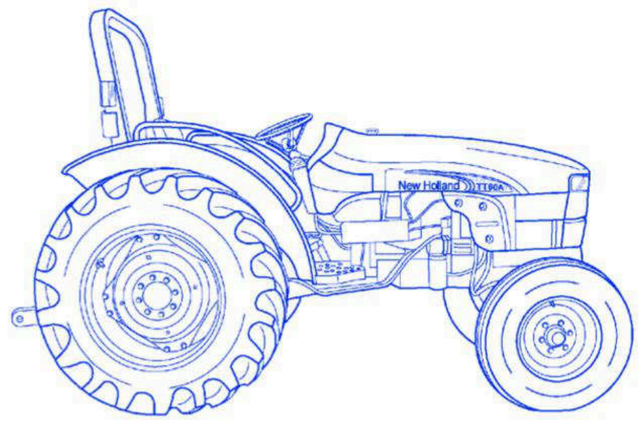

87473188 2/08
Replaces 87621772

NEW HOLLAND AGRICULTURE

MidWestTech | New Holland TT60A, TT75A Tractor Operator's Manual | Publication 87473188

Order the manual at mid-west-tech.com >

CONTENTS

SAFETY 0-7

GENERAL INFORMATION 1-1

OPERATION 2-1

LUBRICATION 3-1

MAINTENANCE 4-1

TROUBLESHOOTING 5-1

OPTIONAL EQUIPMENT 6-1

SPECIFICATIONS 7-1

INDEX 7-23


PREDELIVERY SERVICE 7-25

MidWestTech | New Holland TT60A, TT75A Tractor Operator's Manual | Publication 87473... Order the manual at mid-west-tech.com >

REMOTE CONTROL VALVE(S)

Your tractor can be equipped with one or two rear remote valves. The control lever(s) are located to the right of the operator's seat.

Rear remote hydraulic control valves are optional equipment on 2007 production of TT60A and TT75A tractors. On 2008 production #1 rear remote valve, 1, is standard equipment and #2 valve, 2, is an optional dealer installed accessory.

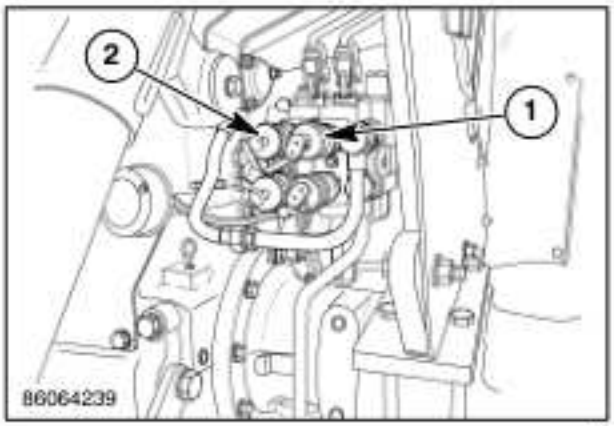


25

To operate valve, move control lever(s), 3, rearward to extend implement cylinder and forward to retract implement cylinder.

If valve is a float/detent style valve, moving control lever to the full forward position will place the valve into the detent "Float" position.

Release the control lever to stop the cylinder in any position. The lever will automatically return to neutral when the lever is released, unless the valve is in the detented position.

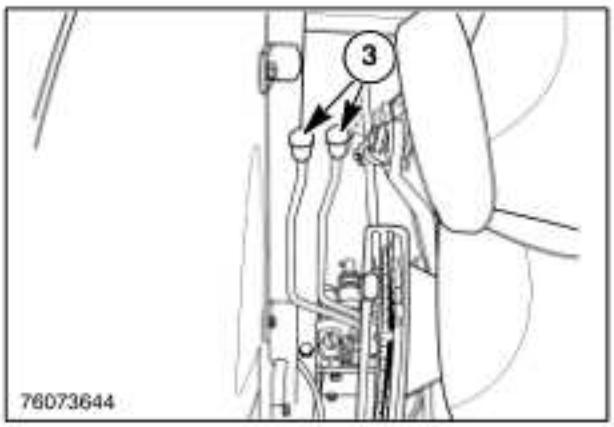

26

At any position (#1 or #2) the valves can be configured as follows:

- Self-centering (single or double acting convertible)
- Self-centering, with float and detent (double acting only)

The rear remote valves are equipped with 1/2 inch quick couplers.

NOTE: *The lever automatically returns to neutral, when the cylinder reached the limit of its stroke in either direction of travel, on detented valves only.*

IMPORTANT: *When not in use, coupling sockets should be protected by means of the plastic caps provided.*

Push to connect and pull to disconnect from couplers after:

- Stopping the engine
- Lowering any implements connected to lift.
- Thoroughly cleaning half couplings.

MidWestTech | New Holland TT60A, TT75A Tractor Operator's Manual | Publication 87473... Order the manual at mid-west-tech.com >

SECTION 4

LUBRICATION AND MAINTENANCE

GENERAL INFORMATION

INTRODUCTION

This section gives full details of the service procedures necessary to maintain your tractor at peak efficiency. The lubrication and maintenance chart on page 4-6 provides a ready reference to these requirements. Each operation being numbered for easy reference. If in doubt about any aspect of lubrication and maintenance, consult your authorized New Holland Dealer.

SAFETY PRECAUTIONS

Read and observe all safety precautions listed in "Servicing the Tractor" in the Introduction section at the front of this Manual.

NOTE: *Dispose of used filters and fluids properly.*

⚠ CAUTION ⚠

Do not check, lubricate, service or make adjustments to the tractor with the engine running.

DURING FIRST 50 HOURS OPERATION

In addition to the regular maintenance operations listed, check the following items every 10 hours or daily during the first 50 hours of operation:

- Check engine oil.
- Check Transmission/Hydraulic, Final Drive oil level.
- Wheel nuts for tightness.

IMPORTANT: *Park the tractor on level ground and where applicable, extend all cylinders on implements or attachments before checking oil levels.*

THE FIRST 50 HOURS SERVICE

At the first 50-hours service, ensure that the following additional service operations are carried out. The items are listed in the 'First 50-Hour service' check list.

- Check and adjust fan/alternator belt tension.
- Change engine oil and filter.
- Change fuel filter.
- Change hydraulic oil filter.
- Check and tighten all cooling system hose connections.
- Check and tighten all air intake connections.
- Check and torque front end weight clamp bolts (where fitted)
- Check torque of all wheel nuts
- Cleaning of air intake cleaner/filter

IMPORTANT: *Items listed in first 50-hours service are important. If not performed, early component failure and reduced tractor life may result.*

PREVENTING SYSTEM CONTAMINATION

To prevent contamination when changing oils, filters, etc., always clean the area around the filler caps, level and drain plugs, dipsticks and filters prior to removal. To prevent dirt entry during greasing, wipe dirt from the grease fittings before greasing. Wipe excess grease from the fitting after greasing.

FLEXIBILITY OF MAINTENANCE INTERVALS

The intervals listed in the lubrication and maintenance chart are guidelines to be used when operating in normal working conditions.

Adjust the service intervals for environment and extreme working conditions. Intervals should be reduced under adverse (Wet, muddy, sandy, or extremely dusty) working conditions.

LUBRICATION AND MAINTENANCE CHART

The chart on page 4-5 lists the intervals when the routine checks, lubrication, service and/or adjustments should be performed. Use the chart as a quick reference guide when servicing the tractor.

MidWestTech | New Holland TT60A, TT75A Tractor Operator's Manual | Publication 87473... Order the manual at mid-west-tech.com >

			TT75A (2WD)	TT75A (FWD)	TT60A (2WD)	TT60A (FWD)
E	Height to top of ROPS	mm	2445	2445	2388	2419
		in	96.25	96.25	94.0	95.25
F	Ground clearance under rear axle	mm	457	457	400	432
		in	18.0	18.0	15.75	17.0
G	Wheel base	mm	2150	2210	2075	2035
		in	84.6	87.0	81.7	80.1
H	Overall length	mm	3483	3483	3466	3466
		in	137	137	136.5	136.5
	Minimum radius of turning circle	mm	3643	5100	3530	5100
	(Std. front track without brakes)	in	143	201	139	201

***NOTE:** If your tractor has tires of a different size, then the above dimensions will vary due to the difference in the rolling radius and section width of the tires fitted.*

TRACTOR WEIGHT

		TT75A (2WD)	TT75A (FWD)	TT60A (2WD)	TT60A (FWD)
On front axle	kg	950	1164	850	1059
	lbs.	2095	2566	1874	2335
On rear axle	kg	1420	1418	1300	1361
	lbs.	3130	3126	2866	3000
Total weight	kg	2370	2582	2150	2420
	lbs.	5225	5692	4740	5335

***NOTE:** The above weights are based on standard built units, without ballast or optional equipments and should be used as a guide only.*

MidWestTech | New Holland TT60A, TT75A Tractor Operator's Manual | Publication 87473... Order the manual at mid-west-tech.com >

SAFETY DECALS

1



WARNING: Pull Only From Drawbar
PART NO: 86532904
LOCATION: PTO Shield

2




WARNING: To Jump Start
PART NO: 87541598
LOCATION: Top Side of Battery Holder

3



DANGER: Explosive can cause blindness
PART NO: 87531227
LOCATION: Top Side of Battery Holder

4

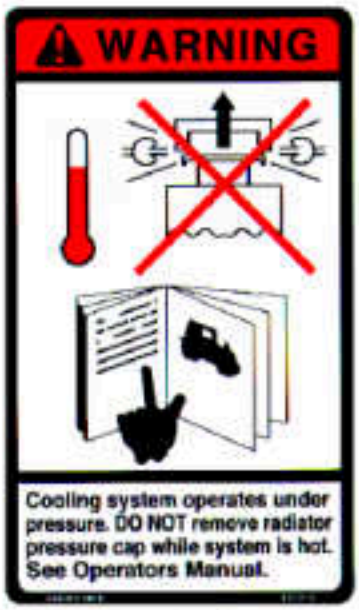

WARNING: Cooling System Under Pressure
PART NO: 82029421
LOCATION: Air Cleaner

5



DANGER: Start Engine only from Operator's Seat
PART NO: 87541599
LOCATION: On Starter motor

MidWestTech | New Holland TT60A, TT75A Tractor Operator's Manual | Publication 87473... Order the manual at mid-west-tech.com >