
OPERATOR'S MANUAL

NEW HOLLAND
CX8030
CX8040
CX8050
CX8060
CX8070
CX8080
CX8090

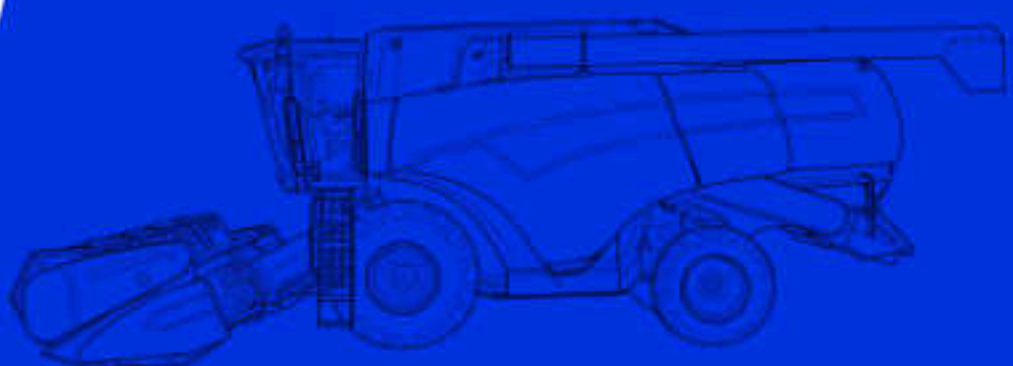

NEW HOLLAND

MidWestTech | New Holland CX8030, CX8040, CX8050, CX8060, CX8070, CX8080, CX809...

Order the manual at mid-west-tech.com >

TABLE OF CONTENTS

SECTION 1 – GENERAL INFORMATION AND SAFETY

Intended use 1–1
Product identification 1–1
- Base unit 1–1
- Engine 1–2
- Grain header (High-Capacity, Extra-Capacity or Varifeed ™) 1–3
- Maize header 1–3
- Flex header 1–3
- Maize header (98C) 1–3
- Draper header (92C/94C) 1–4
- Grain - Rice - Flex header (72C/74C) 1–4
- Record below the serial numbers of your machine for quick reference 1–5
- General recommendations 1–6
- Starting up the combine 1–8
- Travelling on public roads 1–9
- Operating the combine 1–10
- Operating the attachments 1–11
- Stopping the combine 1–11
- Maintenance 1–12
- Engine 1–14
- Diesel fuel 1–15
- Battery warning 1–16
- Illustrations 1–16
- Stability 1–17

Legal obligations 1–17
Safety requirements for fluid power systems and components – hydraulics (European standard EN 982) 1–17
Airborne noise emission 1–18
Electromagnetic compatibility (EMC) 1–18
Vibration level information 1–18
Safety decals 1–19
Safety decals (Australia) 1–28
Access to machine components 1–35
Protective devices 1–41
- Header standard safety latch 1–41
- Extra safety latch 1–42
- Wheel chock 1–42
- Buzzer (if installed) 1–42
- Safety railing for straw elevator 1–43
- Signal plates 1–43
- Signal plates for Italy 1–44
- Safety guards 1–44
- Additional mirror for Germany 1–44
- Fire extinguisher (with chopper drive) 1–45
- Adjustment of the dimmed lights 1–46

Adjustment of the side lights (if installed) 1–47
Towing the combine 1–48

MidWestTech | New Holland CX8030, CX8040, CX8050, CX8060, CX8070, CX8080, C... Order the manual at mid-west-tech.com >

9.



Revolving flash lights tumbler switch

- ON
- OFF

10.



Rear operating lights tumbler switch (if field mode selected)

- ON
- OFF

11.



Front operating lights tumbler switch

- If field mode:ON (position 2): inner and outer cab roof lights+central operating light, stubble lights, header lights
- If road mode:ON (position 2): inner and outer cab roof lights, parking lights
- If field mode:ON (position 1): outer cab roof lights+central operating light, stubble lights, header lights
- If road mode:ON (position 1): outer cab roof lights, parking lights
- OFF

Front operating lights tumbler switch summary:
(position 1 or 2)

(only with ignition key on)	Conditions
Unload tube light	– Field mode selected – Front or rear operating lights ON – Unload tube in open position
Rear operating lights (tumbler switch 10: OFF position)	– Field mode selected – Front operating lights ON – Reverse driving
Side operating lights	– Field mode selected – Front operating lights ON and – Direction indicator (left or right) or – Header above maximum stubble height

MidWestTech | New Holland CX8030, CX8040, CX8050, CX8060, CX8070, CX8080, C... Order the manual at mid-west-tech.com >

SECTION 4 – LUBRICATION AND MAINTENANCE

GENERAL

Your combine is designed to require minimum lubrication and maintenance. However, regular lubrication and maintenance is the best insurance against delays and repairs and greatly increases the life of the machine.

Use only top grade lubricants stored in clean vessels.

Recommended lubricants and amounts are summarized at the end of this section.

⚠ CAUTION ⚠

Always stop the machine before lubricating and observe following precautions:

- Disengage all drives
- Raise the header
- Engage the header lifter safety latch
- Engage the parking brake
- Switch off the combine engine
- Remove the ignition key before leaving the operator's platform

GREASE FITTINGS AND INTERVALS

Before greasing the machine always wipe any dirt from the grease fittings.

All points, except those with special notations, should be lubricated until the grease is forced out around the bearings and then the excess grease should be wiped off.

NOTE: *After greasing, shift the variators from minimum to maximum and vice versa to distribute the grease in the hub.*

Grease specification

Use Multipurpose grease AMBRA GR9 (ref. (NH710A) or AMBRA GR75MD (ref. NH720A), or grease classified under NLGI 2.


MidWestTech | New Holland CX8030, CX8040, CX8050, CX8060, CX8070, CX8080, C... Order the manual at mid-west-tech.com >

COUNTERWEIGHTS

For some attachments, counterweights are a legal requirement to ensure a safe road transport.


Available counterweights (as accessory)

- Frame counterweights (to be attached to the rear frame): **35** kg/element (77.2 lbs)

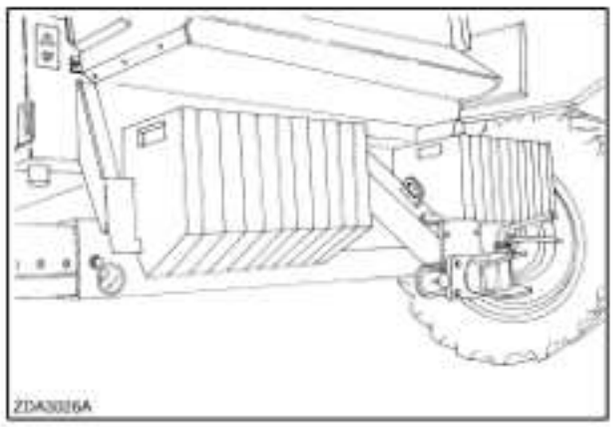

1

- Steering wheel counterweights (to be installed on the steering wheel rim): **20** kg/element (44.1 lbs)

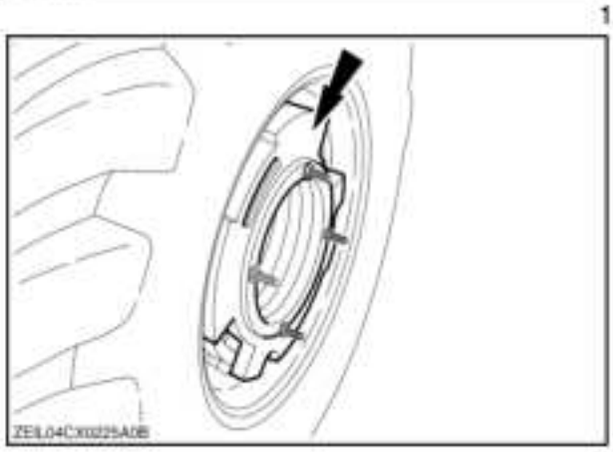


2

MidWestTech | New Holland CX8030, CX8040, CX8050, CX8060, CX8070, CX8080, C... Order the manual at mid-west-tech.com >

OPERATOR'S MANUAL

NEW HOLLAND
CX8030
CX8040
CX8050
CX8060
CX8070
CX8080
CX8090

Volume 2/2

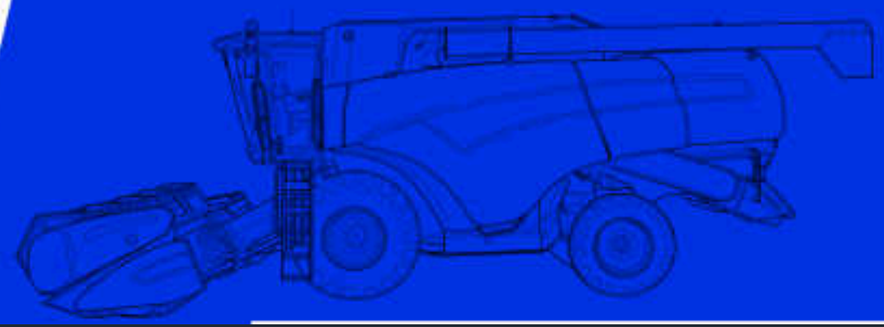

NEW HOLLAND

Your success - Our specialty

Printed in Belgium

Print No. 87535550
1st Edition
English 07/06

NEW HOLLAND

MidWestTech | New Holland CX8030, CX8040, CX8050, CX8060, CX8070, CX8080, CX8090 Combine Operator's Manual | Publication 87535550

Order the manual at mid-west-tech.com >