
NEW HOLLAND

TN60DA
TN70DA
TN75DA

OPERATOR'S MANUAL

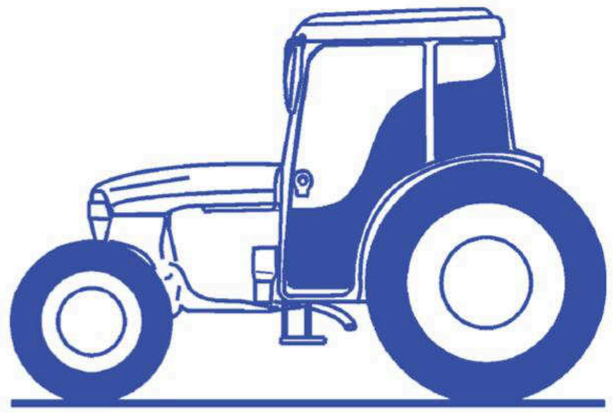

87552825 8/06
Replaces 87036781

NEW HOLLAND

Order the manual at mid-west-tech.com >

CONTENTS

Section 1

General Information and Safety 1-1

Notice for the User 1-1

Tractor Identification 1-2

Important Ecological Considerations 1-4

Precautionary Statements 1-5

Working Safely 1-7

Safety Covers and Guards 1-13

Safety Decals 1-15

Standardized Symbols 1-20

Section 2

General Information, Controls and Instruments 2-1

Introduction 2-1

Digital Instrument Control Panel 2-2

Indicator Light Panel 2-3

Controls on the Dashboard and Control Panel 2-10

Operating Controls 2-12

Seat Adjustment 2-15

Steering Wheel Adjustment 2-16

Description of the Heated/Ventilated and Air Conditioned Cab 2-17

Air Conditioning, Heating, and Ventilation 2-23

Transmission with Synchro-Command and Synchronized Mechanical Shuttle 30/40 km/h (18.64/24.85 mph) (16F+16R) 2-29

Transmission with Synchro-Command Plus and Electro-Hydraulic Power-Shuttle 30/40 km/h (18.64/24.85 mph) (16F+16R) 2-31

Fast Transmissions 40 km/h (24.85 mph) 2-38

MidWestTech | New Holland TN60DA, TN70DA, TN75DA Tractor Operator's Manual | Publi... Order the manual at mid-west-tech.com >

Section 3

Field Operation 3-1
Starting and Stopping 3-2
Brakes 3-6
Mechanical FWD 3-8
Electro-Hydraulically Controlled FWD 3-9
Differential Lock 3-9
Lim-Slip Front Differential Lock 3-10
Power Take-Off 3-11
Power Take-Off Operation 3-12
Mechanically Controlled Hydraulic Lift 3-13
Rear Implement Three-point Linkage 3-18
Chassis Mounting Points 3-22
Rear Remote Control Valves 3-23
Mid Mount Valve Controls 3-26
Wheel Track Adjustment 3-27
Front and Rear Wheel Track Adjustment 3-29
Steering Angle Adjustment FWD 3-30
Tires 3-33
Use, Maintenance and Replacement 3-33
Loading Information 3-36
Speed Code 3-36
Inflation Pressures 3-37
Tire Sizes 3-38
Tire Codes 3-38
FWD Models Tire Selection 3-40
Metal Ballasting 3-42
Liquid Ballasting 3-43
Maximum Permitted Weights 3-45
Static Weight Distribution on the Tractor 3-46

MidWestTech | New Holland TN60DA, TN70DA, TN75DA Tractor Operator's Manual | Publi... Order the manual at mid-west-tech.com >

Section 4

Lubrication and Maintenance 4-1
Tractor Refueling 4-2
Access for Inspection and Maintenance 4-4
Lubrication and Maintenance Table 4-5
Flexible Maintenance 4-7
Clutch Pedal (with Mechanical Transmissions) 4-7
When the Indicator Light Illuminates on the Dashboard 4-11
Every 10 Hours of Work 4-13
Every 50 Hours of Work 4-16
Every 300 Hours of Work 4-19
Every 900 Hours of Work 4-24
Every 1200 Hours of Work or Every Year 4-25
Every 1200 Hours of Work or Every 2 Years 4-26
General Maintenance 4-30
Electrical System 4-32
Advice on Starting the Engine with a Flat Battery or Without a Battery 4-34
Fuses and Relays (version with cab) 4-36
Bulb Replacement 4-41
Replacing Multiple Instrument Panel Indicators 4-44
Recommendations for Bodywork Maintenance 4-45
Lubricants and Fluids 4-46

Section 5

Troubleshooting 5-1
Locating and Identifying Problems 5-1
Engine 5-2
Electrical System 5-5
Hydraulic System 5-6
Hydraulic Lift and Three Point Linkage 5-7
Brakes 5-8
Cab 5-8

MidWestTech | New Holland TN60DA, TN70DA, TN75DA Tractor Operator's Manual | Publi... Order the manual at mid-west-tech.com >

LIGHT CONTROL LEVER


The light control lever controls the direction indicators, headlight full beam flasher and the switch from full beam to dipped headlights on the tractor front lights.

Direction indicators

To indicate a left-hand turn, move lever, 1, upwards to position A.

To indicate a right-hand turn, move lever, 1, downwards to position B.

When the direction indicators are ON, indicator lights flash on the control panel.

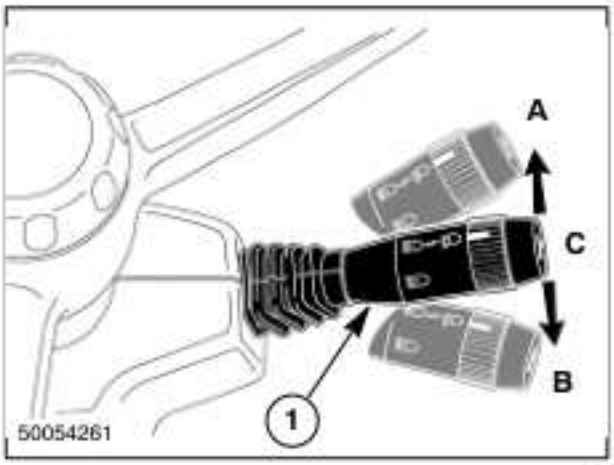

16


Flashing the front headlights

With the lights OFF or dipped, pull the lever, 1, towards the operator to flash the full beam lights. When released, the lever will automatically return to the original position.

The light selector knob, 1, operates with the starter switch in the ON position.

Side lights

With the light control lever in middle position C (Figure 16), turn the index mark, 2, on lever, 1, until it aligns with symbol, 3 (Figure 18). The side/tail lights and the control panel will illuminate.

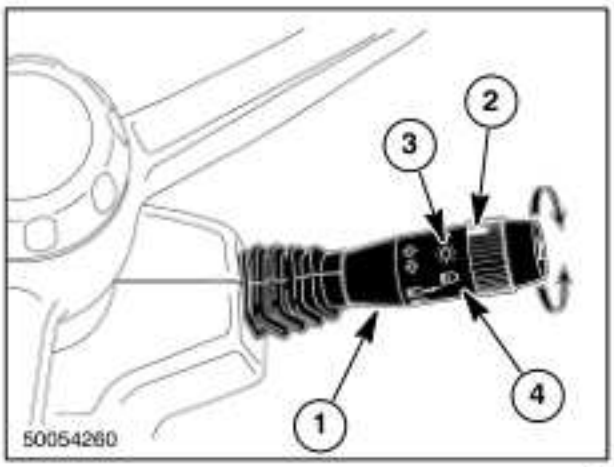

17

Dipped beam headlights

With lever, 1, in middle position C, turn the index mark, 2, on the light control lever until it aligns with symbol, 4.


Full beam headlights

With the lights ON, push lever, 1, (Figure 17) forward until the lever stops.

Horn

Press the horn button, 1, on the end of the lever, as indicated in the figure.

NOTE: *With index mark, 2, coinciding with symbol, 3, all of the lights are off. Only the direction indicators and horn remain operative.*

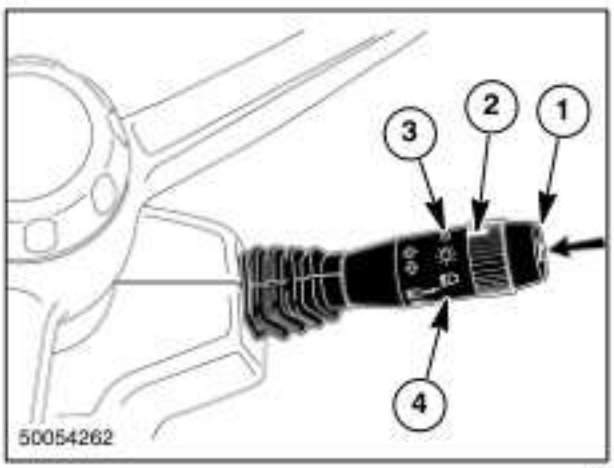

18


MidWestTech | New Holland TN60DA, TN70DA, TN75DA Tractor Operator's Manual | Publi... Order the manual at mid-west-tech.com >

EVERY 50 HOURS OF WORK

OPERATION 14.

REAR WHEEL HUBS

Check regularly that when AMBRA GR9 grease is pumped in via lubricating nipple, 1, (one on each side), grease escapes from the internal guard. To fill the grease chamber between the wheel hub and the reducer housing uniformly, the wheel must be turned. When working in particularly dusty or boggy environments, the operation must be carried out frequently to expel any dust or water that has entered.

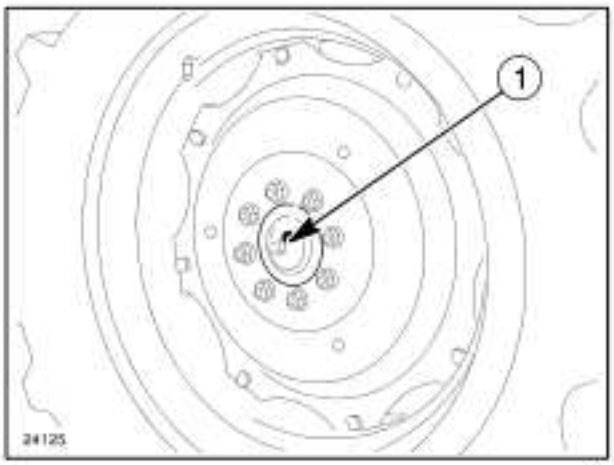


22

OPERATION 15.

LIFT AND IMPLEMENT LINKAGE

Using a grease gun, pump AMBRA GR9 grease into the two lubricating nipples shown.

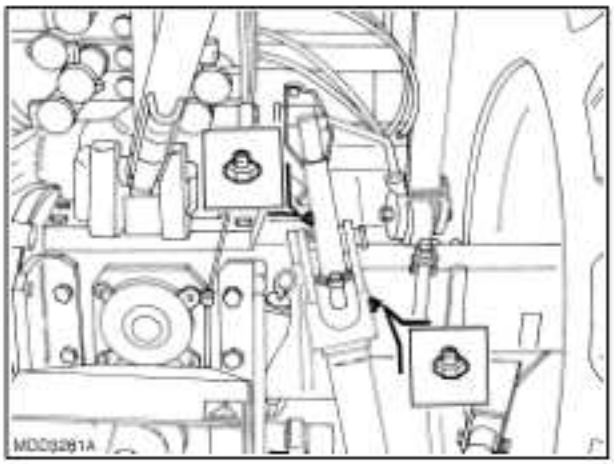


23

OPERATION 16.

FRONT AXLE PIVOT (FWD)

Inject AMBRA GR9 grease in the two nipples shown.

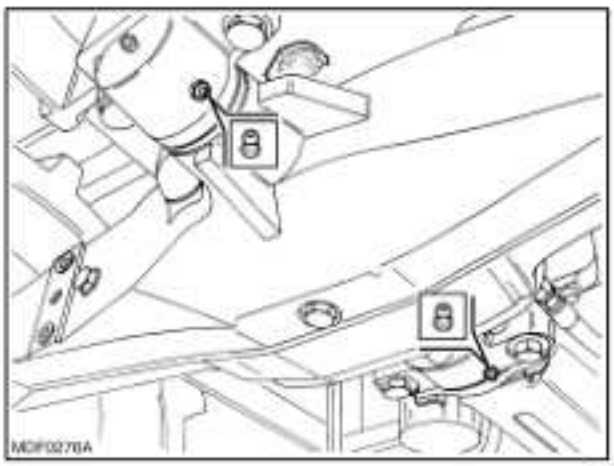

24

MidWestTech | New Holland TN60DA, TN70DA, TN75DA Tractor Operator's Manual | Publi... Order the manual at mid-west-tech.com >