NEW HOLLAND

CRAWLER EXCAVATOR

E215B TIER III

REPAIR MANUAL

87612178 NA

Issued 01-2007

NEW HOLLAND

www.newhollandconstruction.com

MidWestTech | New Holland E215B Tier III Crawler Excavator Service Manual | Publication... Order the manual at mid-west-tech.com >

3-ATTACHMENT DIMENSIONS

3.1 BOOM 3-3
3.1.1 BOOM DIMENSIONAL DRAWING 3-3
3.1.2 BOOM MAINTENANCE STANDARD 3-4
3.2 ARM 3-6
3.2.1 ARM DIMENSIONAL DRAWING 3-6
3.2.2 ARM MAINTENANCE STANDARD 3-7
3.3 BUCKET AND PIN 3-10
3.3.1 BUCKET AND PIN DIMENSIONAL DRAWING 3-10
3.3.2 BUCKET AND PIN DIMENSIONAL TABLE 3-11

MAINTENANCE SECTION

11-TOOLS

11.1 STANDARD TORQUE SPECIFICATIONS FOR CAPSCREWS AND NUTS 11-3
11.2 SCREW SIZE 11-5
11.2.1 CAPSCREW (BOLT) 11-5
11.2.2 CAPSCREW (SOCKET BOLT) 11-5
11.2.3 SOCKET SET SCREW 11-5
11.3 TORQUE SPECIFICATIONS FOR HOSE AND FITTINGS 11-6
11.3.1 JOINT (O-RING TYPE) 11-6
11.3.2 HYDRAULIC HOSE (30° FLARE TYPE) 11-6
11.3.3 JOINT (ORS TYPE) 11-6
11.3.4 SPLIT FLANGE 11-6
11.4 TORQUE SPECIFICATIONS FOR NUTS AND SLEEVES 11-7
11.5 PLUG 11-8
11.5.1 PLUG FOR HYDRAULIC PIPE JOINT 11-8
11.5.2 PLUG FOR HYDRAULIC EQUIPMENT 11-9
11.6 SPECIAL SPANNER FOR TUBE 11-11
11.7 SPECIAL TOOLS 11-12
11.8 APPLICATION OF SCREW LOCKING COMPOUND AND SEALING COMPOUND 11-14
11.9 SUCTION STOPPER 11-15
11.9.1 COMPONENTS 11-15
11.9.2 DIMENSION 11-15
11.9.3 APPLICABLE MODEL 11-15
11.10 COUNTER WEIGHT LIFTING JIG 11-16
111.10 UPPER FRAME LIFTING JIG 11-17
11.11 ENGINE TURNOVER STAND 11-18
11.13 TRACK SPRING SET JIG 11-19

MidWestTech | New Holland E215B Tier III Crawler Excavator Service Manual | Publication... Order the manual at mid-west-tech.com >

12-STANDARD MAINTENANCE TIMETABLE

12.1 STANDARD WORKING TIME TABLE FOR THE MAINTENANCE OF EXCAVATOR....12-4

13-MAINTENANCE STANDARD AND TEST PROCEDURE

13.1 HOW TO USE THE MAINTENANCE STANDARD....13-3
13.2 PERFORMANCE INSPECTION STANDARD TABLE....13-4
13.3 MEASUREMENT OF ENGINE SPEED....13-6
13.3.1 MEASUREMENT OF ENGINE SPEED....13-6
13.4 MEASUREMENT OF HYDRAULIC PRESSURE....13-7
13.4.1 PREPARING TO MEASURE HYDRAULIC PRESSURE....13-7
13.4.2 PLACE TO INSTALL PRESSURE GAUGE....13-7
13.4.3 PRESSURE ADJUSTMENT POSITION....13-8
13.4.4 PROCEDURE FOR ADJUSTING RELIEF VALVE....13-10
13.5 MEASURING TRAVEL PERFORMANCES....13-12
13.5.1 TRAVEL SPEED....13-12
13.5.2 DEVIATION OF TRAVEL....13-12
13.5.3 PERFORMANCES OF PARKING BRAKE....13-13
13.5.4 DRAIN RATE OF TRAVEL MOTOR....13-14
13.6 MEASURING SWING PERFORMANCES....13-15
13.6.1 SWING SPEED....13-15
13.6.2 PERFORMANCE OF SWING BRAKE....13-15
13.6.3 PERFORMANCE OF SWING PARKING BRAKE....13-16
13.6.4 DRAIN RATE OF SWING MOTOR....13-17
13.7 MEASURING ATTACHMENT OPERATING PERFORMANCES....13-18
13.7.1 OPERATING TIME OF CYLINDERS....13-18
13.7.2 CYLINDER LEAK CHECK....13-19
13.8 MEASURING PERFORMANCES OF SWING BEARING....13-20
13.9 MECHATRO CONTROLLER....13-21
13.9.1 ENGINE CONTROL INPUT / OUTPUT....13-21
13.9.2 ENGINE CONTROL....13-22
13.9.3 ADJUSTMENT OF MECHATRO CONTROLLER OUTPUT (A-B-C ADJUSTMENT)....13-24
13.9.4 OPERATIONS IN THE EVENT OF A MECHATRO CONTROLLER FAILURE....13-29

MidWestTech | New Holland E215B Tier III Crawler Excavator Service Manual | Publication... Order the manual at mid-west-tech.com >

SYSTEM SECTION

21-MECHATRO CONTROL SYSTEM

21.1 SUMMARY OF MECHATRO CONTROL SYSTEM 21-4
21.1.1 MECHATRO CONTROL SYSTEM IN GENERAL 21-4
21.1.2 UNLOAD VALVE CONTROL 21-6
21.1.3 POSITIVE CONTROL & P-Q CONTROL 21-7
21.1.4 BOOM UP CONFLUX CONTROL 21-9
21.1.5 ARM IN RECIRCULATION & CONFLUX CONTROL 21-10
21.1.6 ARM-IN ANTI-CAVITATION CONTROL 21-12
21.1.7 ARM-OUT CONFLUX CONTROL 21-13
21.1.8 BUCKET DIGGING (DUMP) CONFLUX CONTROL 21-14
21.1.9 BUCKET DIGGING ANTI-CAVITATION CONTROL 21-15
21.1.10 SWING PRIORITY CONTROL 21-17
21.1.11 TRAVEL STRAIGHT CONTROL 21-18
21.1.12 TRAVEL INDEPENDENT CONTROL 21-20
21.1.12 PRESSURE RELEASE CONTROL 21-22
21.1.13 N&B SWITCH CONTROL (OPTION) 21-23
21.1.14 OPTION CONFLUX CONTROL (OPTION) 21-24
21.2 MECHATRO CONTROLLER 21-25
21.2.1 SUMMARY OF MULTI DISPLAY 21-25
21.2.2 SELF DIAGNOSIS DISPLAY 21-30
21.2.3 SERVICE DIAGNOSIS DISPLAY FUNCTION 21-32
21.2.4 TROUBLE HISTORY DIAGNOSIS 21-42
21.2.5 TROUBLE DIAGNOSIS MODE 21-43
21.2.6 SET PROCEDURE OF MAINTENANCE SCHEDULE 21-44
21.2.7 ADJUSTING PROCEDURE OF DISPLAY 21-45
21.2.8 MECHATRO CONTROL EQUIPMENT 21-49

22-HYDRAULIC SYSTEM

22.1 SUMMARY 22-3
22.2 HYDRAULIC CIRCUITS AND COMPONENTS 22-4
22.3 COLOR CODING STANDARD FOR HYDRAULIC CIRCUITS 22-8
22.4 NEUTRAL CIRCUIT 22-8
22.5 TRAVEL CIRCUIT 22-10
22.6 BUCKET CIRCUIT 22-12
22.7 BOOM CIRCUIT 22-14
22.8 SWING CIRCUIT 22-18
22.9 ARM CIRCUIT 22-20
22.10 COMBINED CIRCUIT 22-26
22.11 PRESSURE DRAINING (RELEASING) CIRCUIT 22-30

MidWestTech | New Holland E215B Tier III Crawler Excavator Service Manual | Publication... Order the manual at mid-west-tech.com >

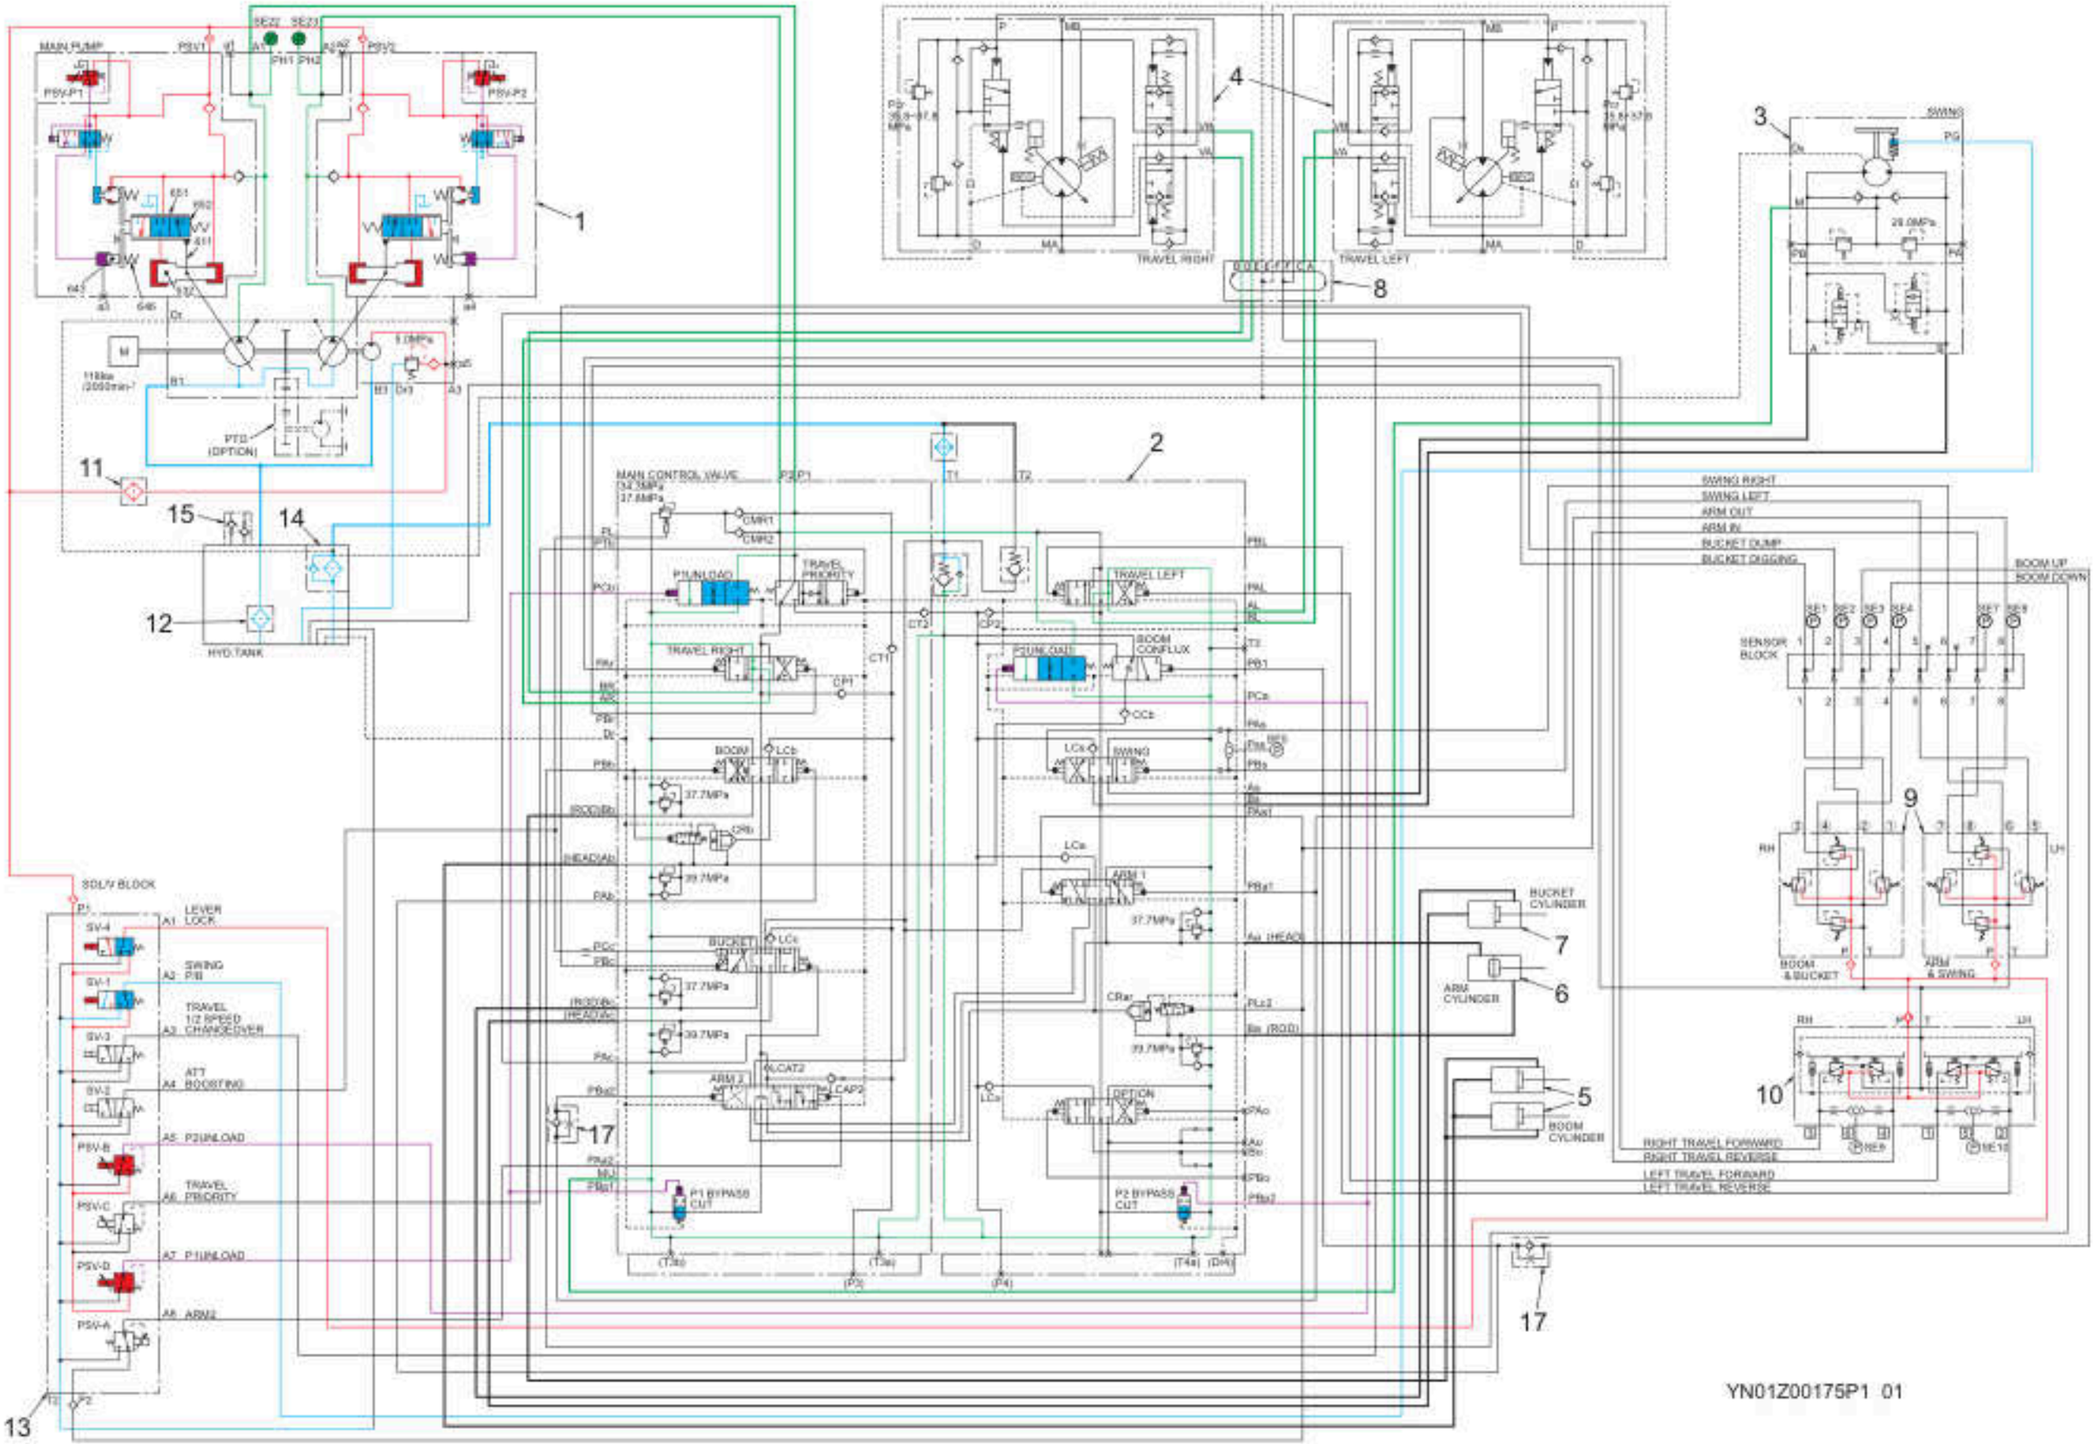


Fig. 22-1 NEUTRAL CIRCUIT : Positive control function at safety lock lever down (unlocked position)

MidWestTech | New Holland E215B Tier III Crawler Excavator Service Manual | Publication 87612178NA
Order the manual at mid-west-tech.com >