
NEW HOLLAND

TD80D
TD95D

OPERATOR'S MANUAL

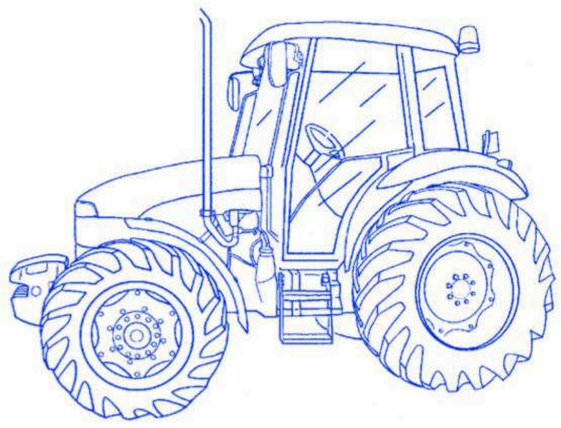

87684397 7/07
Replaces 87630741

NEW HOLLAND

MidWestTech | New Holland TD80D, TD95D Tractor Operator's Manual | Publication 87684397

Order the manual at mid-west-tech.com >

CONTENTS

Section 1

General Information and Safety 1-1
Notices for the User 1-1
Tractor Identification 1-2
Ecology and the Environment 1-5
Precautionary Statements 1-6
Personal Safety 1-6
Machine Safety 1-6
Information 1-6
Working Safely 1-8
Safety Decals 1-14
Tractor Noise Level Information Sheet 1-19
International Symbols 1-20

Section 2

Controls, Instruments and Operation 2-1
Introduction 2-1
Safety Covers and Guards 2-2
Controls and Instruments - Position and Function 2-4
Instrument Panel 2-5
Controls 2-9
Seats 2-16
Cab 2-18

MidWestTech | New Holland TD80D, TD95D Tractor Operator's Manual | Publication 87684... Order the manual at mid-west-tech.com >

Section 2 *(continued)*

Cab Ventilation, Heating, and Air Conditioning Systems 2-24
Transmission with Range Gear and Shuttle - 30 KPH (19 MPH) 2-30
Transmission with Creeper and Shuttle - 30 KPH (19 MPH) 2-32
Mechanically Controlled Four-wheel Drive 2-34
Mechanically Controlled Differential Lock 2-35
LIM-Slip Differential Lock (Optional) 2-36

Section 3

Field Operation 3-1
General Field Operation Information 3-1
Starting and Stopping 3-2
Power Take-off 3-5
Power Take-off Operation 3-6
Hydraulic Lift 3-10
Hydraulic Lift 3-14
Three-point Linkage (Category II) 3-15
Drawbars 3-19
Equipment Mounting Points 3-20
Folding ROPS 3-22
Remote Control Valves 3-23
Wheel Track Adjustment 3-26
Front and Rear Wheel Track Adjustment 3-28
Steering Angle Adjustment 3-31
Steering Angle Adjustment (FWD Models) 3-32
Tires - Use, Maintenance and Replacement 3-33
Loading Information 3-35
Speed Code 3-35
Tire Data and Pressures 3-36
Tire Combinations 3-37
Inflation Pressures 3-39
Ballasting 3-40
Liquid Ballasting 3-41
Maximum Permitted Weight 3-45
Four Wheel Drive Models 3-46

MidWestTech | New Holland TD80D, TD95D Tractor Operator's Manual | Publication 87684... Order the manual at mid-west-tech.com >

Section 4

Lubrication and Maintenance 4-1
General Lubrication and Maintenance Information 4-1
Tractor Refueling 4-2
Access for Inspection and Maintenance 4-4
Lubrication and Maintenance Table 4-5
Flexible Maintenance 4-7
When the Indicator Light Illuminates On the Dashboard 4-10
Every 10 Hours of Work 4-11
Every 50 Hours of Work 4-16
Every 300 Hours of Work 4-19
Every 600 Hours of Work 4-24
Every 900 Hours of Work 4-24
Every 1200 Hours of Work 4-24
Every 1200 Hours or Every 2 Years 4-27
General Maintenance 4-32
Electrical System 4-34
Recommendations for Bodywork Maintenance 4-42
Lubricants and Fluids 4-43

Section 5

Troubleshooting 5-1
General Troubleshooting Information 5-1

Section 6

Vehicle Storage 6-1

Section 7

Tractor Specifications 7-1
General Tractor Specifications Information 7-1
Dimensions of 2WD Models with Standard Tires 7-1
Dimensions of 4WD Models with Standard Tires 7-2
Weights (kg) 7-3
Engine Specification 7-4

Section 8

Delivery Report 8-1
First 50 Hour Service 8-5

Section 9


Index 9-1

MidWestTech | New Holland TD80D, TD95D Tractor Operator's Manual | Publication 87684... Order the manual at mid-west-tech.com >

RIGHT-HAND SIDE OPERATING CONTROLS

Transmission Controls


1. Main shift lever
2. Range lever

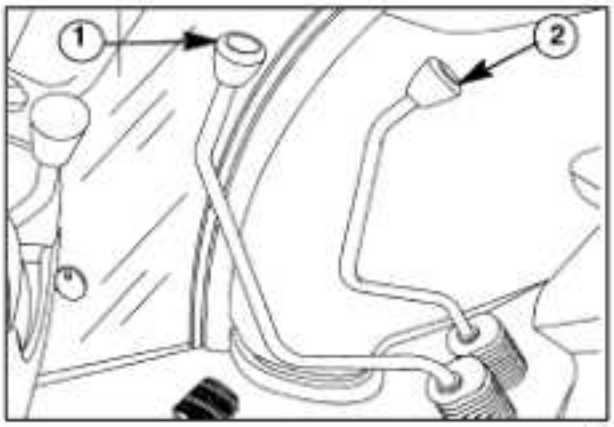

19

Hydraulic Lift Controls


1. HPL position control lever
2. HPL draft control lever
3. HPL fast raise/lower control buttons

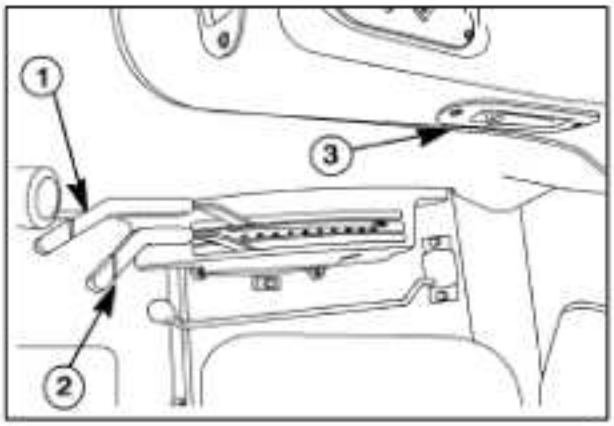

20

Auxiliary Control Valve Levers

1. Remote control valve levers

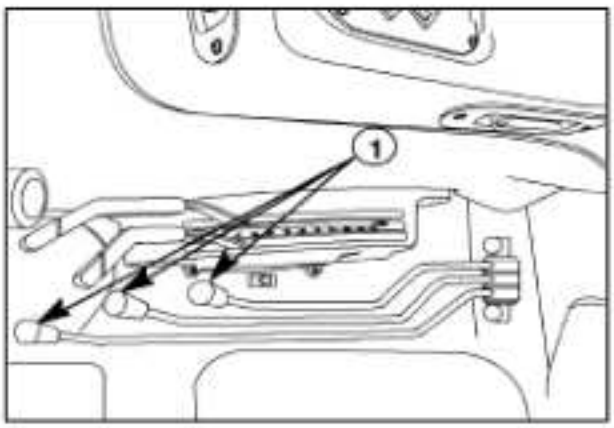


21

MidWestTech | New Holland TD80D, TD95D Tractor Operator's Manual | Publication 87684... Order the manual at mid-west-tech.com >

OPERATION 21

FRONT AXLE FRONT PIVOT FWD

Using a grease gun, pump AMBRA GR9 grease into the lubrication fitting (arrowed) until grease escapes through outlet, 1.

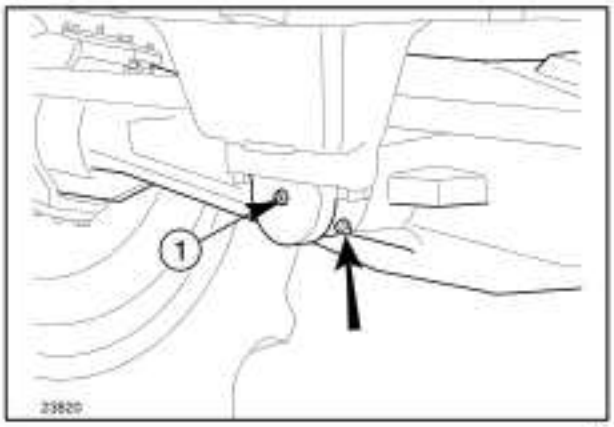


32

OPERATION 22

STEERING CYLINDER 2WD

Using a grease gun, pump AMBRA GR9 grease into the lubrication fitting shown.

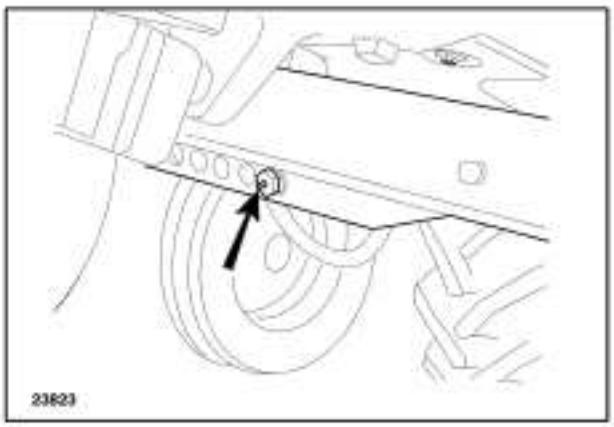


33

OPERATION 23

RIGHT-HAND STUB AXLE 2WD

Using a grease gun, pump AMBRA GR9 grease into the lubrication fittings shown.

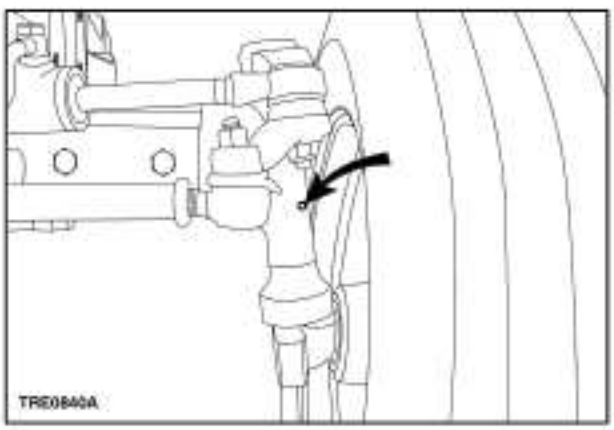

34

MidWestTech | New Holland TD80D, TD95D Tractor Operator's Manual | Publication 87684... Order the manual at mid-west-tech.com >

WEIGHTS (kg)

MODELS	Front support	Front end weights	Rear wheel weights	TOTAL
TD80D	80	6x40: 240	6x50: 300	620
TD95D	80	10x40: 400	6x50: 300	780

TRACTOR WEIGHT WITH ROPS

MODELS	without weights		with weights	
	2WD	FWD	2WD	FWD
TD80D	2940	3420	3560	4040
TD95D	3150	3580	3930	4360

TRACTOR WEIGHT WITH CAB

MODELS	without weights		with weights	
	2WD	FWD	2WD	FWD
TD80D	3170	3600	3790	4220
TD95D	3340	3770	4120	4550

MidWestTech | New Holland TD80D, TD95D Tractor Operator's Manual | Publication 87684... Order the manual at mid-west-tech.com >