5120 And 5220 Tractors


Parts Catalog

Don 8-9064


CASE IH AGRICULTURE

MidWestTech | Case 5120, 5220 Tractor Parts Catalog | Publication 8-9064


Order the manual at mid-west-tech.com >

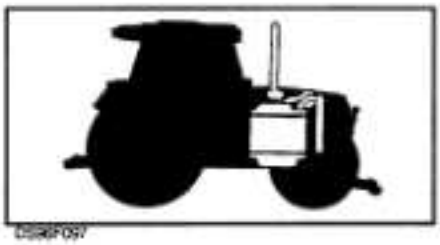


GENERAL 1

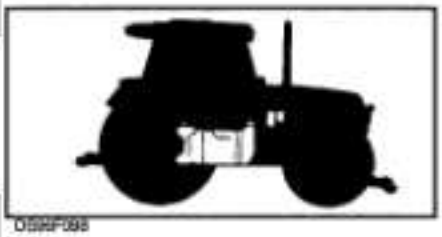


ENGINE 2

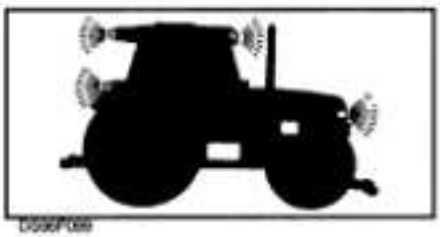


FUEL SYSTEM 3

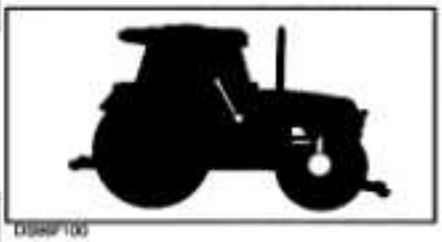


ELECTRICAL SYSTEM 4

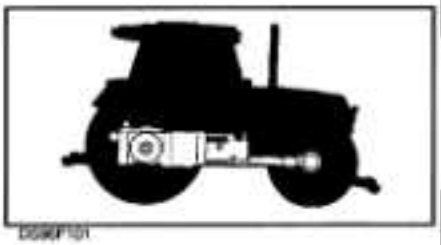


STEERING SYSTEM 5

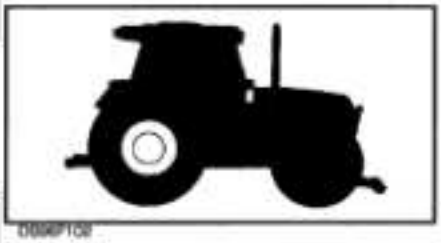

POWER TRAIN 6

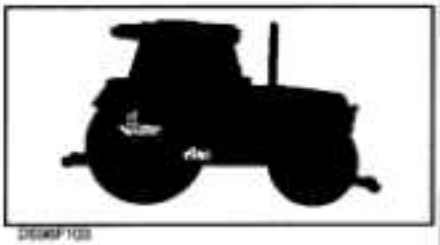


BRAKES 7

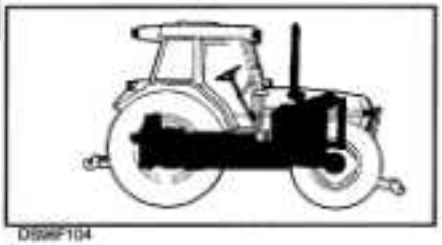

HYDRAULIC SYSTEM 8

CHASSIS / ATTACHMENTS 9

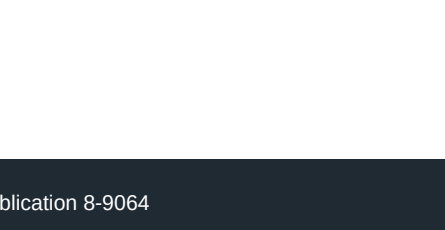

NUMERICAL INDEX 10

Order the manual at mid-west-tech.com >

GENERAL INFORMATION

ILLUSTRATION AND TEXT

The arrangement of this parts catalog is for easy identification of Case parts. All parts are illustrated in "Exploded Views". This places each part in normal reference to each other. Reference numbers are used in the illustrations. These numbers are in reference to those on the text pages. The text pages list reference number, part number part description and the amount required (Quantity).

UAR

"Use as Required" in the amount required column is an indication the number of parts used is controlled by service.

REF

"Reference" in the part number column is an indication this part has many applications or has special service information.

NSS

"Not Serviced separately" in the part number column, is an indication this part is not available for repairs.

INDEX

A numerical index which lists the page number and reference number on which a part number is located, appears in the last section of this catalog.

CATALOG CHANGES

Changes to a product make it necessary to revise or add pages to this catalog. Each new or revised page will have a new issue date. A revision cover sheet will list all the pages released for each revision. All of the revised and new pages must be put into the catalog as soon as they are received.

PARTS ORDER

All orders should give the complete part description, correct part number, the total amount required, the product model, all the necessary serial numbers, the method of shipment and the shipping address.

RIGHT HAND AND LEFT HAND IDENTIFICATION

The reference to right-hand (RH), and left-hand (LH) as used in this publication is identified by the operator standing at the rear of the unit, looking towards the front of the machine

TEXT DESCRIPTION

An assembly may contain many service items. The component parts of an assembly will be indented. The amount required column will list the number of components required for a complete assembly or sub-assemblies. See Below ;

REF	PART NO.	DESCRIPTION	REQ'D
1	125617	FITTING - grease, straight drive type, 3/16 inch	1
2	273359	FITTING - grease, 65 degree drive type, 3/16 inch	2
3	3116435R91	AXLE ASSEMBLY - front, centre section	1
4	405574R1	BUSHING - cylinder mounting bracket	2
5	376160R1	BUSHING - (Optional to 405574R1)	2
6	405570R1	BUSHING - pivot	2
7	REF	VALVE ASSEMBLY - pressure control (See Page 5-57)	1
8	NSS	BLOCK - mounting	1
9	413-1024	BOLT - hex, 5/8/NC x 1-1/2 inch	UAR
10	492-11031	WASHER - lock, 5/16 inch	2
11	137049A1	HOUSING - swivel, left	1
12	137050A1	HOUSING - swivel, right	1

MidWestTech | Case 5120, 5220 Tractor Parts Catalog | Publication 8-9064 Order the manual at mid-west-tech.com >

ALPHABETICAL INDEX

A

Adjustable Axle 2WD
- Axle Assembly 5-21
- Steering Cylinder 5-19
- Tie Rods 5-23

Air Cleaner 2-7
Air Cleaner And Connections 2-5
Air Conditioning
- Compressor 2-25
- Compressor, Condenser And Drier 2-19
- Pipes 2-21, 2-23

Alternator Assembly 4-49, 4-51
Alternator Mounting 4-47

B

Battery And Connections 4-39, 4-41
Brakes
- Brake Pedals And Master Cylinders 7-9
- Brake Piping 7-11
- Master Cylinder 7-13
- Parking Brake 7-3
- Parking Brake Controls 7-5
- Service Brake 7-7

C

Cab
- Air Conditioning 9-103
- Air Filter And Inner Roof 9-97
- Blower Assembly 9-99
- Doors ..... 9-73 thru 9-83
- External Trim 9-61
- Electrical Access 9-59
- Heater 9-101
- Headlining 9-93
- Heating And Ventilation Controls 9-95
- Interior Mats 9-63
- Mirrors ..... 9-107 thru 9-111
- Mounting 9-41
- Radio Speakers And Antenna 9-105
- Rear Window 9-87
- Rear Window Wiper 4-65
- Roof 8-89, 9-91
- Steps 9-113, 9-115
- Windshield And Side Glass 9-85
- Windshield And Rear Window Washer 4-67
- Windshield Wiper Front 4-63

Camshaft 2-47
Control Console Right 9-65
Crankshaft 2-55
Crankshaft Balancer 2-57, 2-59
Cylinder Head And Covers 2-43
Cylinder Head And Valve Mechanism 2-45
Cylinder Block 2-49, 2-51

D

Decals 9-159, 9-161

E

Electrical Harness
- Cab 4-13, 4-15
- Control Console 4-25, 4-27
- Engine 4-9, 4-11
- Instrument Panel ..... 4-17 thru 4-23
- Powershift 4-7
- Rear Fender 4-29, 4-31
- Transmission 4-3, 4-5

Engine Gasket Kits 2-63
Engine Oil Filler 2-53
Engine Side Rails And Front Bolsters 9-37
Ether Start 2-15
Exhaust
- Downswept 2-11
- Vertical 2-9

F

Flywheel, Housing And Torque Limiter 2-13
Front End Weights 9-151, 9-153
Front Fenders 9-127, 9-129
Front Gear Cover 2-29
Front Grille 9-43, 9-45
Fuel
- Filler Neck 3-7
- Filter 3-13
- Injection Nozzle 3-19, 3-21
- Injection Pump And Drive 3-15, 3-17
- Injection System 3-11
- Tank And Fuel Lines 3-3, 3-5

H

Headlights 4-53
Heater Hoses 2-1
Hitch
- 3 Point Front 9-29, 9-31
- Controls 9-25, 9-27
- Lift Links Lower 9-11
- Lift Links Upper 9-5, 9-7
- Rockshaft And Arm 9-3
- Stabilizer, Drawbar ..... 9-13, thru 9-19
- Top Link Float Version 9-33, 9-35
- Top Links Support 9-9
- Trailer Hitch 9-21, 9-23

Hoodsheet 9-47, 9-497
Hydraulics
- Auxiliary Valves Stack 8-41
- Auxiliary Valve End Cover 8-47, 8-49
- Auxiliary Valve Manifold Inlet/Outlet 8-51

(Continued on Next Page)

MidWestTech | Case 5120, 5220 Tractor Parts Catalog | Publication 8-9064 Order the manual at mid-west-tech.com >