
MODEL MP SERIES

SERVICE MANUAL

ELECTRO-PROPORTIONAL

For Service Concerns Only:
Direct Phone Line to
Service Department,
8:00 AM to 5:00 PM
Central Time,
Monday thru Friday.

Phone (414) 355-3181

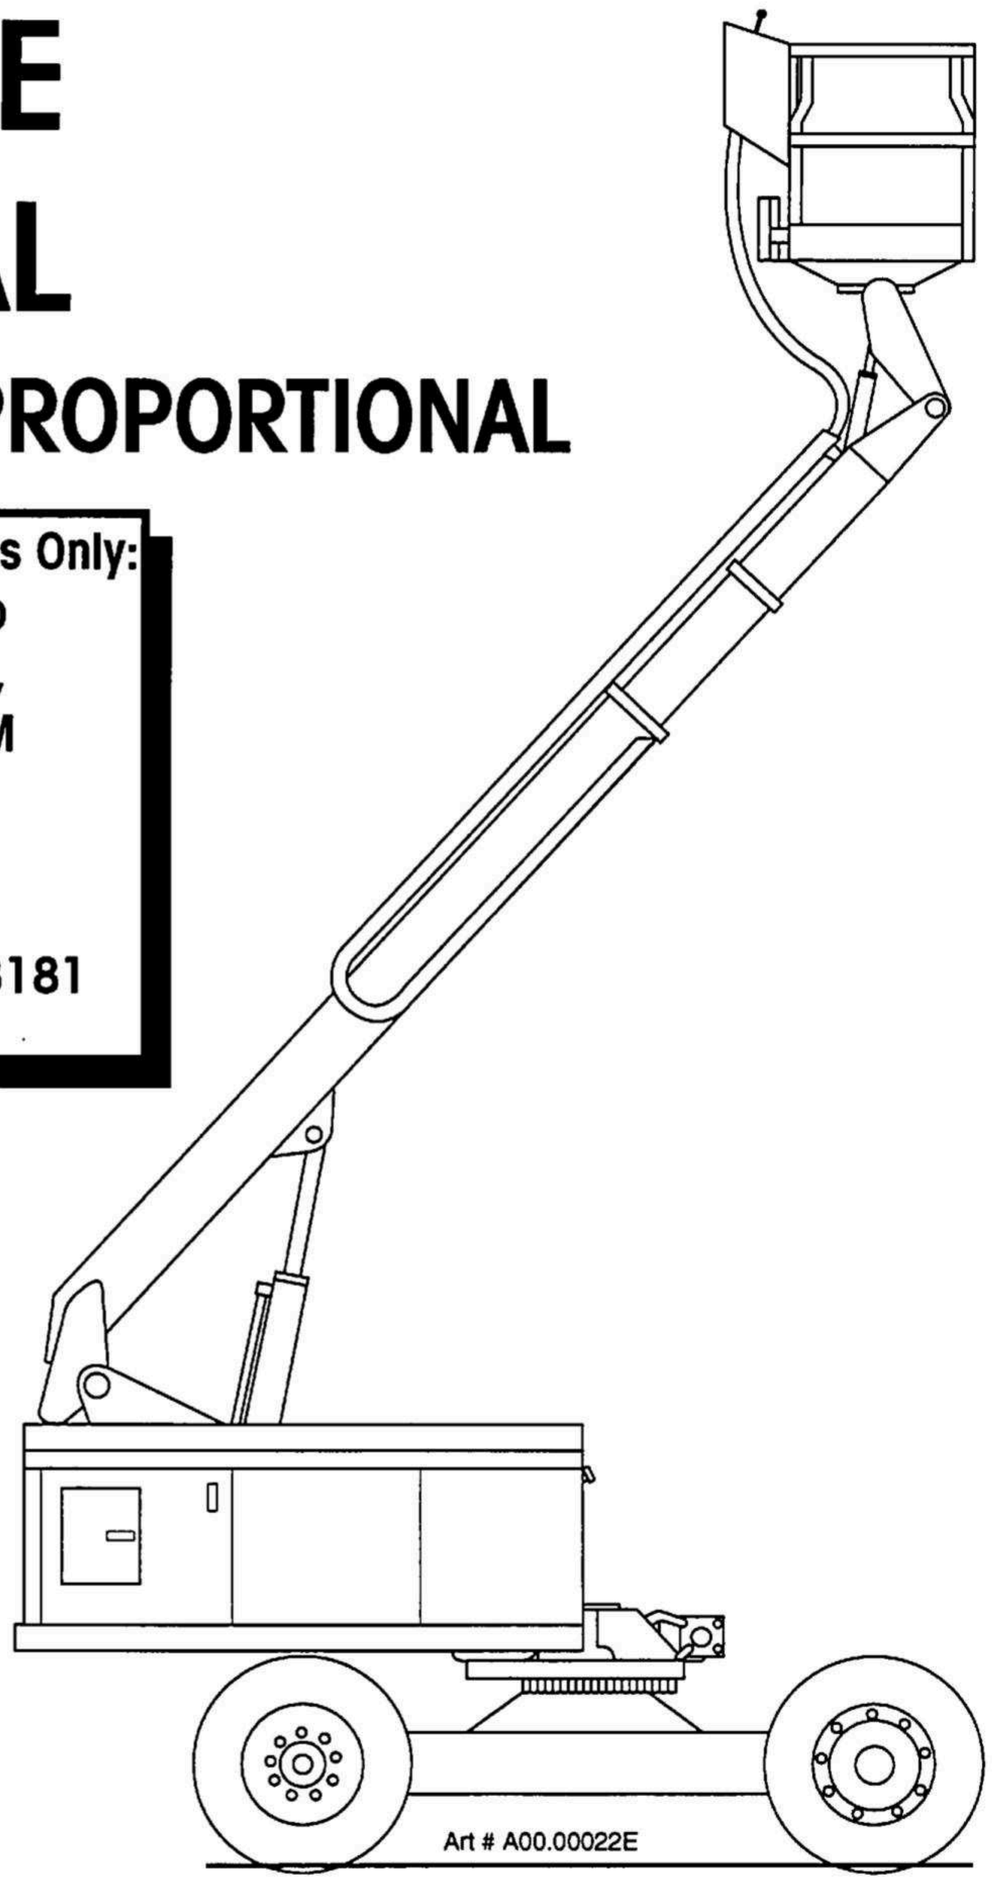

Part No. 89-100317 • Revision "0.3" dated Dec. 1996 •

MidWestTech | Terex Simon MP Electro Proportional Boom Lift Service Manual | Publication 89_100317

Order the manual at mid-west-tech.com >

Table of Contents

Introduction vi
Machine Specifications MP 40 viii
Machine Specifications MP 60 ix
Machine Specifications MP 80 x
Machine Component Locator xi
Undercarriage Component Locator xii
Superstructure Component Locator xiii
Boom Component Locator xiv
Platform Component Locator xv
Lubrication Chart xvi

Section 1: Transportation and Emergency Procedures

Transport the Unit 1-3
Towing Procedures 1-3
Truck or Trailer Transport 1-3
Unloading Procedures 1-5
Emergency System and Procedures 1-6
Emergency Pumps 1-6
Emergency Drive Function 1-6
Emergency Lowering 1-7

Section 2: Hydraulic System

Hydraulic Fluid 2-5
Handling Precautions 2-5
Fluid Recommendations 2-5
Fluid Contamination Checks 2-5
System Flushing Procedure 2-6
Hydraulic System Components 2-7
Electro-Proportional Circuit 2-7
Hydraulic Pump 2-7
Hydraulic Pump Adjustment 2-7
Emergency Pump 2-7
Emergency Pump Adjustment 2-7
Ground Valve Bank Assembly 2-8
Inlet Section 2-8
End Cover (Adapter Manifold) 2-8
Main Valve Segment 2-8
Operation 2-9
Maintenance 2-9
Hydraulic Circuit Line Check 2-9
Main Valve Segment 2-9
Valves 2-10
Drive Relief Valve 2-10
Drive Valve Assembly 2-10
Hi/ Low Speed Drive Valve 2-10
Flow Divider Valve Assembly 2-10
Motion Control Valve Assembly 2-10

MidWestTech | Terex Simon MP Electro Proportional Boom Lift Service Manual | Publicatio... Order the manual at mid-west-tech.com >

Table of Contents (Continued)

Section 2: Hydraulic System

Hydraulic Fluid Reservoir 2-11
Hydraulic Reservoir Maintenance 2-11
High Pressure Filter 2-11
Boom Lift System 2-11
Boom Lift Valve Segment 2-11
Flow Control Valve 2-12
Flow Control Valve Adjustment 2-12
Lift Cylinder 2-12
Boom Telescope (Extend) System 2-12
Boom Extend Valve Segment 2-13
Pressure Relief Valve 2-13
Telescope (Extend) Cylinder 2-13
Mechanical Extend Function 2-14
Superstructure Swing System 2-15
Swing Valve Segment 2-15
Swing Drive Motor/ Reducer Assembly 2-15
Worm Gear Type 2-15
Planetary Gear Type with Intregal Brake 2-16
Swing Gear and Pinion Shaft Adjustment 2-16
Swing Reducer/ Motor Assembly Adjustment (MP60) ... 2-17
Worm Gear Type with Intregal Brake (MP80) 2-17
Swing Drive/ Reducer Assembly Adjustment 2-17
Integral Brake Assembly 2-18
Swing System Maintenance 2-18
Platform Rotate System 2-19
Rotate Control Valve 2-19
Double Pilot Operated Check Valve 2-19
Rotary Actuator 2-19
Rotary Actuator Maintenance 2-19
Platform Rotator Manifold 2-19
Platform Level System 2-20
Level Control Valve 2-20
Double Pilot Operated Check Valve 2-20
Master Level Cylinder 2-21
Slave Level Cylinder 2-21
Relief Valves 2-21
Steer System 2-22
Steer Valve Segment 2-22
Hydraulic Swivel 2-22
Steer Cylinder 2-23
Steer Disconnect Knob 2-23
Steer System Maintenance 2-23

MidWestTech | Terex Simon MP Electro Proportional Boom Lift Service Manual | Publicatio... Order the manual at mid-west-tech.com >

Table of Contents (Continued)


Section 3: Drive System

Drive System Components 3-3
- Drive Motor and Brake Assembly 3-3
- Drive Valve Segment 3-4
- Drive Valve Assembly 3-4
  - Selector Valve 3-4
  - Motion Control Valve Assembly 3-4
    - Motion Control Valve 3-4
    - Flow Control Valve 3-4
  - Flow Divider Valve Assembly 3-5
    - Flow Divider/ Combiner Valve 3-5
    - Gate (Globe) Valve 3-5
- Drive Relief Valve 3-5
- Brake Metering Valve 3-5
  - Brake Metering Valve Adjustment 3-5
- Toggle Switch on the Pendant Control 3-5
- Platform Control Handle (Joystick) 3-5

Section 4: Electrical System

Electrical System 4-3
- Battery 4-3
  - Battery Maintenance (In Storage) 4-3
  - Battery Maintenance (In Use) 4-3
  - Battery Preventive Maintenance 4-4
  - Battery Replacement 4-4
- Movement Alarm 4-4
- Tilt Alarm 4-4
  - Tilt Alarm Test 4-4
  - Tilt Alarm Adjustment 4-5
- Relays 4-5
- Circuit Breakers 4-5
- Limit Switches 4-5
- Emergency Pump 4-5
- Emergency Stop Button 4-5
- Pendant Switch Removal 4-6
- Ground Control Cabinet Switch Removal 4-6
- Platform Console Switch Removal 4-6
- Drive/ Steer Controller 4-6
- Boom Telescope Controller 4-8
- Boom/ Swing Controller 4-10
- Creep Speed Adjustments 4-12
- Boom Adjustment (Ground Control) 4-12
- Superstructure Swing Adjustment (Platform Control) 4-12
- Boom Hoist Adjustment (Platform Control) 4-12

MidWestTech | Terex Simon MP Electro Proportional Boom Lift Service Manual | Publicatio... Order the manual at mid-west-tech.com >

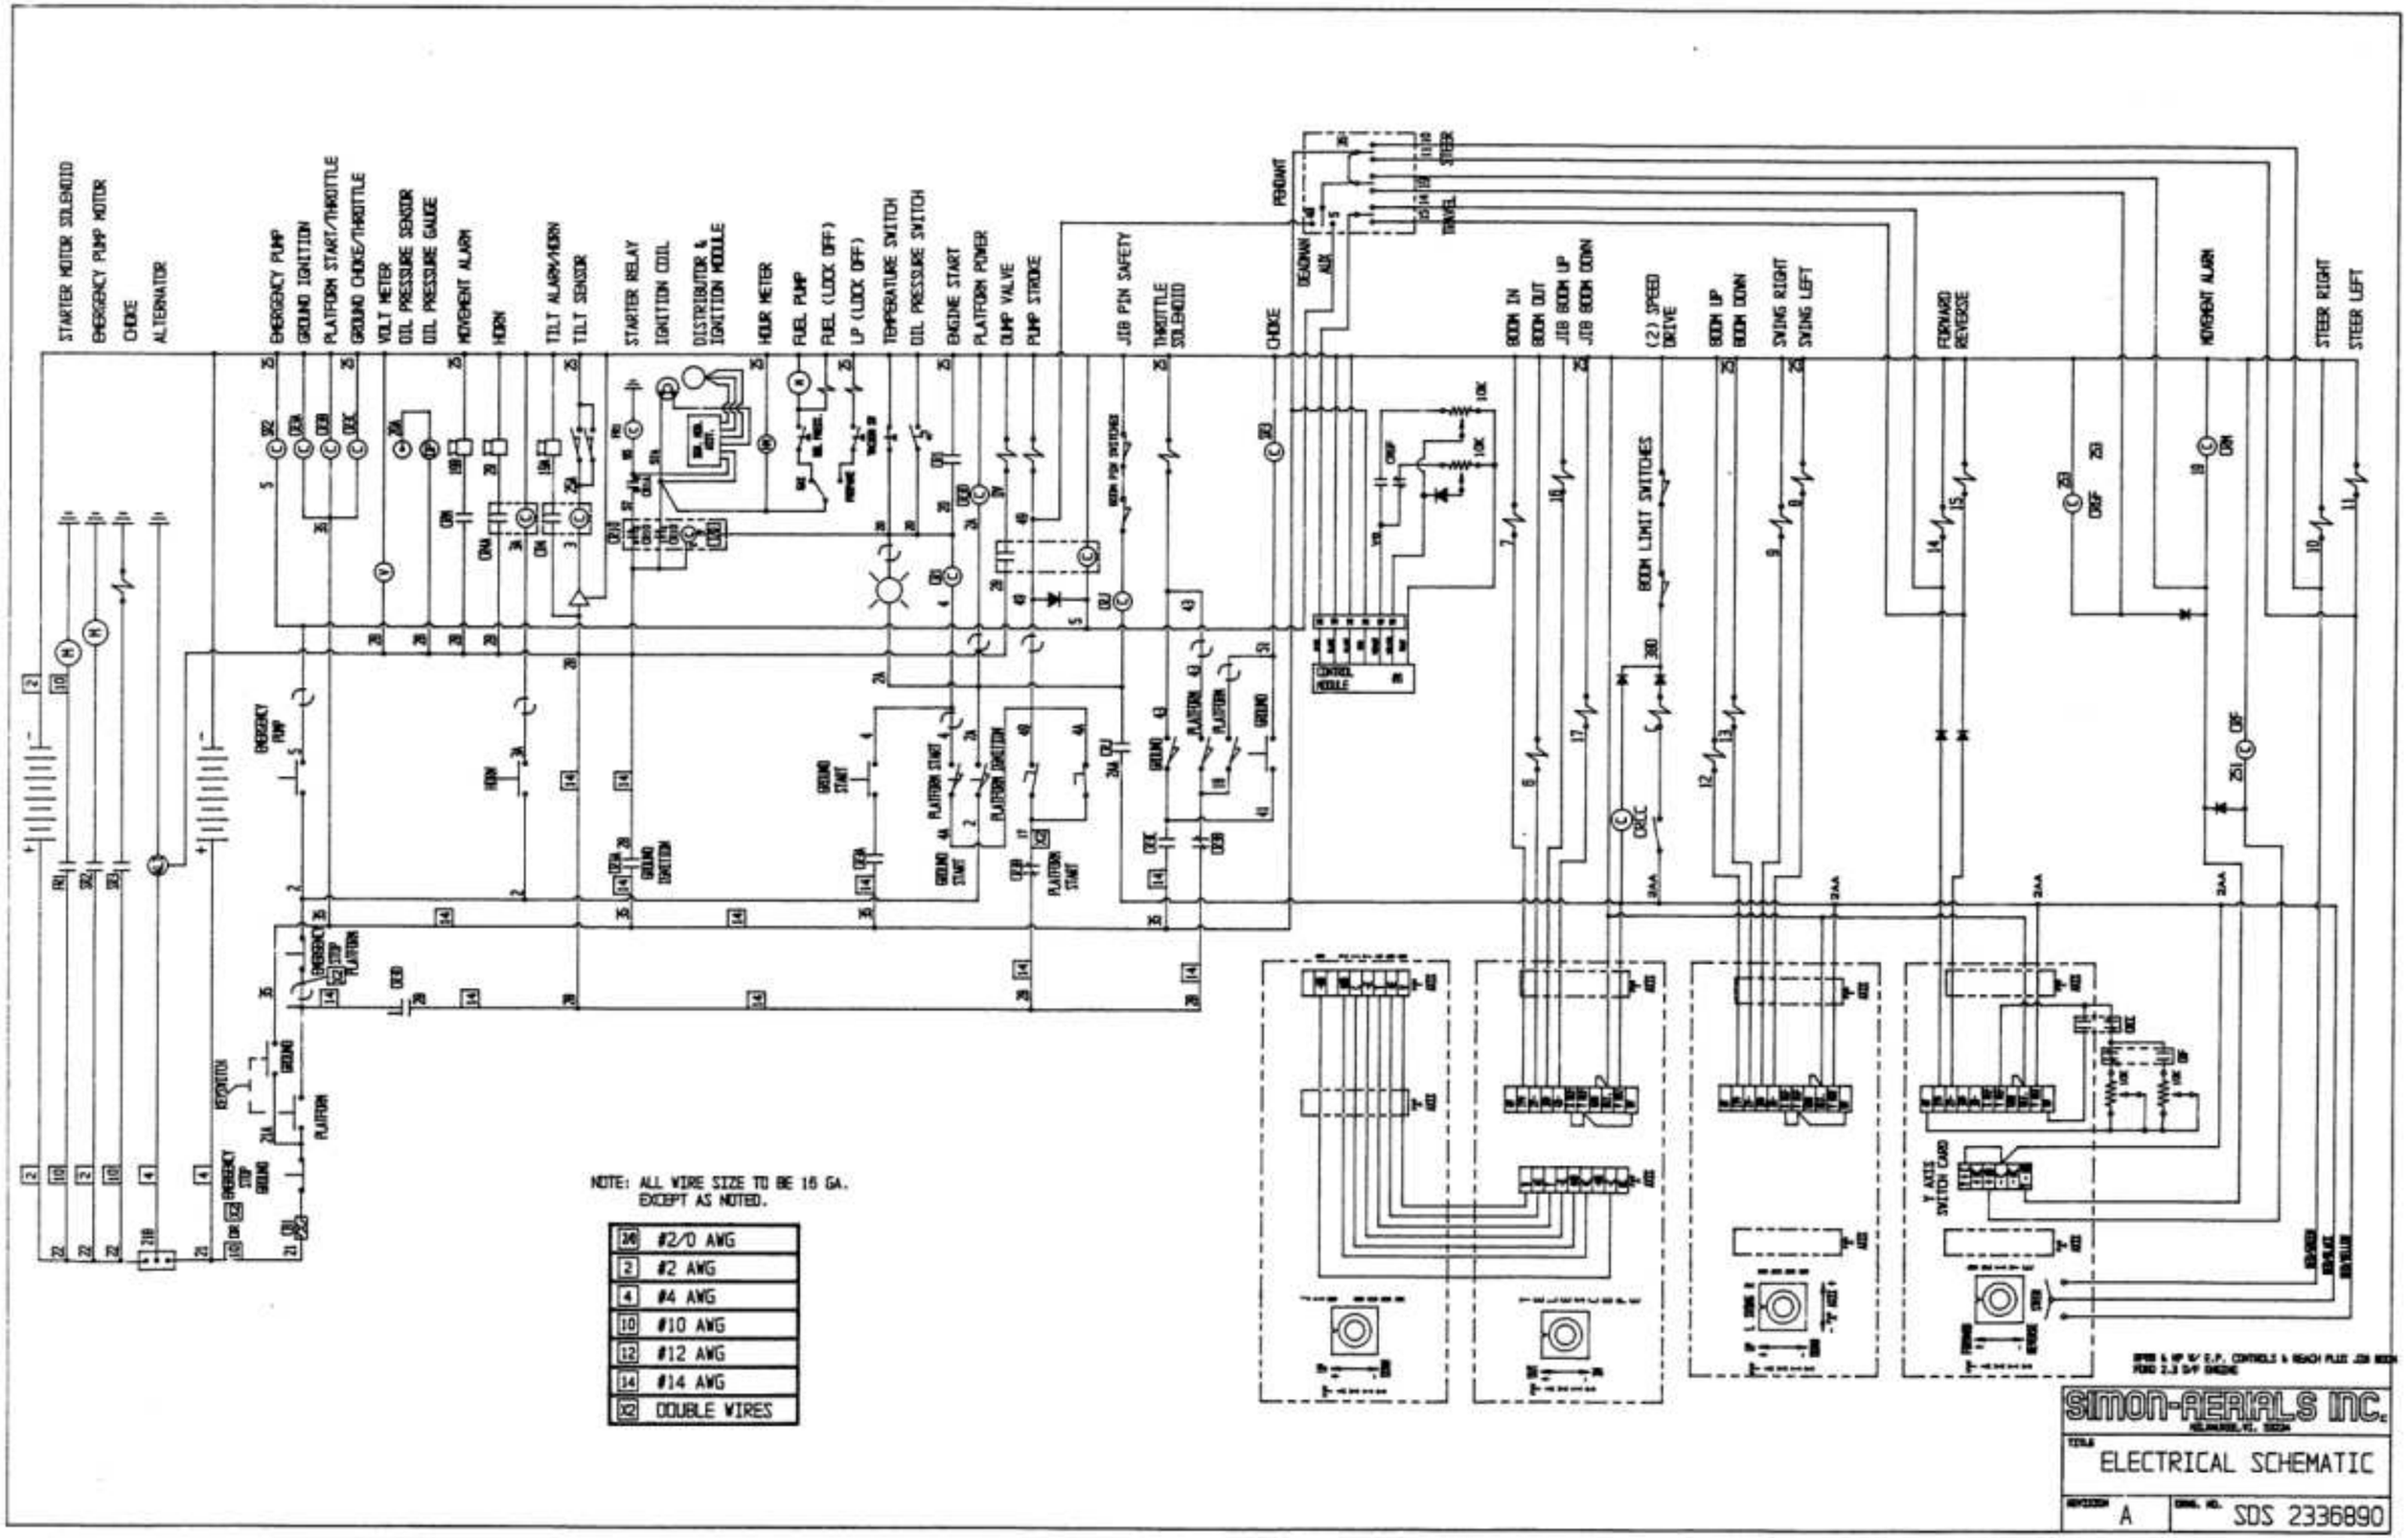

Order the manual at mid-west-tech.com >