
MODEL MP

With Extendable Axles
Featuring "Electro-Proportional"
Control System

SERVICE MANUAL

For Service Concerns Only:
Direct Phone Line to
Service Department,
8:00 AM to 5:00 PM
Central Time,
Monday thru Friday.

Phone (414) 355-3181

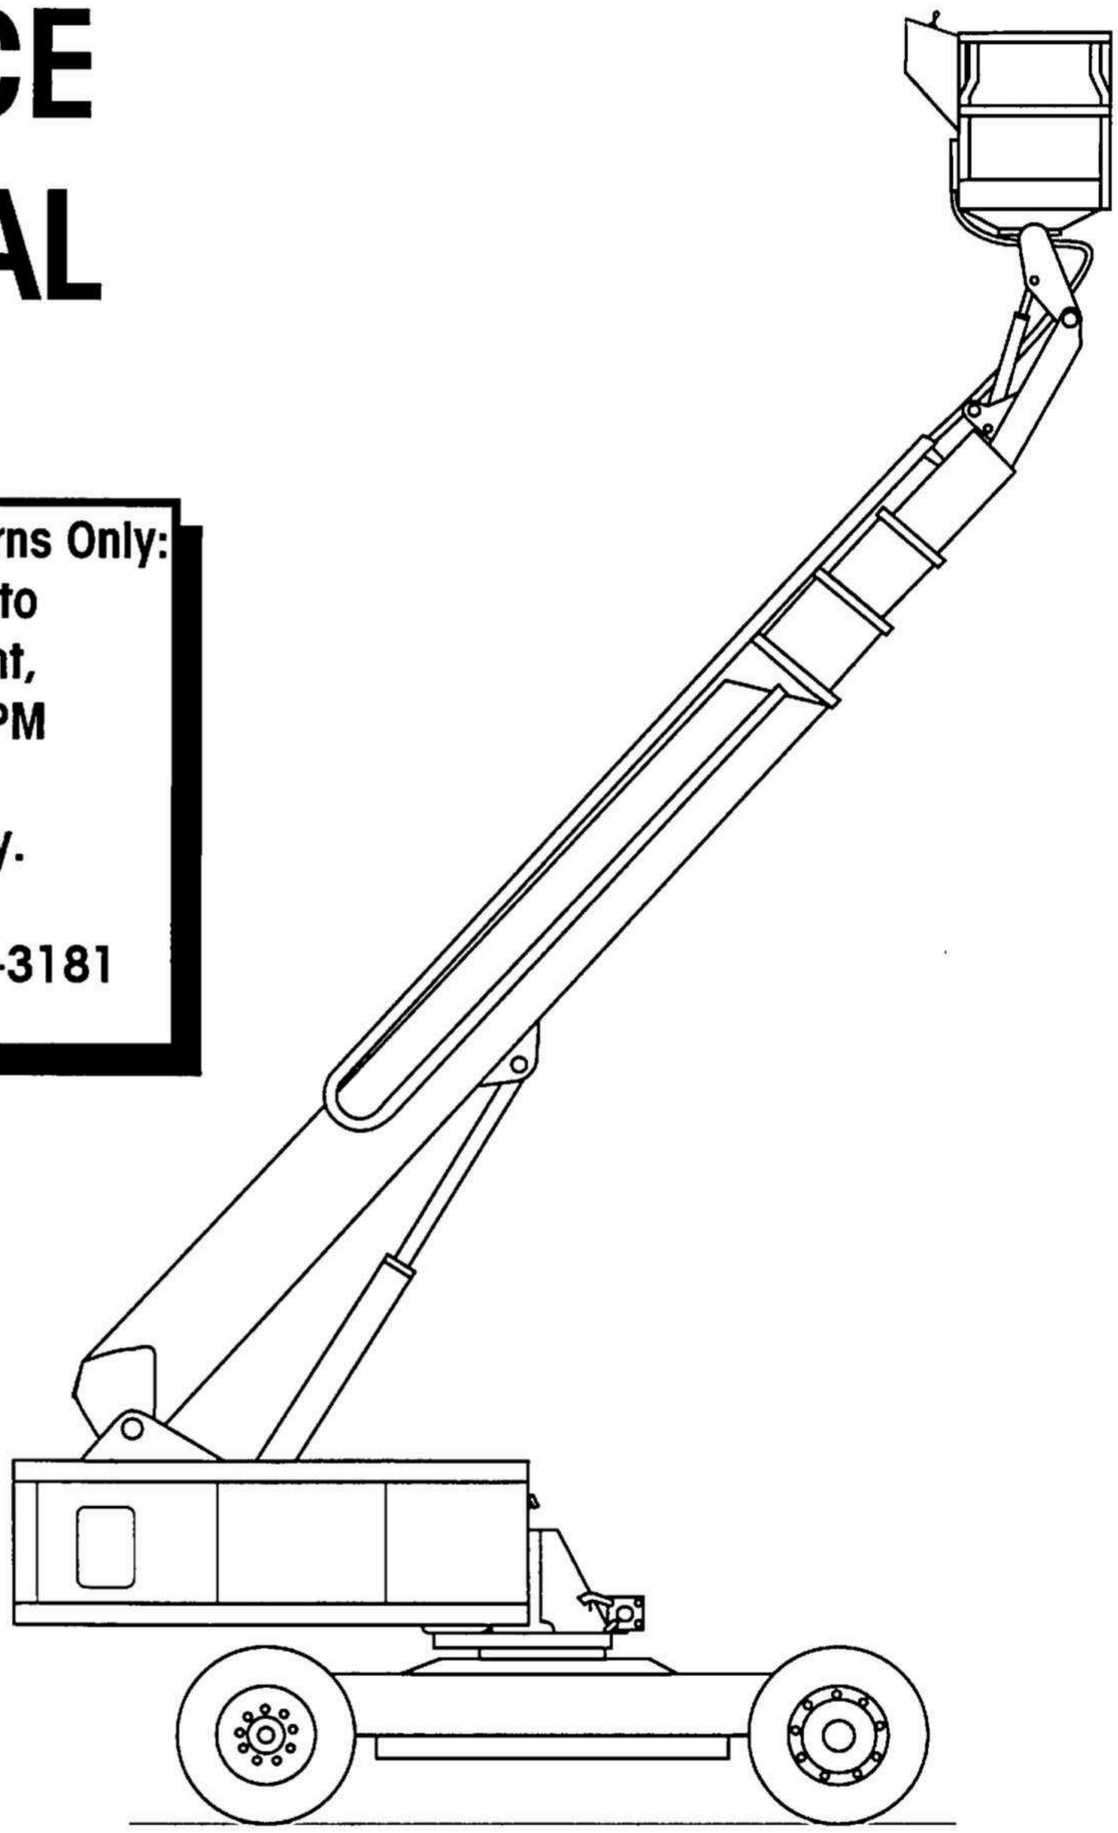

Art # A00.00130E

Part No. 89-103317 • Initial Issue dated Aug. 1995 •

MidWestTech | Terex Simon MP Electro Proportional Boom Lift Service Manual | Publication 89_103317

Order the manual at mid-west-tech.com >

Table of Contents

Introduction vii
Machine Specifications MPH 80 ix
Machine Specifications MP 95 x
Machine Specifications MP 110 xi
Machine Component Locator xii
Undercarriage Component Locator xiii
Superstructure Component Locator xiv
Boom Component Locator (Three Piece Boom) xv
Boom Component Locator (Four Piece Boom) xvi
Platform Component Locator xvii
Lubrication Chart xviii
Lubrication Diagram xix

Section 1: Transportation and Emergency Procedures

Transporting the Machine 1-3
- Towing Procedures 1-3
- Truck or Trailer Transport 1-3

Unloading Procedures 1-5
Emergency System and Procedures 1-7
- Emergency Pump 1-7
- Unpowered Emergency Movement 1-7
- Emergency Lowering 1-8

Section 2: Hydraulic System

Hydraulic Fluid 2-5
- Handling Precautions 2-5
- Fluid Recommendations 2-5
- Fluid Contamination Checks 2-5
- System Flushing Procedure 2-6

Hydraulic System Components 2-7
- Electro-Proportional Circuit 2-7
- Hydraulic Pump 2-7
  - Hydraulic Pump Adjustment 2-7
- Emergency Pump 2-7
  - Emergency Pump Adjustment 2-7
- Ground Valve Bank Assembly 2-9
  - Inlet Section 2-9
  - End Cover (Adapter Manifold) 2-9
  - Valve Assembly 2-9
  - Operation of Valve Assembly 2-9
  - Maintenance 2-9
    - Hydraulic Circuit Line Check 2-9
    - Valve Assembly 2-10
- Hydraulic Swivel 2-10
- Undercarriage Valves 2-11
  - Drive Relief Valve 2-11
  - Drive Valve Assembly 2-11
    - Solenoid Valve 2-11
    - Selector Valve 2-11

MidWestTech | Terex Simon MP Electro Proportional Boom Lift Service Manual | Publicatio... Order the manual at mid-west-tech.com >

Table of Contents (Continued)

Hydraulic System Components (Continued)
Undercarriage Valves (Continued)
Drive Valve Assembly Continued)
Flow Divider/ Combiner Valve 2-11
Gate Valve 2-12
Motion Control Valve 2-12
Flow Control Valve 2-12
Selector Valve Assembly 2-12
Selector Valve 2-12
Check Valve 2-12
Hydraulic Fluid Reservoir 2-13
Hydraulic Reservoir Maintenance 2-13
High Pressure Filter 2-13
Boom Lift System 2-14
Boom Lift Valve Segment 2-14
Flow Control Valve 2-15
Flow Control Valve Adjustment 2-15
Lift Cylinder 2-15
Boom Telescope System 2-16
Boom Telescope Valve Segment 2-16
Telescope Cylinder 2-17
Pressure Relief Valve 2-17
Superstructure Swing System 2-18
Swing Valve Segment 2-18
Swing Drive/ Reducer Assembly 2-19
Swing Drive/ Reducer Assembly Adjustment 2-19
Integral Brake Assembly 2-19
Swing System Maintenance 2-19
Platform Rotate System 2-20
Rotate Control Valve 2-20
Check Valve 2-20
Rotary Actuator 2-21
Rotary Actuator Maintenance 2-21
Platform Rotator Manifold 2-21
Platform Levelling System 2-22
Levelling Control Valve 2-22
Check Valve 2-22
Master Levelling Cylinder 2-23
Slave Levelling Cylinder 2-23
Relief Valve 2-23
Drive System 2-24
Drive Motor and Brake Assembly 2-25
Drive Valve Segment 2-26
Drive Valve Assembly 2-26
Toggle Switch on the Remote Control Pendant 2-26
Drive Control Lever 2-26
Steer System 2-27
Selector Valve Assembly 2-27
Steer Valve Segment 2-27
Steer Cylinder 2-28
Steer System Maintenance 2-28
Axle Extend System 2-28
Axle Extend Cylinder 2-29
Selector Valve Assembly 2-29
Steer Valve Segment 2-29

TABLE OF CONTENTS

MidWestTech | Terex Simon MP Electro Proportional Boom Lift Service Manual | Publicatio... Order the manual at mid-west-tech.com >

Table of Contents (Continued)

Section 3: Electrical System

Electrical System 3-3
- Battery 3-3
  - Battery Maintenance (In Storage) 3-3
  - Battery Maintenance (In Use) 3-3
  - Battery Preventive Maintenance 3-4
  - Battery Replacement 3-4
- Movement Alarm 3-4
- Tilt Alarm 3-4
  - Tilt Alarm Test 3-5
  - Tilt Alarm Adjustment 3-5
- Horn 3-5
- Electric Swivel 3-5
- Relay 3-5
- Circuit Breaker 3-6
- Limit Switch 3-6
- Emergency Pump 3-6
- Emergency Stop Button 3-6
- Remote Control Pendant Switch Removal 3-6
- Ground Control Box Switch Removal 3-6
- Platform Control Console Switch Removal 3-6
- Drive Controller 3-7
- Boom Telescope Controller 3-8
- Boom Lift/ Swing Controller 3-10
- Creep Speed Adjustments 3-12
- Boom Adjustment(Ground Control) 3-12
- Superstructure Swing Adjustment (Platform Control) 3-12
- Boom Lift Adjustment (Platform Control) 3-12

Section 4: Mechanical Components

Mechanical Components 4-3
- Tires 4-3
  - Changing Tires 4-3
- Wheels and Lug Nuts 4-3
- Drive Hub Assembly 4-4
- Steer Cylinder Pins 4-5
  - Rod End Cylinder Pin Replacement 4-5
  - Base End Cylinder Pin Replacement 4-5
- Steer Cylinder 4-5
  - Steer Cylinder Seal Replacement 4-5
- Steer Arm Pin 4-6
  - Steer Arm Pin Replacement 4-6
- Tie Rod Assembly 4-6
  - Tie Rod Assembly Replacement 4-6
- Axle Extend Assembly 4-7
  - Axle Extend Cylinder 4-7
  - Axle Extend Cylinder Replacement 4-7
  - Axle Extend Cylinder Seal Repacement 4-9
- Mechanical Axle Stop 4-9
- Axle Tube Assembly Replacement 4-10
- Superstructure 4-17
- Hoses and Cables 4-17

MidWestTech | Terex Simon MP Electro Proportional Boom Lift Service Manual | Publicatio... Order the manual at mid-west-tech.com >

ALL SWITCHES AND CONTACTS SHOWN WITH THE MACHINE IN THE STOWED POSITION AND THE GROUND PLATFORM SWITCH IN THE OFF POSITION

NOTE: ALL WIRE SIZE TO BE 16 GA. EXCEPT AS NOTED.

30	#2/0 AWG
2	#2 AWG
4	#4 AWG
10	#10 AWG
12	#12 AWG
14	#14 AWG
X2	DOUBLE WIRES

SIMON-AERIALS INC.

TITLE: ELECTRICAL SCHEMATIC
ELEC. PROPORTIONAL MP-110

REVISION: A

DWG. NO.: SDS 2331140

Order the manual at mid-west-tech.com >