
RP 46 "Reach Plus"

Featuring "Electro-Proportional" Control System

SERVICE MANUAL

For Service Concerns Only
Direct Phone Line to
Service Department,
8:00 AM to 5:00 PM
Central Time,
Monday thru Friday.

Phone (414) 355-3181

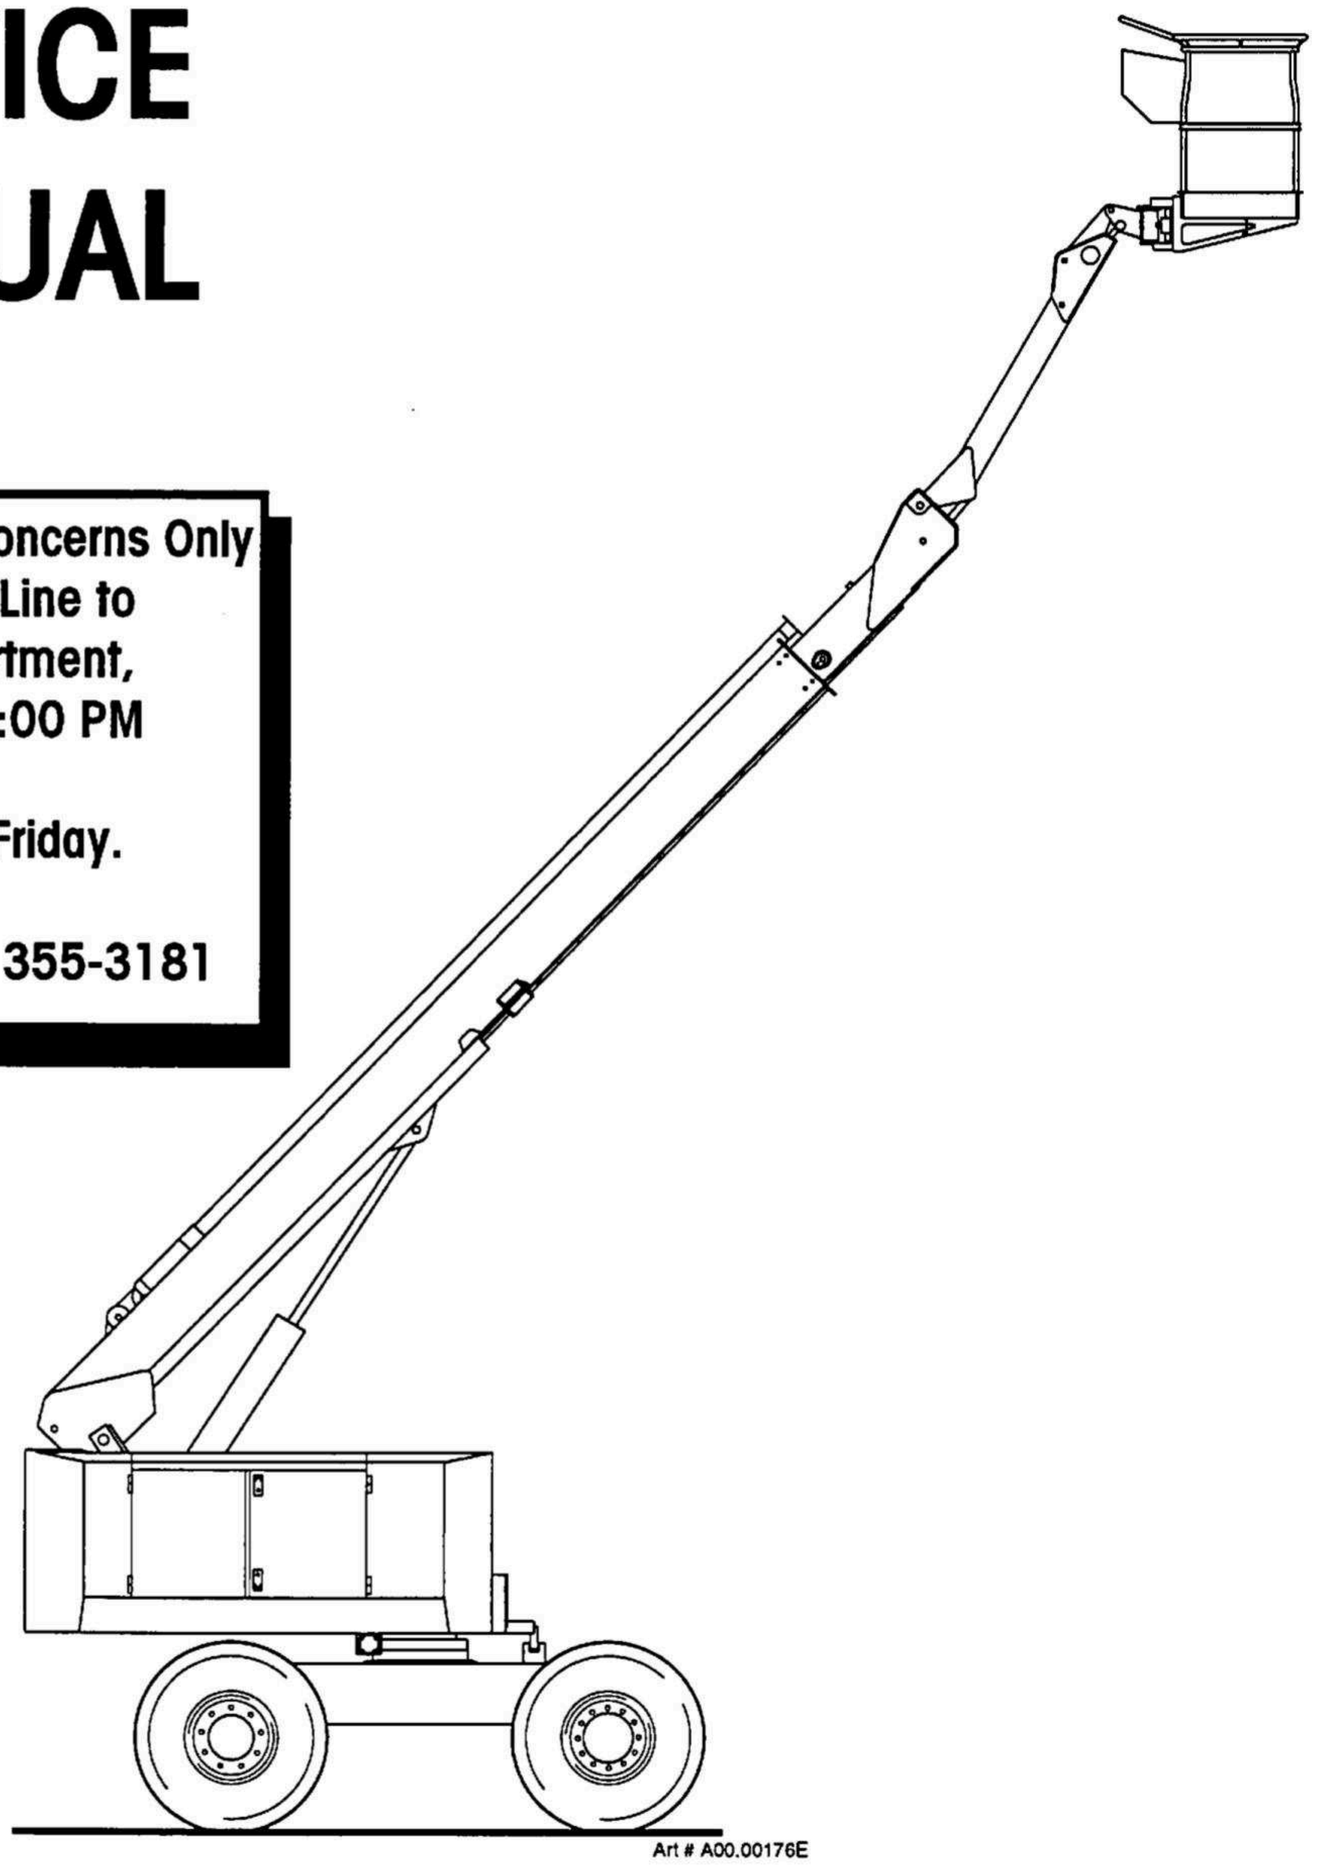

Art # A00.00176E

Part No. 89-145307 • Rev. "0.1" dated June 1996 •

MidWestTech | Terex RP 46 Reach Plus Electro Proportional Boom Lift Service Manual | Publication 89_145307

Order the manual at mid-west-tech.com >

Table of Contents

Introduction vii
Machine Specifications ix
Machine Component Locator x
Undercarriage Component Locator xi
Superstructure Component Locator xii
Boom Component Locator xiii
Platform Component Locator xv
Lubrication Chart xvi
Lubrication Diagram xvii

Section 1: Transportation and Emergency Procedures

Transporting the Machine 1-3
Towing Procedures 1-3
Truck or Trailer Transport 1-3
Unloading Procedures 1-5
Emergency System and Procedures 1-7
Emergency Electrical Pump 1-7
Unpowered Emergency Movement 1-7
Emergency Procedures 1-8

Section 2: Hydraulic System

Hydraulic Fluid 2-4
Handling Precautions 2-4
Fluid Recommendations 2-4
Fluid Contamination Checks 2-4
System Flushing Procedure 2-5
Hydraulic System Components 2-7
Electro-Proportional Circuit 2-7
Hydraulic Pump 2-7
Main Hydraulic Pump (Earlier Models) 2-7
Main Hydraulic Pump Adjustment 2-8
Main Hydraulic Pump (Current Production) 2-9
Pump Adjustment (Current Production) 2-10
Main Pump Replacement (Current Production) 2-11
Emergency Pump 2-11
Emergency Pump Adjustment 2-11
Emergency Pump Filter 2-11
Ground Valve Bank Assembly 2-12
Inlet Section 2-12
End Cover (Adapter Manifold) 2-12
Main Valve Segment 2-12
Operation 2-13
Maintenance 2-13
Hydraulic Circuit Line Check 2-13
Main Valve Segment 2-13
Drive/ Brake Control Valve Assembly 2-14
Motion Control Valve 2-14
Brake Needle Valve 2-14
Shuttle Valve 2-15
Pressure Reducing Valve 2-15
Cross Port Relief Manifold 2-15
Stop Cushion Solenoid Valve 2-15

MidWestTech | Terex RP 46 Reach Plus Electro Proportional Boom Lift Service Manual | P... Order the manual at mid-west-tech.com >

Table of Contents (Continued)

Section 2: Hydraulic System (Continued)

Hydraulic System Components (Continued)
High Pressure Filter (Earlier Models) 2-15
High Pressure Filter Element 2-15
Hydraulic Filter (Current Production) 2-16
Return Filter (Current Production) 2-16
High Pressure Filter (Current Production) 2-16
Hydraulic Fluid Reservoir 2-16
Hydraulic Reservoir Maintenance 2-16
Boom Lift System 2-17
Boom Lift Valve Segment 2-17
Flow Control Valve 2-17
Flow Control Valve Adjustment 2-17
Lift Cylinder 2-17
Boom Telescope (Extend) System 2-18
Boom Extend Valve Segment 2-18
Pressure Relief Valve 2-18
Telescope (Extend) Cylinder 2-18
Superstructure Swing System 2-19
Swing Valve Segment 2-19
Double Counterbalance Valve (Swing) 2-19
Swing Drive Motor/ Reducer Assembly 2-19
Platform Rotate System 2-20
Rotate Control Valve 2-20
Double Relief/ Pilot Operated Check Valve 2-20
Rotary Actuator 2-21
Rotary Actuator Maintenance 2-21
Platform Level System 2-21
Level Control Valve 2-21
Double Pilot Operated Check Valve 2-21
Master Level Cylinder 2-22
Slave Level Cylinder 2-22
Relief Valves 2-22
Steer System 2-23
Steer Valve Segment 2-23
Hydraulic Swivel 2-23
Steer Cylinder 2-23
Steer Disconnect Knob (option) 2-23
Steer System Maintenance 2-23
Jib Boom System 2-24
Jib Boom Valve Segment 2-24
Jib Articulation Cylinder 2-24

MidWestTech | Terex RP 46 Reach Plus Electro Proportional Boom Lift Service Manual | P... Order the manual at mid-west-tech.com >

Table of Contents (Continued)


Section 3: Drive System

Drive System Components 3-3
- Drive Control Main Valve Segment 3-3
- Drive Motors 3-4
  - Front Wheel Motor 3-4
  - Rear Axle Drive Motor 3-4
- Rear Axle Assembly 3-5
  - Rear Axle Brake Adjustment 3-5
  - Rear Axle Assembly Maintenance 3-5
- Drive/ Brake Control Valve Assembly 3-6
  - Motion Control Valve 3-6
  - Brake Needle Valve 3-6
  - Shuttle Valve 3-6
  - Pressure Reducing Valve 3-6
  - Cross Port Relief Manifold 3-6
  - Stop Cushion Solenoid Valve 3-6


Section 4: Electrical System

Electrical System 4-3
- Batteries 4-3
  - Battery Maintenance (In Storage) 4-3
  - Battery Maintenance (In Use) 4-3
  - Battery Preventive Maintenance 4-4
  - Battery Replacement 4-4
- Movement Alarm 4-4
- Tilt Alarm 4-4
  - Tilt Alarm Test 4-4
  - Tilt Alarm Adjustment 4-5
- Relays 4-5
- Circuit Breakers 4-5
- Limit Switches 4-5
- Emergency Pump 4-5
- Emergency Stop Button 4-5
- Pendant Switch Removal 4-5
- Ground Control Cabinet Switch Removal 4-6
- Platform Console Switch Removal 4-6
- Drive/ Steer Controller 4-6
- Jib Boom/ Telescope Controller 4-7
- Boom/ Swing Controller 4-8

MidWestTech | Terex RP 46 Reach Plus Electro Proportional Boom Lift Service Manual | P... Order the manual at mid-west-tech.com >

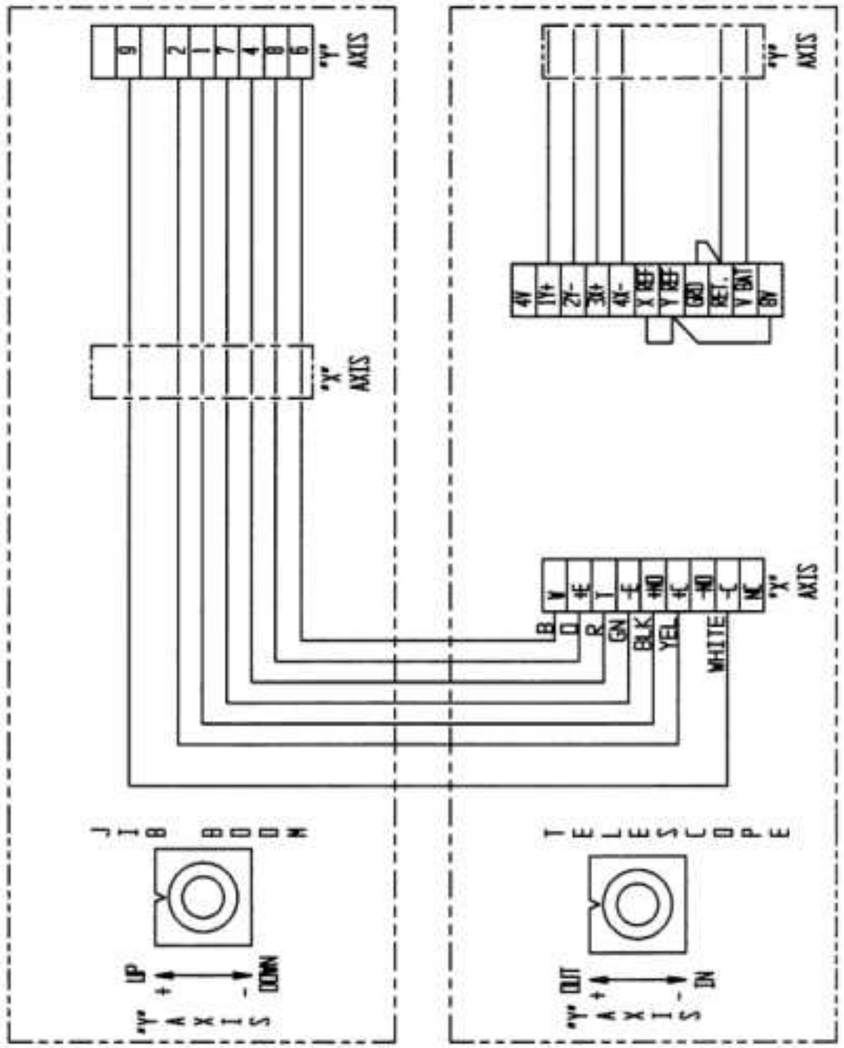

CURRENT WIRING

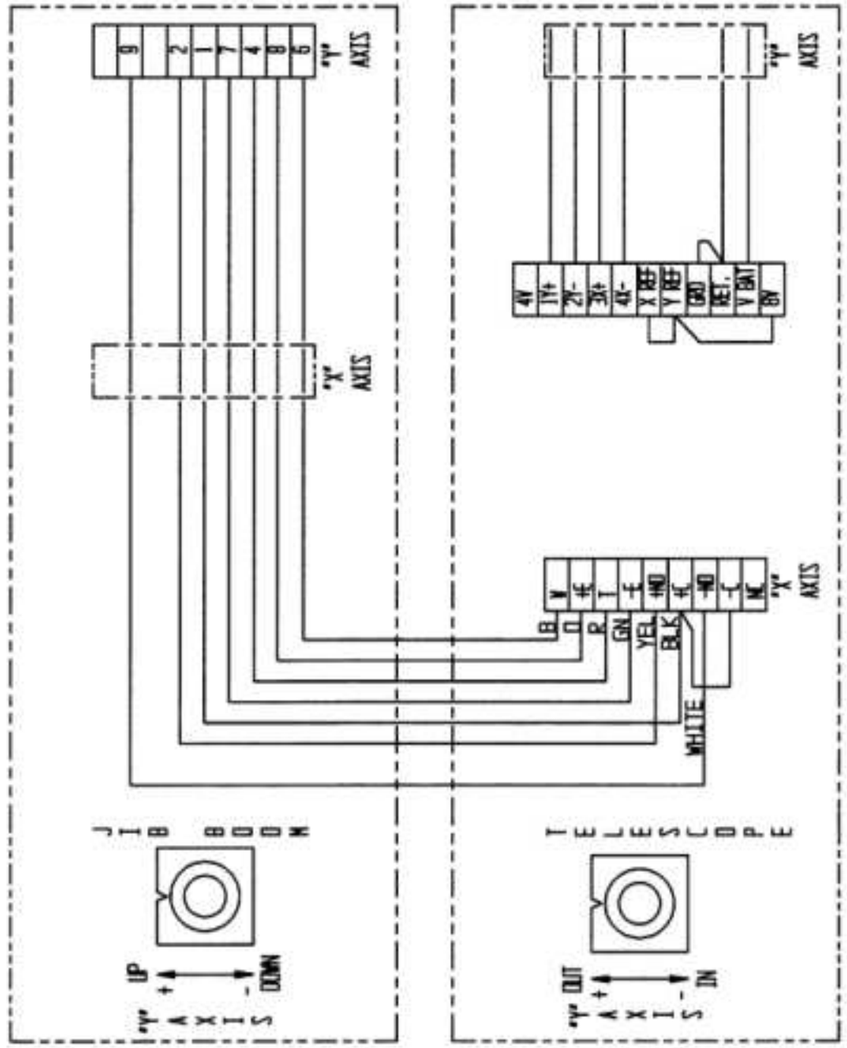

NEW WIRING

THIS WIRING CHANGE MUST BE DONE WITH EXTEND/RETRACT JOYSTICK REPLACEMENT

REF: RP46, RP66, RP120

WIRING CHANGES ARE AS FOLLOWS:

1. MOVE YEL WIRE TO NO+
2. MOVE BLK WIRE TO C+
3. MOVE WHITE WIRE TO NO-
4. ADD JUMPER FROM C+ TO C-

REL	JTS	12/16/96	ECN-02878
REV	BY	DATE	DESCRIPTION

DO NOT SCALE PRINT

ALL WELDS MUST BE IN ACCORDANCE WITH A.W.S. STANDARDS D1.1-1972,D14.1-70 OR D10.9-69

THIS DRAWING IS THE PROPERTY OF SIMON-AERIALS INC. AND ALL THE INFORMATION THEREON IS CONFIDENTIAL AND MUST NOT BE MADE PUBLIC, NOR COPIED, NOR USED TO THE DISADVANTAGE OF SIMON-AERIALS INC. AND IS SUBJECT TO RETURN ON DEMAND.

SIMON AERIALS INC.
MILWAUKEE, WI. 53224

TITLE: WIRING, JOYSTICK

CADKEY DRAWING DO NOT REVISE MANUALLY

SCALE	DRAWN	DATE	CHECKED	APPROVED	DRAWING NO.
FULL	JTS	12/16/96			B-2369400

IMPLIED TOLERANCE	
X.X	± .1
X.XX	± .05
X.XXX	± .015
FRACTIONAL	± 1/8
ANGULAR	± 0.5 deg.

Order the manual at mid-west-tech.com >