
RP 66 "Reach Plus"

Featuring "Electro-Proportional" Control System

SERVICE MANUAL

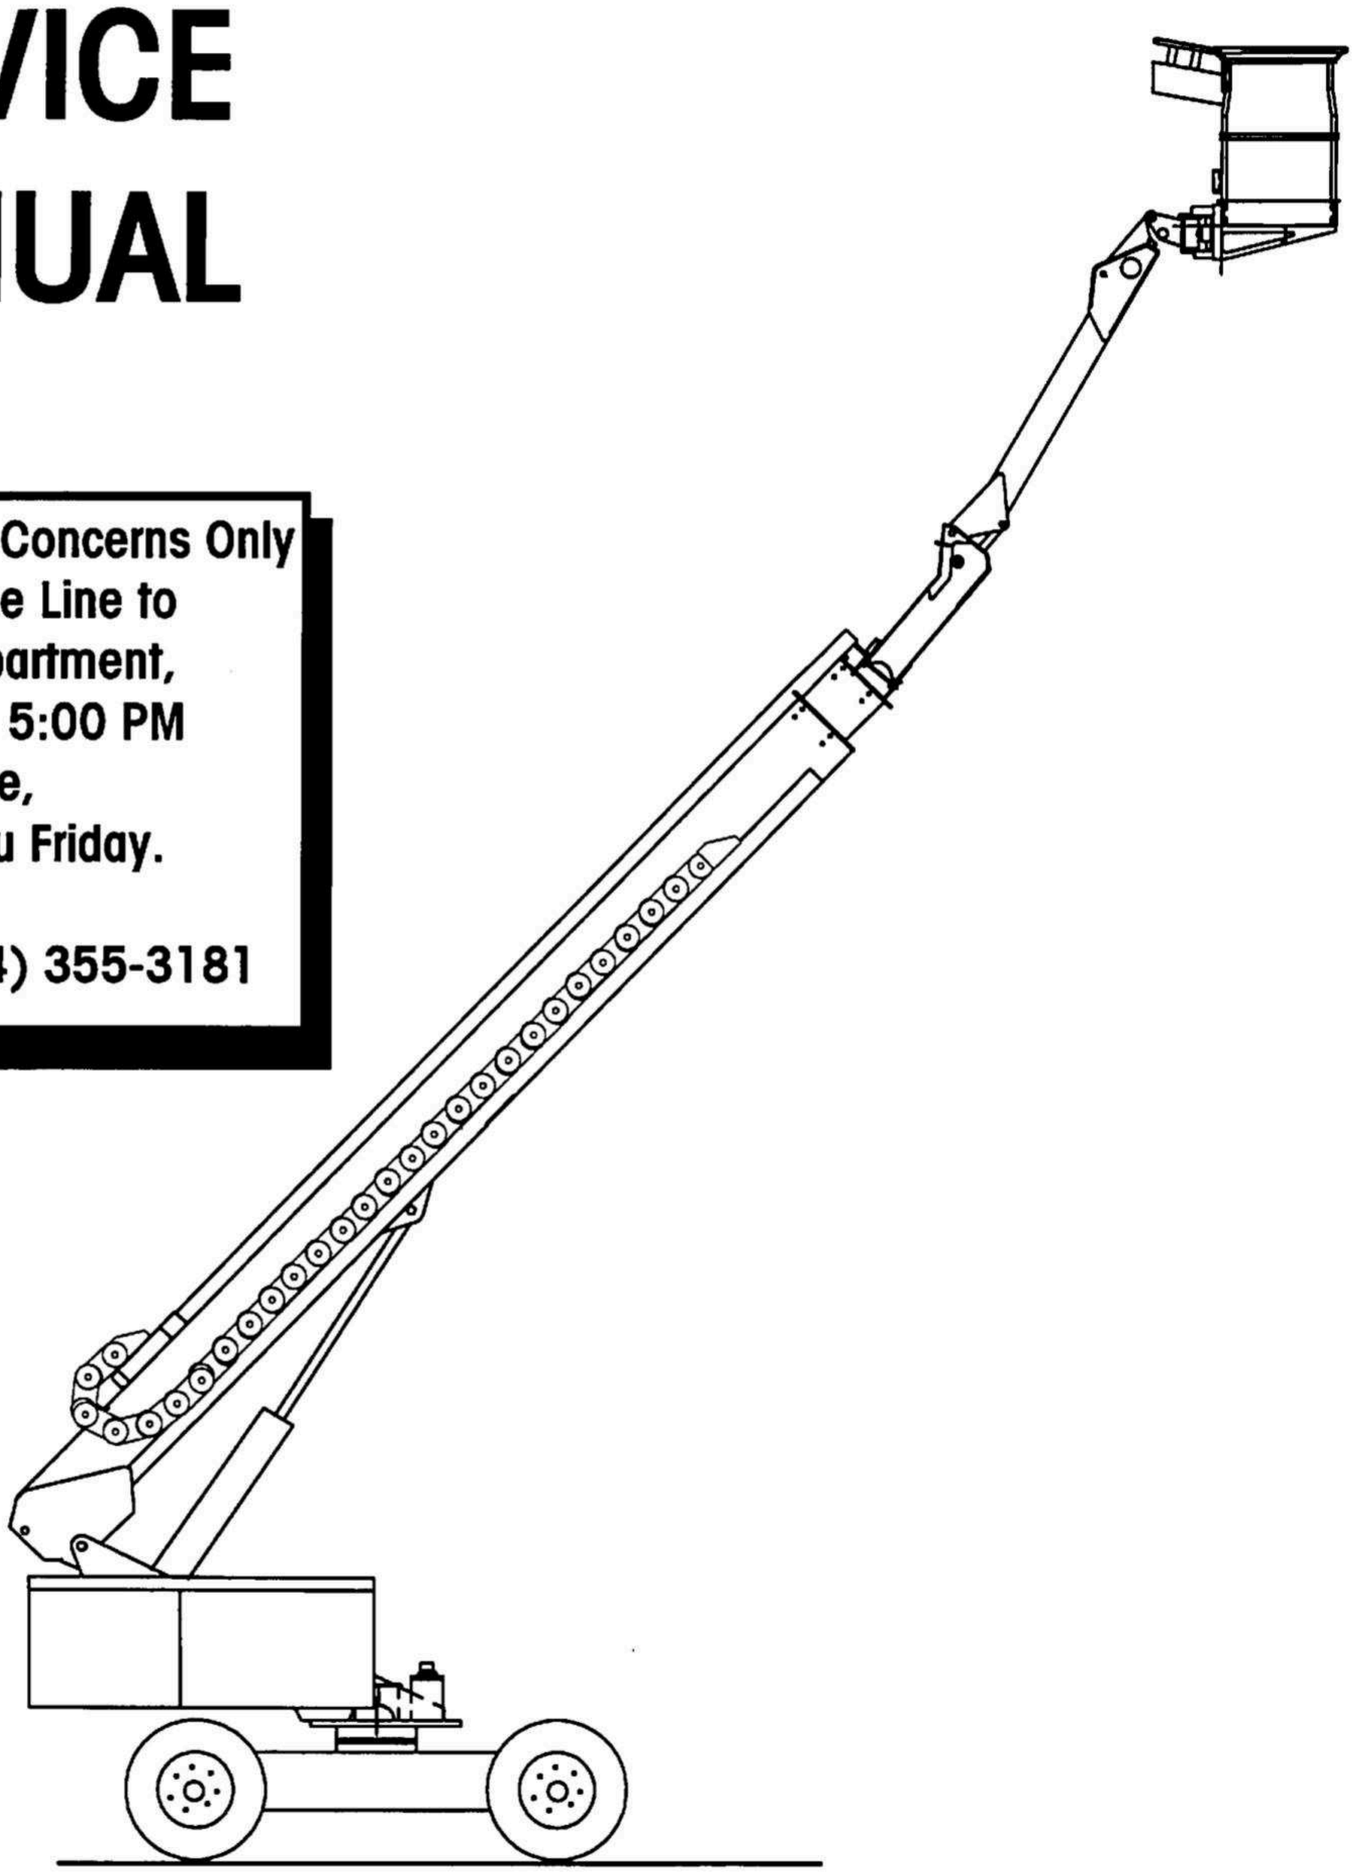

For Service Concerns Only
Direct Phone Line to
Service Department,
8:00 AM to 5:00 PM
Central Time,
Monday thru Friday.

Phone (414) 355-3181

Part No. 89-165307 • Initial Issue dated May, 1995 •

MidWestTech | Terex RP 66 Reach Plus Electro Proportional Boom Lift Service Manual | Publication 89_165307

Order the manual at mid-west-tech.com >

Table of Contents

Introduction vi
Machine Specifications viii
Machine Component Locator ix
Undercarriage Component Locator x
Superstructure Component Locator xi
Boom Component Locator xii
Platform Component Locator xiv
Lubrication Chart xvi
Lubrication Diagram xvii

Section 1: Transportation and Emergency Procedures

Transporting the Unit 1-3
Towing Procedures 1-3
Truck or Trailer Transport, Boom in Stow-*N*-Go™ Mode 1-4
Truck or Trailer Transport, Boom in Conventional Mode 1-6
Unloading Procedures 1-8
Emergency System and Procedures 1-11
Emergency Electrical Pump 1-11
Unpowered Emergency Movement 1-11
Emergency Lowering 1-12

Section 2: Hydraulic System

Hydraulic Fluid 2-5
- Handling Precautions 2-5
- Fluid Recommendations 2-5
- Fluid Contamination Checks 2-5
- System Flushing Procedure 2-6

Hydraulic System Components 2-9
- Electro-Proportional Circuit 2-9
- Hydraulic Pumps 2-9
  - Main Hydraulic Pump (Type 1) 2-9
    - Main Hydraulic Pump (Type 1) Adjustment 2-10
  - Main Hydraulic Pump (Type 2) 2-11
    - Main Hydraulic Pump (Type 2) Adjustment 2-13
- Emergency Pump 2-13
  - Emergency Pump Adjustment 2-13
- Ground Valve Bank Assembly 2-14
  - Inlet Section 2-14
  - End Cover (Adapter Manifold) 2-14
  - Main Valve Segment 2-14
  - Operation 2-15
  - Maintenance 2-15
  - Hydraulic Circuit Line Check 2-15
  - Main Valve Segment 2-15
- Valves 2-16
  - Drive Relief Valve 2-16
  - Drive Valve Assembly 2-16
  - Hi/ Low Speed Drive Valve 2-16
  - Flow Divider Valve Assembly 2-16
  - Motion Control Valve Assembly 2-16

MidWestTech | Terex RP 66 Reach Plus Electro Proportional Boom Lift Service Manual | P... Order the manual at mid-west-tech.com >

Table of Contents (Continued)

Section 2: Hydraulic System (Continued)

Hydraulic Fluid Reservoir 2-17
Hydraulic Reservoir Maintenance 2-17
High Pressure Filter 2-17
Boom Lift System 2-17
Boom Lift Valve Segment 2-17
Flow Control Valve 2-18
Flow Control Valve Adjustment 2-18
Lift Cylinder 2-18
Boom Telescope (Extend) System 2-18
Boom Extend Valve Segment 2-19
Pressure Relief Valve 2-19
Telescope (Extend) Cylinder 2-19
Superstructure Swing System 2-20
Swing Valve Segment 2-20
Swing Drive Motor/ Reducer Assembly 2-20
Swing Drive/ Reducer Assembly Adjustment 2-21
Swing System Maintenance 2-21
Steer System 2-22
Steer Valve Segment 2-22
Hydraulic Swivel 2-22
Steer Cylinder 2-22
Steer Disconnect Knob 2-22
Steer System Maintenance 2-23
Jib Boom System 2-23
Jib Boom Valve Segment 2-23
Jib Cylinder 2-23
Platform Rotate System 2-24
Rotate Control Valve 2-24
Rotator Manifold Check/ Relief Valve 2-24
Rotary Actuator 2-24
Rotary Actuator Maintenance 2-24
Platform Rotator Manifold 2-24
Platform Level System 2-25
Level Control Valve 2-25
Double Pilot Operated Check Valve 2-25
Master Level Cylinder 2-26
Slave Level Cylinder 2-26
Relief Valves 2-26

MidWestTech | Terex RP 66 Reach Plus Electro Proportional Boom Lift Service Manual | P... Order the manual at mid-west-tech.com >

Table of Contents (Continued)


Section 3: Drive System

Drive System Components 3-3
- Drive Motor and Brake Assembly 3-3
- Drive Valve Segment 3-4
- Drive Valve Assembly 3-4
  - Selector Valve 3-4
  - Motion Control Valve Assembly 3-4
  - Motion Control Valve 3-4
  - Flow Control Valve 3-4
  - Flow Divider Valve Assembly 3-5
  - Flow Divider/ Combiner Valve 3-5
  - Gate (Globe) Valve 3-5
- Drive Relief Valve 3-5
- Brake Metering Valve 3-5
  - Brake Metering Valve Adjustment 3-5
- Toggle Switch on the Pendant Control 3-5
- Platform Control Handle (Joystick) 3-5

Section 4: Electrical System

Electrical System 4-3
- Batteries 4-3
  - Battery Maintenance (In Use) 4-3
  - Battery Preventive Maintenance 4-4
  - Battery Replacement 4-4
- Movement Alarm 4-4
- Tilt Alarm 4-4
  - Tilt Alarm Test 4-4
  - Tilt Alarm Adjustment 4-5
- Relays 4-5
- Circuit Breakers 4-5
- Limit Switches 4-5
- Emergency Pump 4-5
- Emergency Stop Button 4-5
- Pendant Switch Removal 4-5
- Ground Control Cabinet Switch Removal 4-6
- Platform Console Switch Removal 4-6
- Drive/ Steer Controller 4-6
- Jib Boom/ Telescope Controller 4-7
- Boom/ Swing Controller 4-8

MidWestTech | Terex RP 66 Reach Plus Electro Proportional Boom Lift Service Manual | P... Order the manual at mid-west-tech.com >

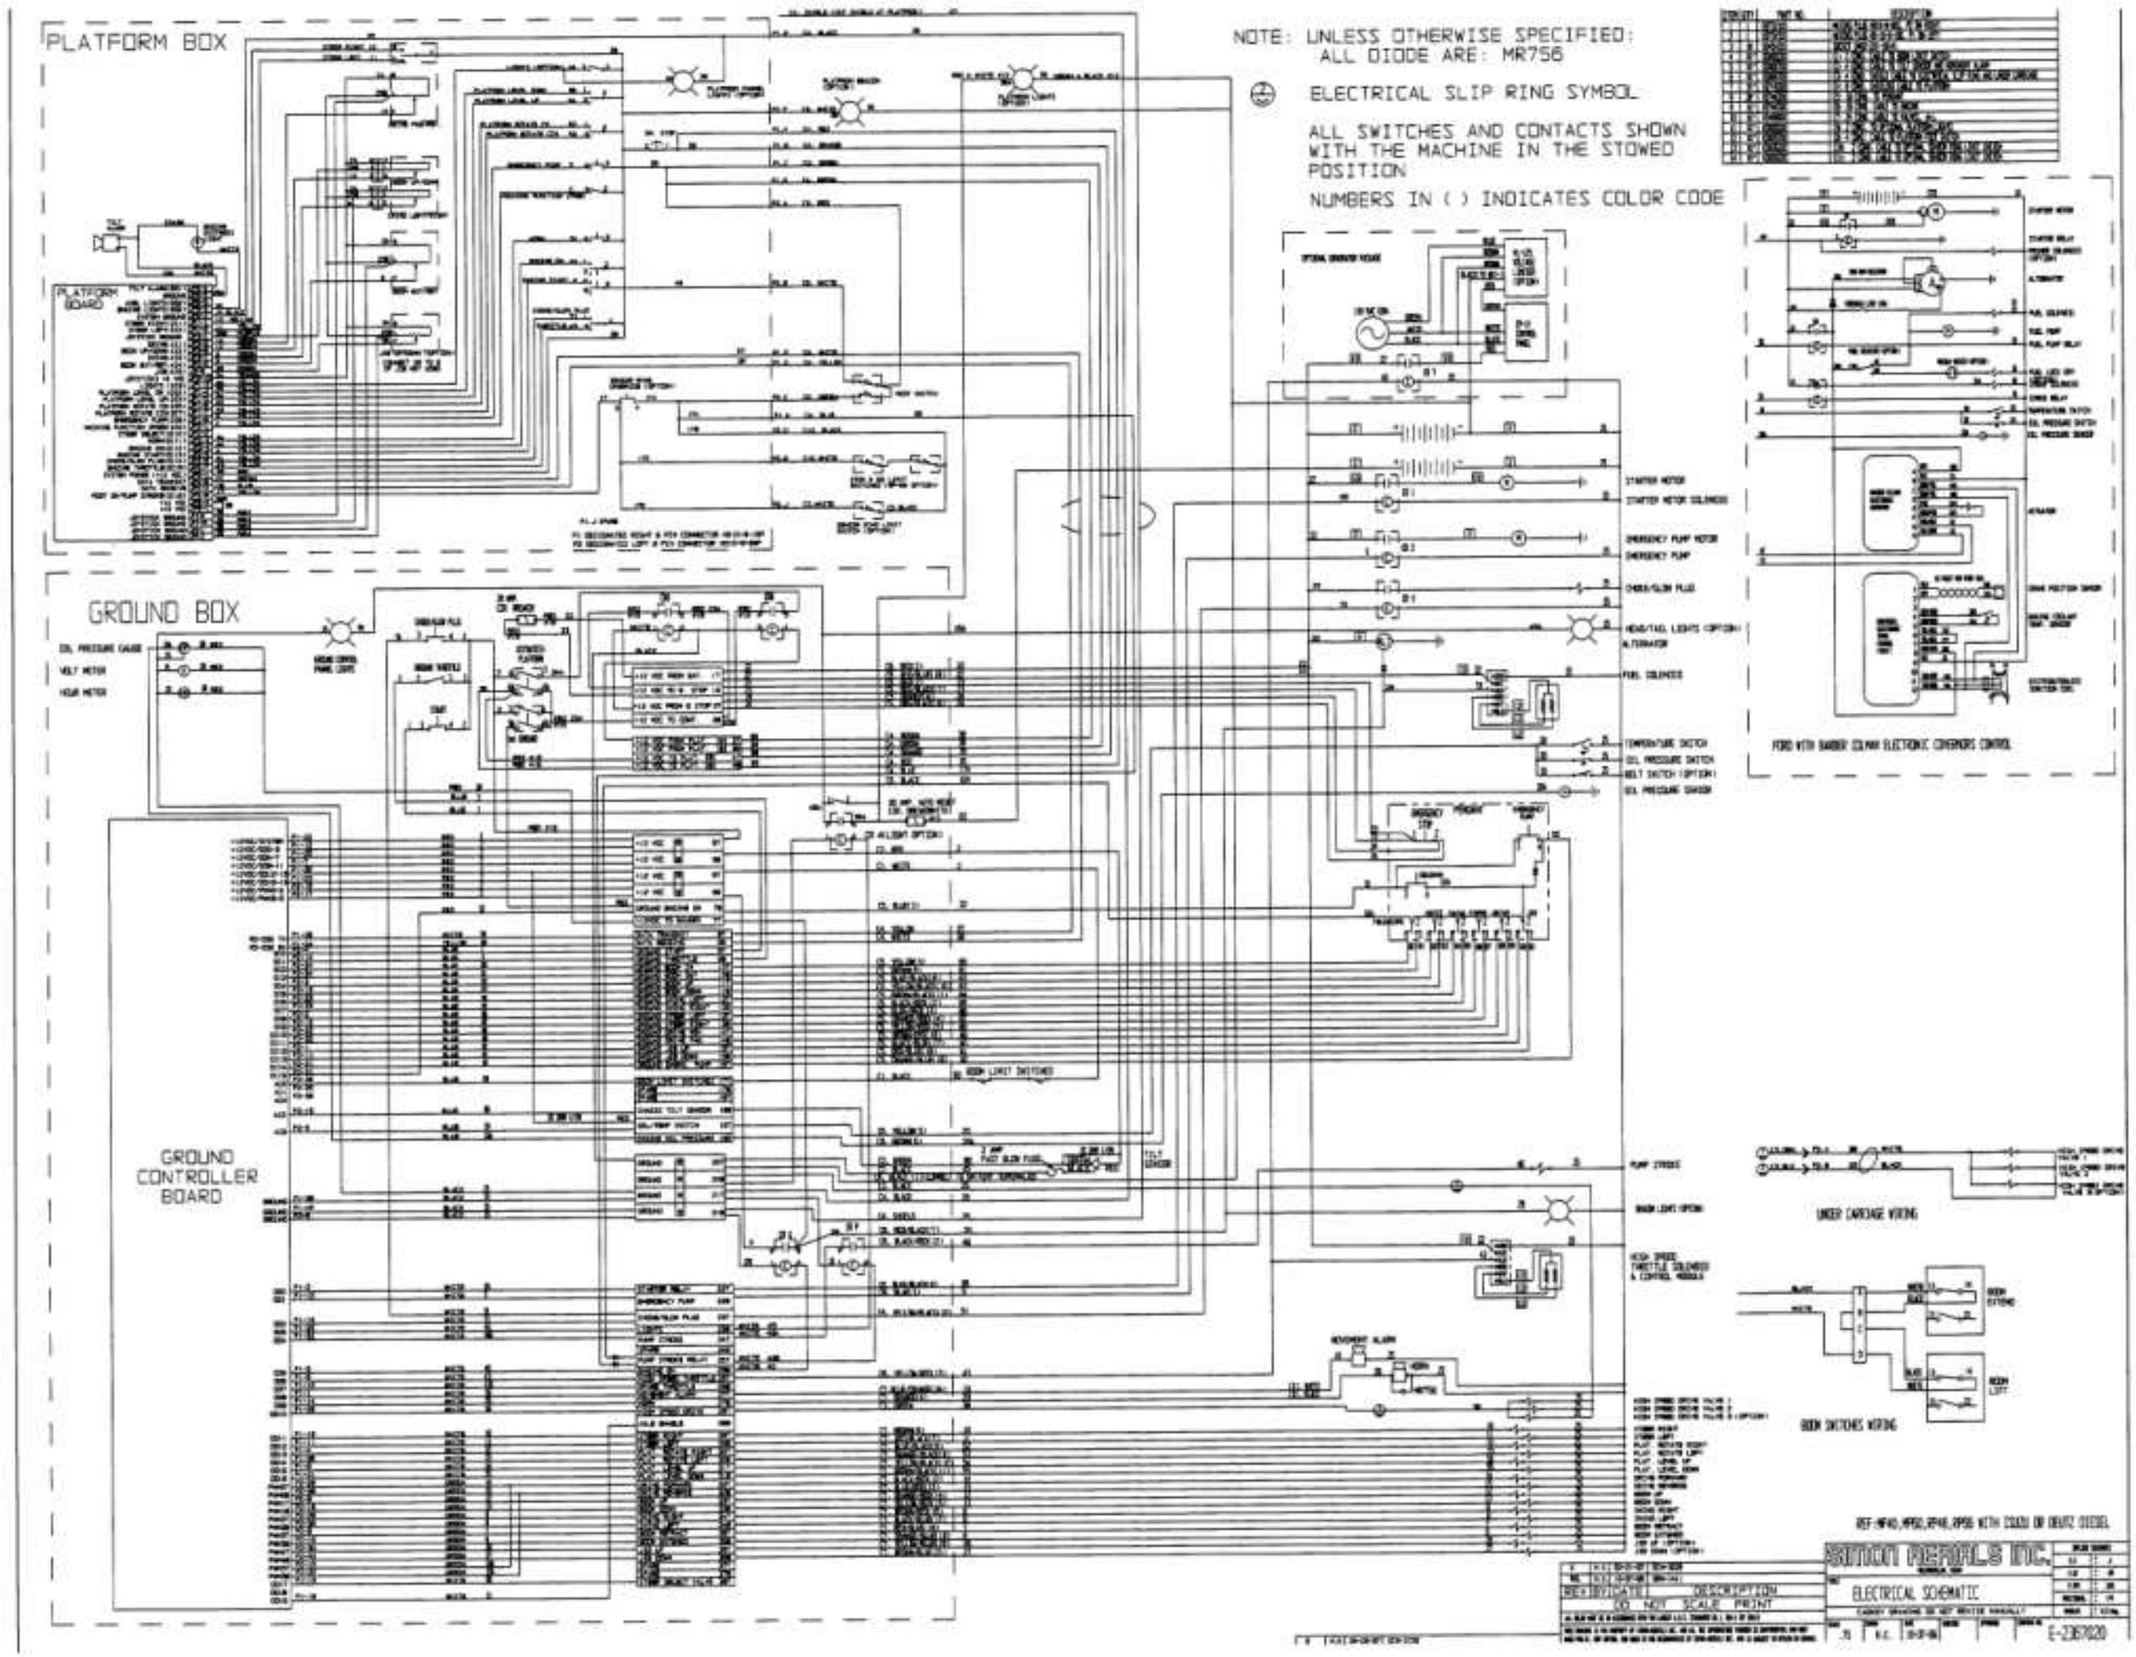

Order the manual at mid-west-tech.com >