TRAILBLAZER T-60

SERVICE MANUAL

For Service Concerns Only
Direct Phone Line to
Service Department,
8:00 AM to 5:00 PM
Central Time,
Monday thru Friday.

Phone (414) 355-3181



Art # A00.00206E

Part No. 89-260107 • Initial Issue dated April, 1995 •

MidWestTech | Terex Trailblazer T-60 Boom Lift Service Manual | Publication 89_260107

Order the manual at mid-west-tech.com >

Table of Contents

Introduction vi
Machine Specifications viii
Machine Component Locator ix
Undercarriage Component Locator x
Superstructure Component Locator xi
Boom Component Locator xii
Platform Component Locator xiii
Lubrication Chart xiv
Lubrication Diagram xv

Section 1: Transportation and Emergency Procedures

Transporting the Unit 1-3
Unloading Procedures 1-4
Emergency System and Procedures 1-5
Emergency Pump 1-5
Unpowered Emergency Movement 1-5
Emergency Lowering 1-6

Section 2: Hydraulic System

Hydraulic Fluid 2-5
Handling Precautions 2-5
Fluid Recommendations 2-5
Hydraulic Fluid Analysis 2-5
System Flushing Procedure 2-6
Hydraulic System Components 2-9
Hydraulic Pump 2-9
Main Hydraulic Pump 2-9
Main Hydraulic Pump Adjustment 2-10
Emergency Pump 2-11
Emergency Pump Adjustment 2-11
Drive/ Steer/ Selector Manifold Assembly 2-11
Directional Control Valves 2-11
Drive/ Brake Valve Assembly 2-12
Motion Control Valve 2-12
Brake Needle Valve 2-12
Brake Shuttle Valve 2-12
Pressure Reducing Valve 2-13
Double Relief Manifold 2-13
Drive Cushion Solenoid Valve 2-13
High Pressure Filter 2-13
High Pressure Filter Element 2-13
Hydraulic Fluid Reservoir 2-13
Hydraulic Fluid Reservoir Maintenance 2-13

MidWestTech | Terex Trailblazer T-60 Boom Lift Service Manual | Publication 89_260107 Order the manual at mid-west-tech.com >

Table of Contents (Continued)

Section 2: Hydraulic System (Continued)

Maxi-Reach System 2-14
Maxi-Reach Tests 2-16
Test Set-Up 2-16
Maxi-Reach Set Up 2-16
Boom Lift System 2-18
Directional Control Valves 2-18
Platform 2-18
Ground 2-18
Shuttle Valve Assembly 2-19
Two Speed Valve 2-19
Accumulator 2-19
Lift Cylinder 2-19
Boom Telescope (Extend) System 2-20
Directional Control Valves 2-21
Platform 2-21
Ground 2-21
Shuttle Valve Assembly 2-21
Shuttle Valve 2-21
Flow Control Pressure Compensated Valve 2-21
Sequence Valves 2-22
Regeneration Valve 2-22
Telescope (Extend) Cylinders 2-22
Superstructure Swing System 2-23
Directional Control Valve 2-23
Platform 2-23
Ground 2-23
Shuttle Valve Assembly 2-24
Flow Control Valve 2-24
Double Counterbalance Valve (Swing) 2-24
Swing Drive Motor/ Reducer Assembly 2-24
Platform Rotate System 2-25
Rotate Control Valve 2-25
Rotary Actuator 2-25
Rotary Actuator Maintenance 2-25
Platform Rotator Manifold 2-26
Platform Leveling System 2-27
Level Control Valve 2-27
Double Pilot Operated Check Valve 2-27
Master Level Cylinder 2-28
Relief Valves 2-28
Slave Level Cylinder 2-28
Steer System 2-29
Drive/ Steer Manifold Assembly 2-29
Steer Cylinder 2-29
Steer System Maintenance 2-29
Hydraulic Swivel (Optional) 2-29

MidWestTech | Terex Trailblazer T-60 Boom Lift Service Manual | Publication 89_260107 Order the manual at mid-west-tech.com >

Table of Contents (Continued)


Section 3: Drive System

Drive System Components 3-3
- Front Wheel Motor 3-3
- Hydraulic Drive Motor 3-3
- Rear Axle Assembly 3-4
- Hydraulic Manifold Valve Assembly 3-4
- Motion Control Valve Assembly 3-4
  - Motion Control Valve 3-4
  - Brake Needle Valve 3-4
  - Shuttle Valve 3-5
  - Pressure Reducing Valve 3-5
  - Double Relief Valve 3-5
  - Solenoid Valve 3-5
- Drive Enable Valve 3-5
- Platform Drive Control Handle 3-5
- Drive/ Steer/ Selector Assembly 3-6
- Directional Control Valves 3-6

Section 4: Electrical System

Electrical System 4-3
- Battery 4-3
  - Battery Maintenance (In Storage) 4-3
  - Battery Maintenance (In Use) 4-3
  - Battery Troubleshooting 4-4
  - Battery Replacement 4-4
- Platform Control Box 4-5
  - Emergency Stop Button 4-5
  - Ignition Switch 4-5
  - Toggle Switch 4-5
  - Push Button 4-5
  - Light Emitting Diode 4-5
- Ground Control Box 4-6
  - Circuit Breaker 4-6
  - Toggle Switch 4-6
  - Push Button 4-6
  - Key Switch 4-6
  - Volt Meter 4-6
  - Hour Meter 4-6
  - Engine Oil Pressure Gauge 4-7
- Pendant Control 4-7
  - Toggle Switch 4-7
- Foot Pedal Switch 4-7
- Movement Alarm 4-7
- Tilt Alarm 4-8
  - Tilt Alarm Test 4-8
  - Tilt Alarm Sensor Adjustment 4-8
- Tilt Alarm Horn 4-9
- Horn 4-9
- Relays 4-9
- Limit Switches 4-9

MidWestTech | Terex Trailblazer T-60 Boom Lift Service Manual | Publication 89_260107 Order the manual at mid-west-tech.com >

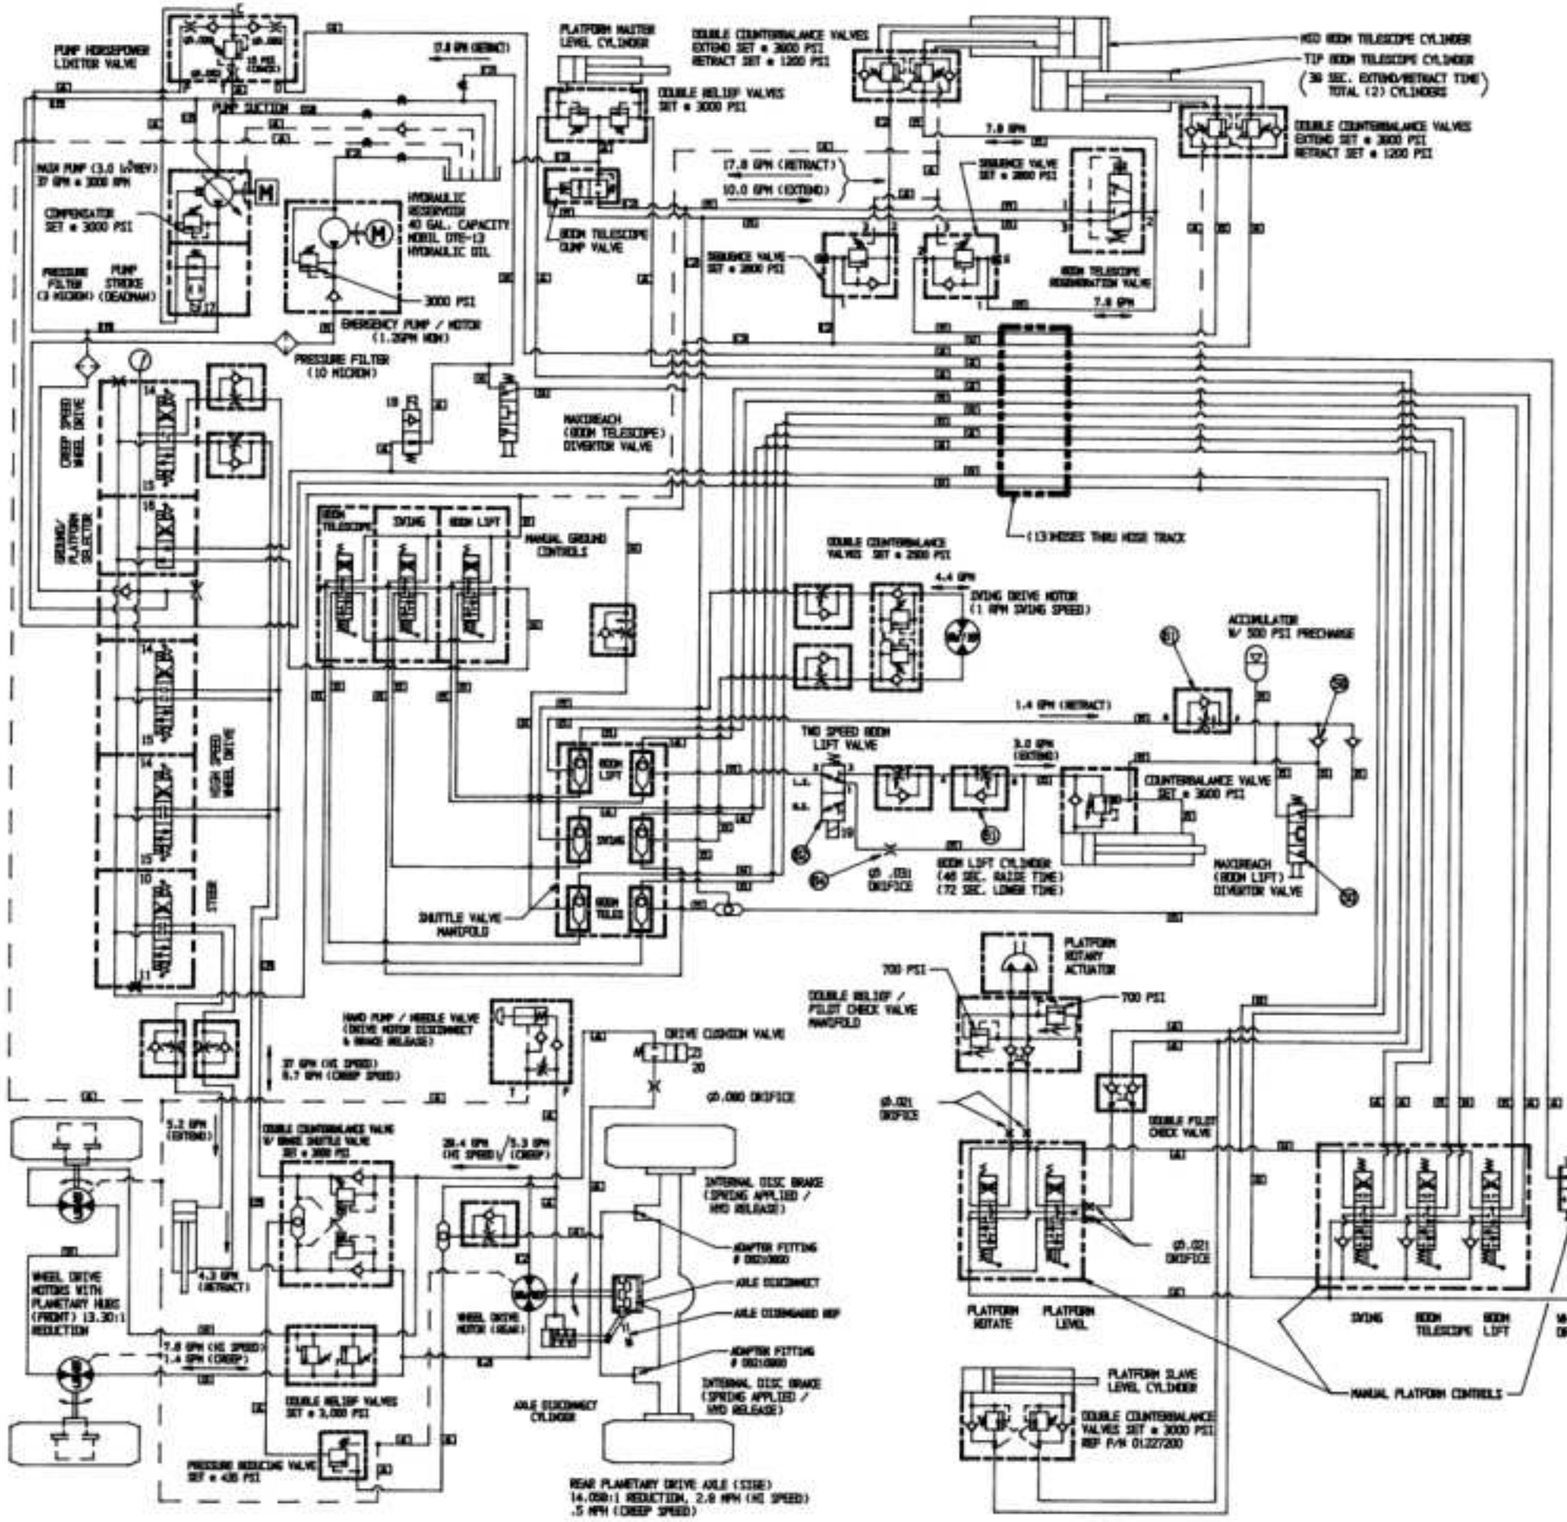

Order the manual at mid-west-tech.com >