721B Loader

Parts Catalog

Bur 8-9382

CASE CONSTRUCTION

Order the manual at mid-west-tech.com >

PICTORIAL SECTION INDEX



GENERAL 1

ENGINE 2



FUEL SYSTEM 3



ELECTRICAL 4



STEERING 5




POWER TRAIN 6



BRAKES 7



HYDRAULICS 8

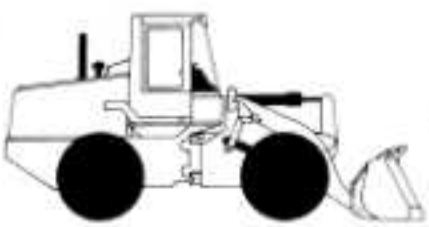

CHASSIS 9

NUMERICAL INDEX 10

Bur 8-9382 Issued December, 1998 Printed in U.S.A.

MidWestTech | Case 721B Loader Parts Catalog | Publication 8-9382 Order the manual at mid-west-tech.com >

GENERAL INFORMATION

Indexes

Section 1 of this catalog contains a SN and P.I.N. location guide, alphabetical index, pictorial index of the sections included, and pictorial index(es) for quick location of hoses and tubes (and other system components in some catalogs). An alphabetical index also appears at the beginning of each section. Section 10 is the Numerical Index which lists all part numbers in alpha/numeric order with their page location and reference number.

Illustrations

The arrangement of this parts catalog is for easy identification of parts. All parts are illustrated in "exploded views" in proper relation to each other. Reference numbers used in the illustrations refer to those on the text pages. The text pages list reference number, part number, part description and the quantity required.

Abbreviations

P.I.N. "Product Identification Number"

SN "Serial Number"

NSS "Not Serviced Separately" in the part number column indicates this part is not available for service.

REF "Reference" in the part number column indicates this part has special service information. The page where this information can be found is given in the part description column.

UAR "Use As Required" in the quantity required column indicates the number of parts used is determined by service needs.

Right-Hand and Left-Hand Identification

The reference to right-hand and left-hand in this catalog is identified by the operator standing at the rear of the basic unit (without rear attachment), looking toward the front of the machine (in normal forward travel). For pages covering any machine attachments, right-hand and left-hand are defined by the operator sitting in the position for proper operation of the attachment.

Catalog Revisions and Supplements

Changes to the product may make it necessary to revise or add pages to this catalog. A cover sheet will list all pages released in a revision or supplement. Each new or revised page will have a new issue date. All revised and new pages must be put into the parts catalog as soon as they are received.

Parts Orders

Orders must specify product model, all necessary serial numbers, correct part number, complete description, quantity required, method of shipment, and shipping address.

Text Format Explanation

An assembly may contain service items. The component parts of an assembly or subassembly are indented. The quantity required column lists the number of assemblies required for a completed machine, and the number of components required in a complete assembly or subassembly.

The example below illustrates the use of indents and other text page elements explained on this page.

HYDRAULIC FILTER

REF.	PART NO.	DESCRIPTION	REQ'D.
1	D4356734	FILTER ASSEMBLY - hydraulic oil, P.I.N. 7534840 and after	1
	D61903	HEAD ASSEMBLY - filter	1
2	NSS	HEAD - filter, order D61903 head assembly	1
3	D58199	VALVE - bypass	1
	D43800	KIT - filter element, replaces D35700 element kit	1
4	NSS	ELEMENT - filter, order D43800 element kit	1
5	A27994	O-RING - filter	1
6	D61948	HOUSING -filter	1
7	REF	CANOPY - ROPS, order from Machinery Price List	1
8	843065C1	HOSE - 132 inch (3353 mm) long, reservoir to pump	1
9	113-323	BOLT - hex, 7/16 NC x 1-3/4 inch	2
10	814-8030	BOLT - hex, 8 - 1.25 x 30 mm	4

MidWestTech | Case 721B Loader Parts Catalog | Publication 8-9382 Order the manual at mid-west-tech.com >

ALPHABETICAL INDEX

A

Accelerator and Linkage 3-3,3-3B
Accumulator - Brake 7-27
Air
  Cleaner - Engine 2-13
  Conditioning - Cab ..... 9-85 - 9-95
  Intake System 2-11
Alternator
  Assembly 4-3
  Mounting 4-43
Antenna - Radio 4-65
Auxiliary Steering 4-37,4-37B,5-13,5-15
Axle - Front
  Assembly ..... 6-37 - 6-45
  Carrier 6-43
  Differential 6-43,6-45
  Disc Brakes 6-39,6-41
  Gear and Pinion 6-43,6-45
  Housing 6-37
  Hub 6-39,6-41
  Mounting 6-35
  Planetary 6-39,6-41
  Yoke - Flange 6-43
Axle - Rear
  Assembly ..... 6-47 - 6-55
  Carrier 6-53
  Differential 6-53,6-55
  Disc Brakes 6-49,6-51
  Gear and Pinion 6-53,6-55
  Housing 6-47
  Hub 6-49,6-51
  Mounting 6-35
  Planetary 6-49,6-51

B

Backup Alarm 4-49
Batteries and Cables 4-41
Battery Cover 9-37
Beacon - Rotating 4-55
Belts
  Alternator 2-7
  Compressor - Air Conditioning 9-93
  Drive - Rotating Beacon 4-55
  Fan 2-7
  Seat 9-45,9-47
Block - Engine Cylinder ..... 2-37,2-39 - 2-39D
Blower - Cab 4-61
Boot
  Alternator Cable 4-33
  Accelerator Rod 3-3,3-3B,9-63
  Brake Actuator 7-7
  Brake Valve 7-25
  Loader Control 8-81,8-85,8-89,8-91

B

Boot - cont'd
  Rear Harness - left-hand Side 4-33
  Rear Harness - Operators Compartment 4-31
  Starter Plunger 4-41
  Steering Wheel 5-3
  Suspension Seat 9-55-55H
Box - Operators Compartment 9-63,9-97,9-97B
Brake
  Accumulator 7-27
  Accumulator Valve 7-21
  Actuator - Parking Brake 7-5
  Front Disc 6-39,6-41
  Parking 7-3,7-5
  Pedals 7-7
  Pump 7-23
  Rear Disc 6-49,6-51
  Switches 7-7
  Valve 7-17,7-17B,7-25
Brake System
  Accumulator Valve to Pressure Reducing Valve 7-11,7-11B
  Brake Valve to Front Axle 7-17
  Brake Valve to Rear Axle 7-19
  Reservoir to Pump to Accumulator Valve 7-9
  Tubes at Accumulator 7-15,7-15B
Buckets - XT Loader, see your local dealer
Buckets - Z-Bar Loader
  Auxiliary 9-21
  Clam 9-21
  Cutting Edges ..... 9-17 - 9-21
  Loader ..... 9-17 - 9-19B
  Teeth ..... 9-17 - 9-21

C

Cab
  Air Conditioning and Heating ..... 9-79 - 9-95
  Blower 4-61
  Console Covers 9-65
  Doors and Windows ..... 9-71 - 9-77
  Electrical and Lighting ..... 4-19 - 4-23
  Exterior Covers 9-59
  Filters, Vents, and Louvers 9-69
  Glass 9-57,9-57B,9-71,9-75
  Handrail 9-57,9-57B
  Interior Covers ..... 9-63 - 9-67
  Insulation 9-63D
  Mirror - Outer 9-61
  Mounting Parts 9-57,9-57B
  Pedestal Covers 9-67
  Rotary Window Lock 9-77
  Windshield Wipers 4-57,4-59

MidWestTech | Case 721B Loader Parts Catalog | Publication 8-9382 Order the manual at mid-west-tech.com >