
ELECTRIC EAGLE
32/21 S/N DBA 00101 and up
41/24 S/N DDA 00101 and up

Genie®
A TEREX COMPANY

SERVICE MANUAL

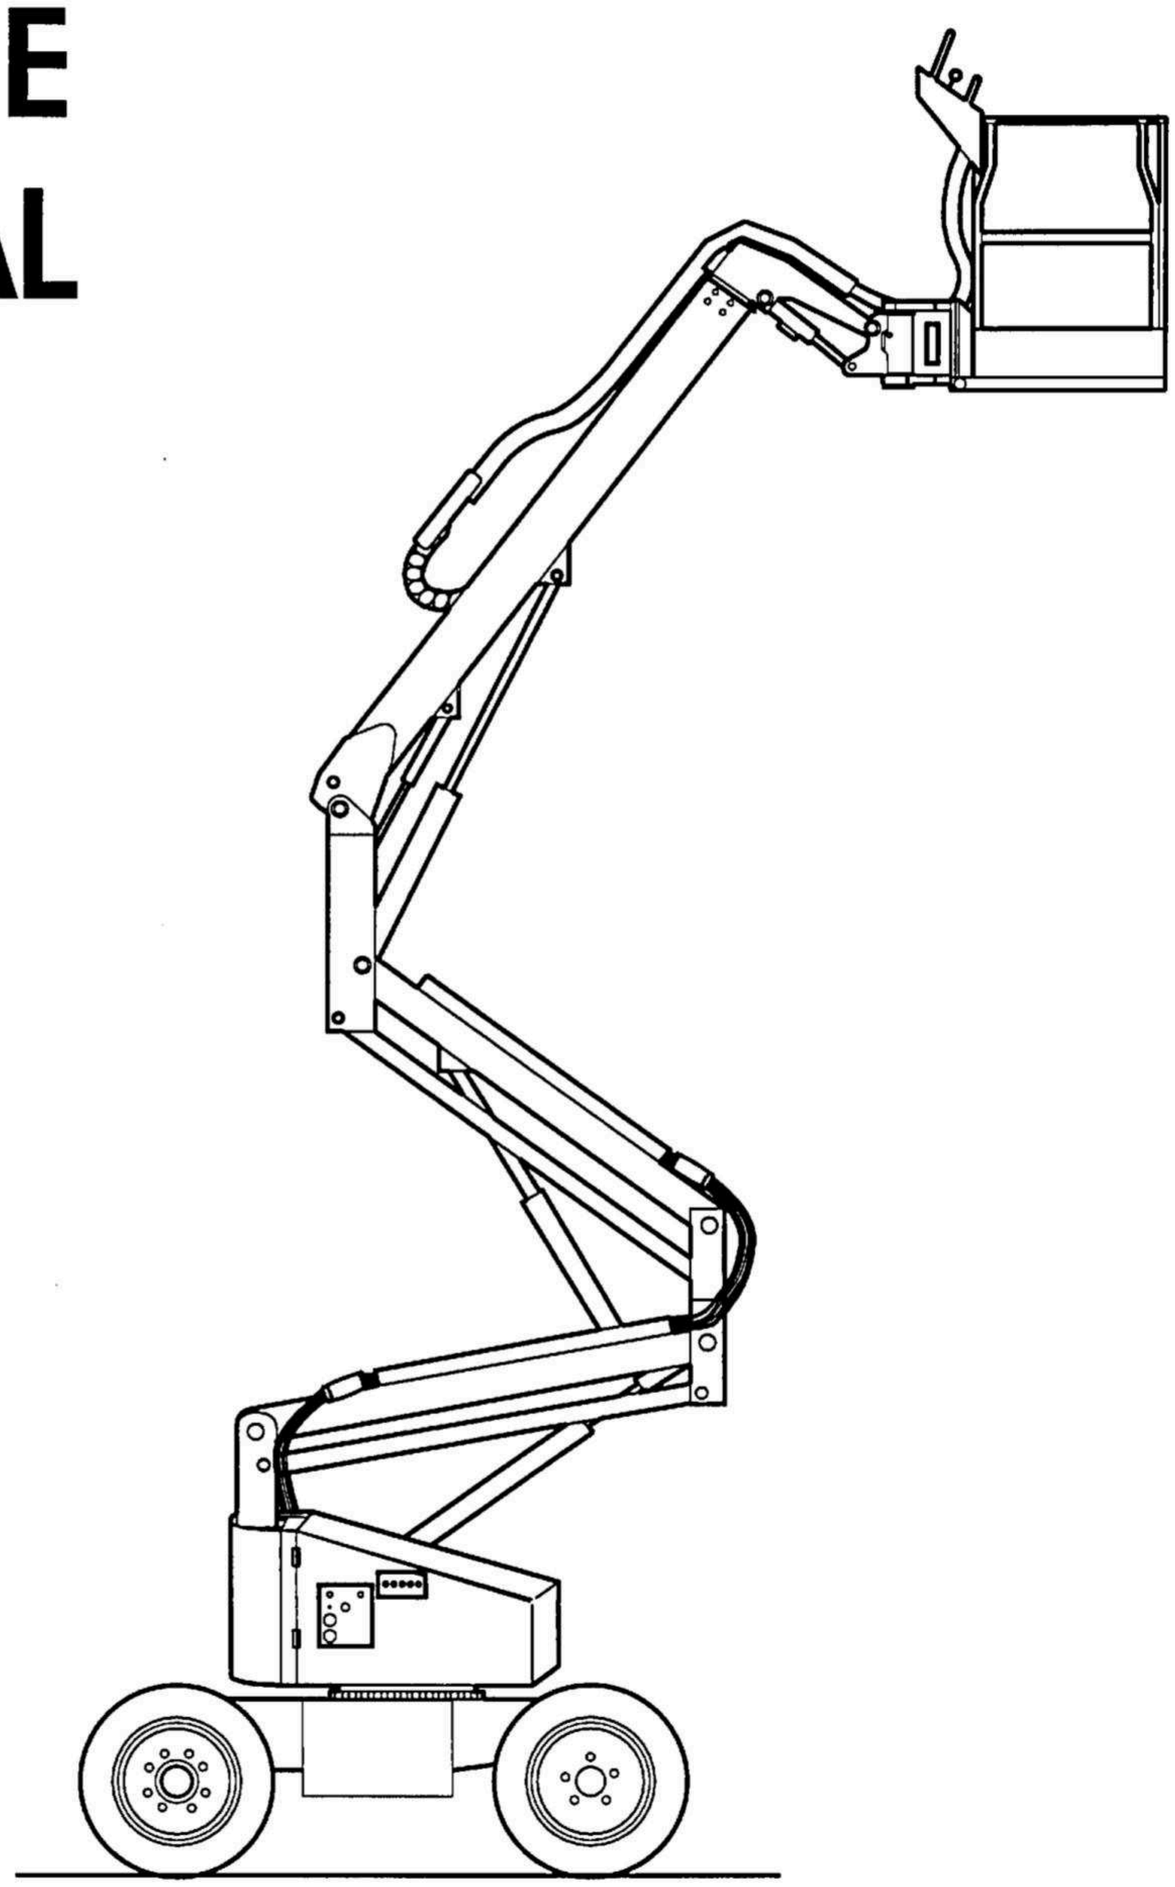

Part No. 89-410727 • Revision "0.2" dated Aug. 1995 •

MidWestTech | Terex Genie Electric Eagle 32/21, 41/24 Articulated Boom Lift Service Manual | Publication 89_410727

Order the manual at mid-west-tech.com >

Table of Contents

Introduction v
Machine Specifications
Model 32/21 vii
Model 41/24 viii
Primary Machine Components
Model 32/21 ix
Model 42/24 x
Undercarriage Components xi
Superstructure Components
Model 32/21 xii
Model 42/24 xiii
Lubrication Chart
Model 32/21 xiv
Model 41/24 xvi

SECTION 1: TRANSPORTATION AND EMERGENCY PROCEDURES
Transporting the Unit
Moving of the Electric Eagle 1-3
Truck Transport of the Electric Eagle 1-3
Unloading Procedures 1-6
Emergency System and Procedures
Emergency Hand Pump 1-7
Emergency Towing Function 1-7
Emergency Procedures 1-8

SECTION 2: HYDRAULIC SYSTEM
Hydraulic Fluid
Handling Precautions 2-3
Fluid Recommendations 2-3
Hydraulic Fluid Analysis 2-3
System Flushing Procedure 2-4
Hydraulic System Components
Hydraulic Fluid Reservoir 2-5
Hydraulic Power Unit Assembly 2-5
Control Valve Assembly 2-5
Steer Relief Valves 2-5
3-way Diverter Valve 2-6
Ground Pressure Valve 2-6
Brake Relay Valve 2-6
Brake Valve 2-6
Steer Valve 2-6
Pressure Reducing Valve 2-7
Manual Brake Release Valve 2-7
Emergency Pump Diverter Valve 2-7
Check Valves 2-7
Cylinders 2-7
Emergency Hydraulic Pump 2-7
Hydraulic System Functional Description 2-8

MidWestTech | Terex Genie Electric Eagle 32/21, 41/24 Articulated Boom Lift Service Manu... Order the manual at mid-west-tech.com >

Table of Contents (Continued)

SECTION 3: ELECTRICAL SYSTEM

Battery
- Battery Maintenance (in Storage) 3-3
- Battery Maintenance (in Use) 3-3
- Battery Preventive Maintenance 3-4
- Battery Replacement 3-4

Battery Charger 3-4
- Battery Charger Troubleshooting 3-5

Movement Alarm 3-12
Tilt Alarm 3-12
- Tilt Alarm Test 3-12
- Tilt Alarm Adjustment 3-12

Descent Alarm (Optional) 3-12
Automatic Warning Beacon (Optional) 3-13
Relays 3-13
Electric Motors 3-13
Emergency Stop Buttons 3-13

SECTION 4: MECHANICAL COMPONENTS

Undercarriage
- Tires 4-5
  - Changing Tires 4-5
- Wheels and Lug Nuts 4-5
- Front Hub Assembly 4-5
  - Repacking Front Wheel Bearings 4-5
- Steer Cylinder Seal Replacement 4-7
- Drive Train 4-8
- Brake Actuator Disassembly 4-8
- Rear Axle Replacement 4-9
- Drive Shaft Replacement 4-9
- Electric Motor and Speed Reducer with Brake Replacement 4-10
- Rear Brake Repair and Adjustment 4-10
- Swing Motor Disassembly 4-10

Superstructure for 32/21 4-11
Superstructure for 41/24 4-12
Hoses and Cables 4-13
Lower Boom for Model 32/21
- Lower Boom Lift Cylinder 4-13
  - Removal 4-13
  - Replacement 4-13
  - Seal Replacement 4-14
- Lower Lift Cylinder Holding Valve Replacement 4-14
- Lower Boom and Cylinder Pivot Pin and Bushing Replacement ... 4-14

Upper Boom for Model 32/21
- Upper Boom Lift Cylinder 4-15
  - Removal 4-15
  - Replacement 4-15
  - Seal Replacement 4-16
- Upper Lift Cylinder Holding Valve Replacement 4-16
- Upper Boom and Cylinder Pivot Pin and Bushing Replacement ... 4-16

MidWestTech | Terex Genie Electric Eagle 32/21, 41/24 Articulated Boom Lift Service Manu... Order the manual at mid-west-tech.com >

Table of Contents (Continued)


Lower Boom for Model 41/24
Lower Boom Lift Cylinder 4-17
Removal 4-17
Replacement 4-17
Seal Replacement 4-18
Lower Lift Cylinder Holding Valve Replacement 4-18
Lower Boom and Cylinder Pivot Pin and Bushing Replacement ... 4-18
Middle Boom for Model 41/24
Middle Boom Lift Cylinder 4-19
Removal 4-19
Replacement 4-19
Seal Replacement 4-20
Middle Lift Cylinder Holding Valve Replacement 4-20
Middle Boom and Cylinder Pivot Pin and Bushing Replacement .. 4-20
Upper Boom for Model 41/24
Upper Boom Lift Cylinder 4-21
Removal 4-21
Replacement 4-21
Seal Replacement 4-22
Upper Lift Cylinder Holding Valve Replacement 4-22
Upper Boom and Cylinder Pivot Pin and Bushing Replacement ... 4-22
Wear Pads 4-23
Rear (Upper End) Wear Pad Replacement 4-23
Front (Lower End) Wear Pad Replacement 4-23

SECTION 5: TROUBLESHOOTING
General Troubleshooting Tips 5-3
Troubleshooting Chart 5-4

INDEX

APPENDIX
Electrical Schematic Eagle 32/21, 41/24 (SDS-218547-0) A-3
Hydraulic Schematic Eagle 32/21 (SDS-218946-0) A-5
Hydraulic Schematic Eagle 41/24 (SDS-218947-0) A-7

MidWestTech | Terex Genie Electric Eagle 32/21, 41/24 Articulated Boom Lift Service Manu... Order the manual at mid-west-tech.com >

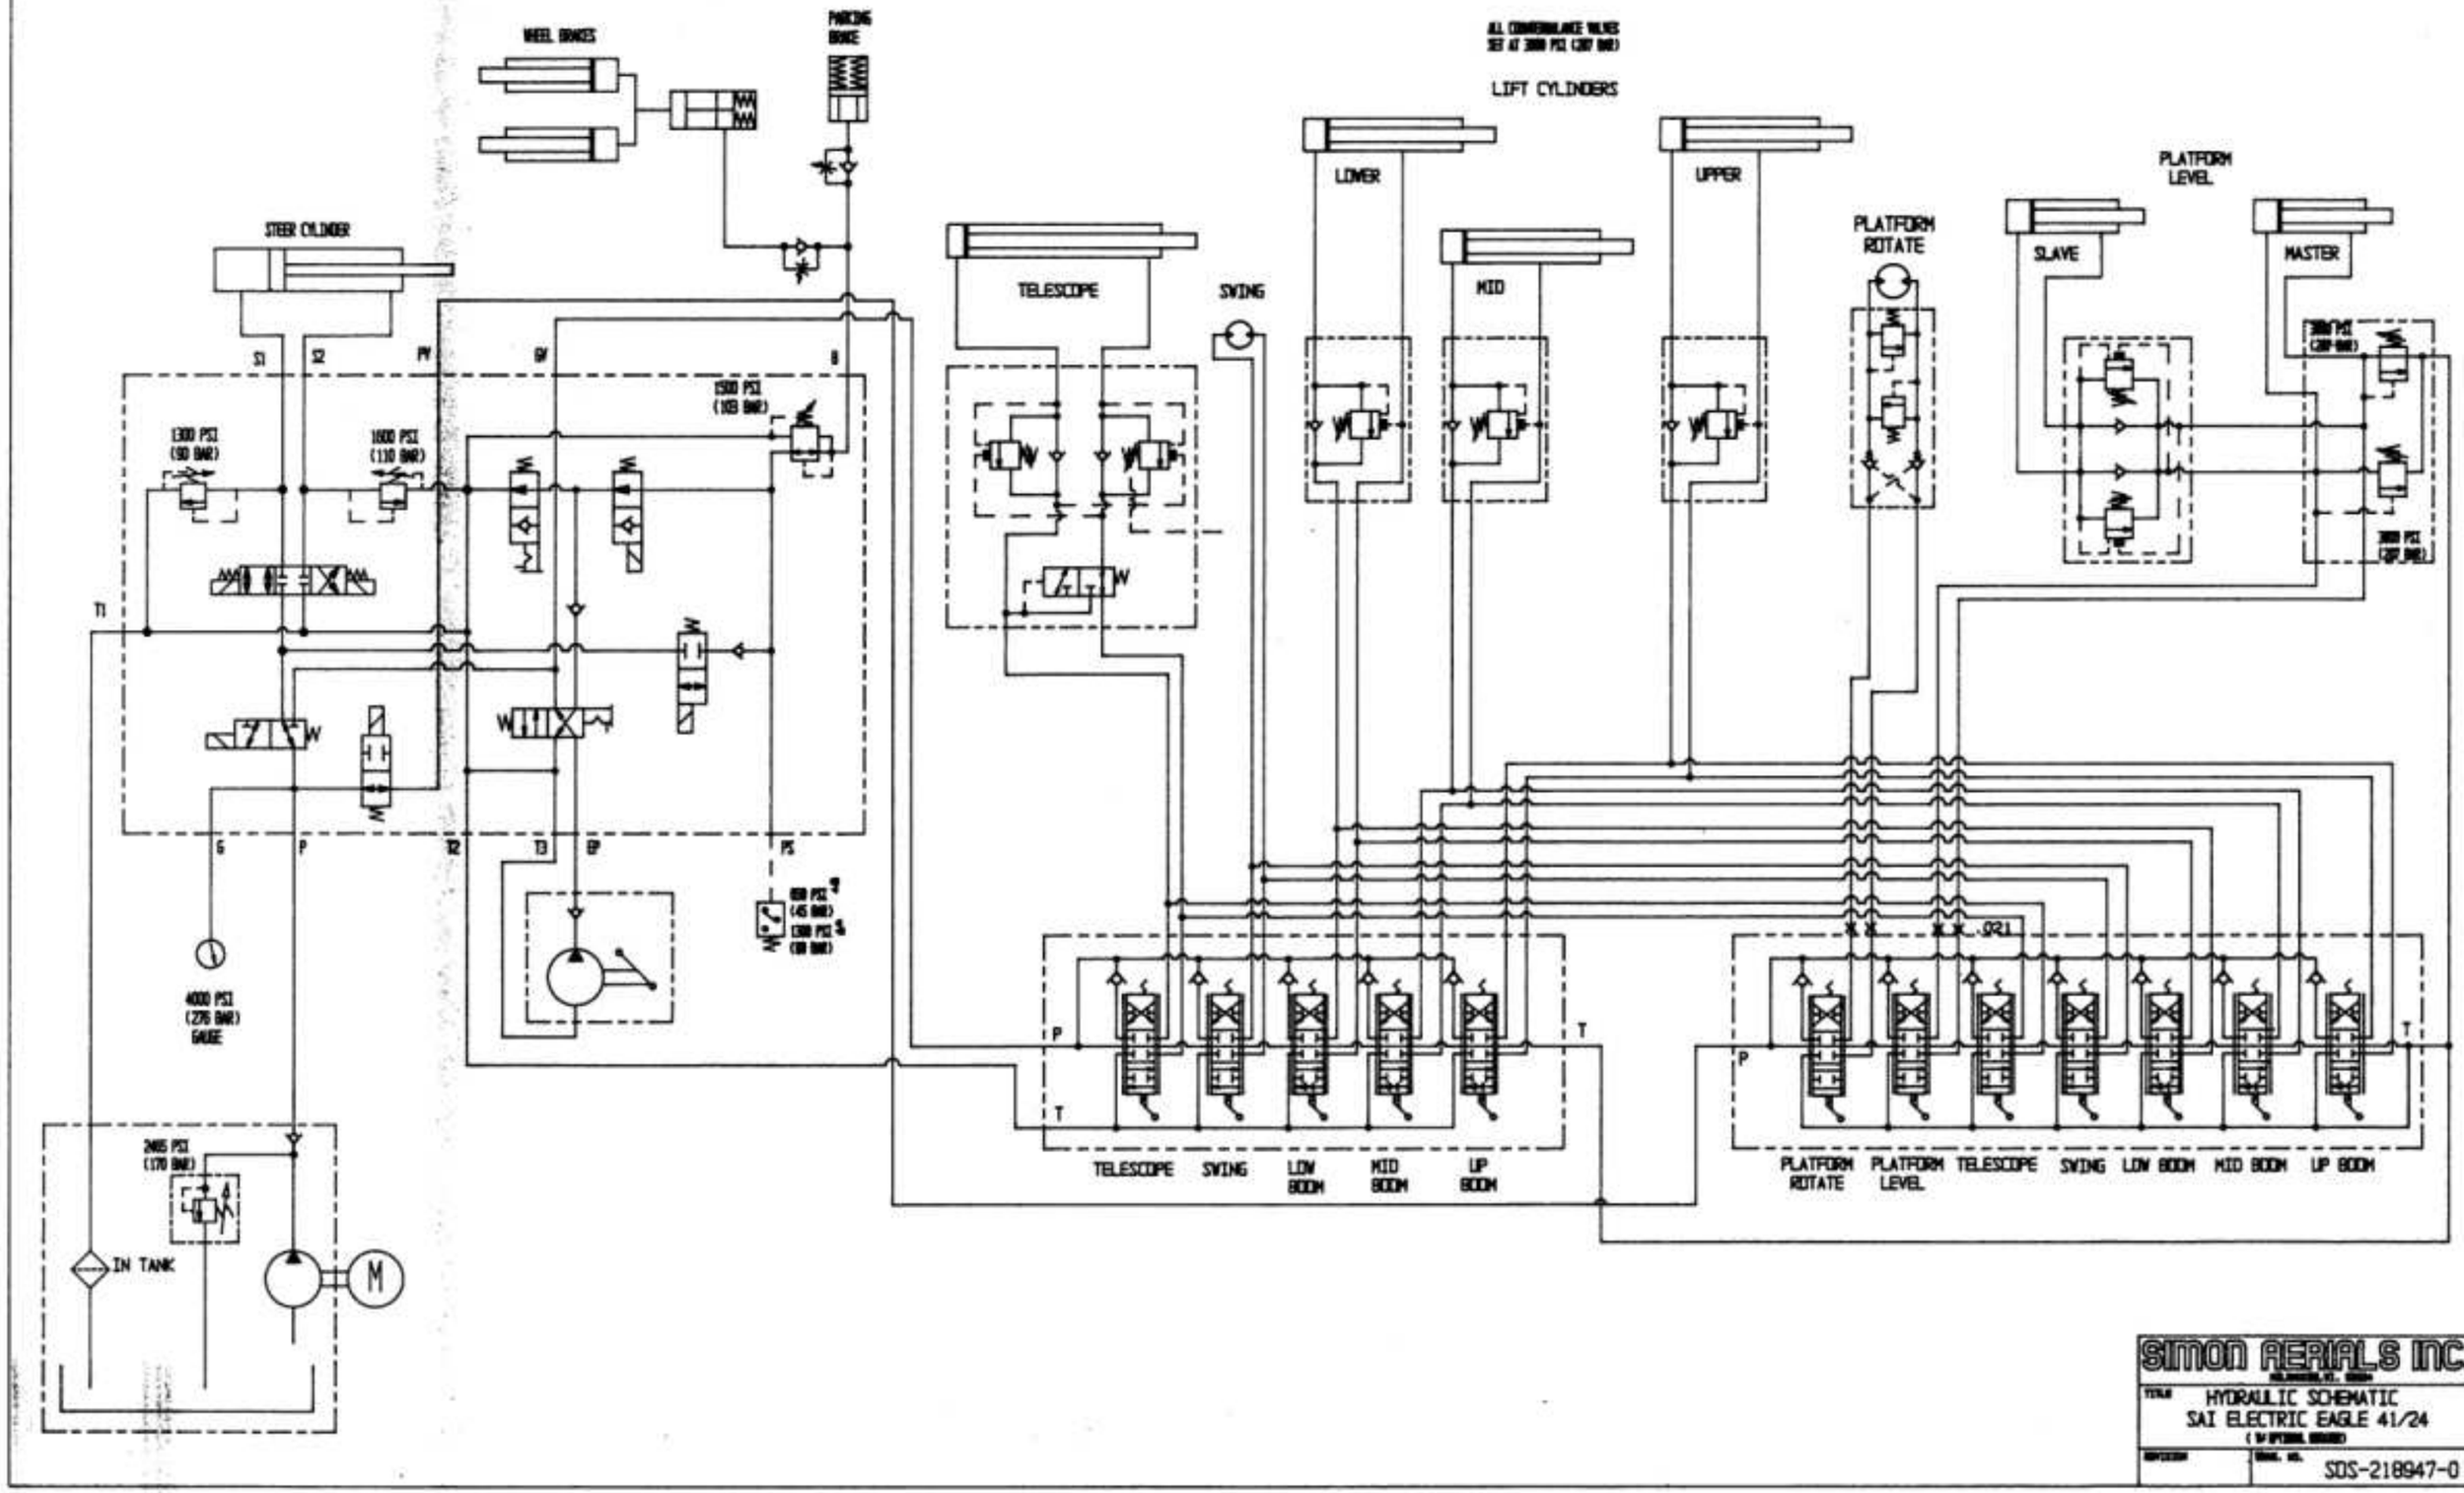

SIMON AERIALS INC.

TITLE: HYDRAULIC SCHEMATIC
SAI ELECTRIC EAGLE 41/24

SDS-218947-0

Order the manual at mid-west-tech.com >