
EAGLE JR.
32/21Jr.

Genie®
A TEREX COMPANY

TECHNICAL MANUAL

For Service Concerns Only:
Direct Phone Line to Service Department, 8:00 AM to 5:00 PM Central Time, Monday thru Friday.
Phone (414) 355-3181

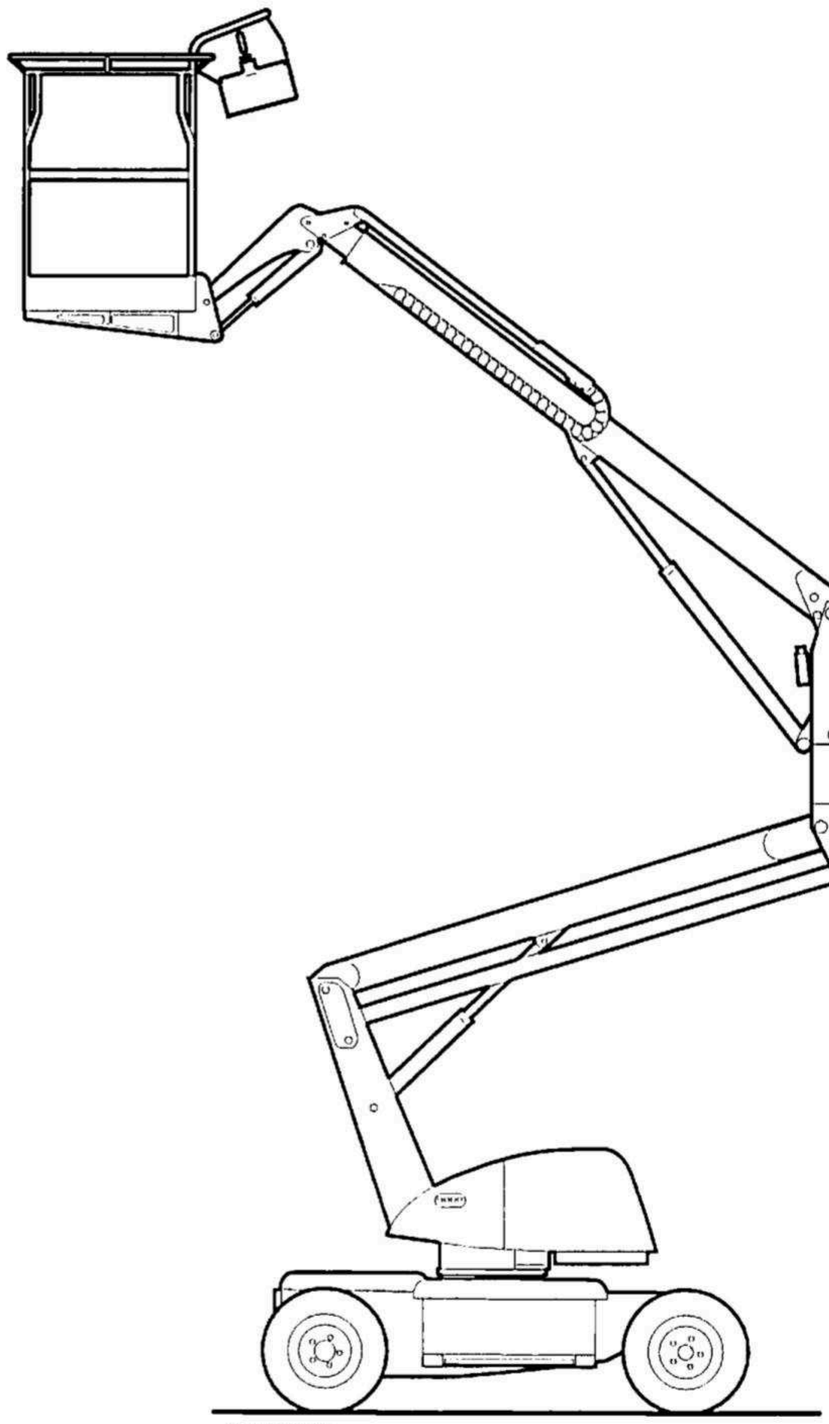

Art #A00.00453E

Part No. 89-411788 • Revision "A.2" dated Dec. 1996 •

MidWestTech | Terex Genie Eagle 32/21E Jr. Articulated Boom Lift Service Manual | Publication 89_411788
Order the manual at mid-west-tech.com >

TABLE OF CONTENTS

Introduction iii
Machine Specifications iv
Machine Diagrams v
Range Diagram v
Gradeability Conversion Chart vi


SECTION 1: TRANSPORTATION AND EMERGENCY PROCEDURES

Transporting the Unit 1-4
Truck or Trailer Transport 1-4
Unloading Procedures 1-6
Emergency System and Procedures 1-8
Emergency Pump 1-8
Emergency Rotation 1-8
Unpowered Emergency Movement 1-9
Emergency Procedures 1-10

SECTION 2: MAINTENANCE

General Maintenance Tips 2-3
Hydraulic Fluid 2-4
Handling Precautions 2-4
Fluid Recommendations 2-4
Fluid Contamination Checks 2-5
System Flushing Procedure 2-6
Hydraulic Pressure Check 2-8
Hydraulic Oil Filter Check 2-8
Controller Diagnostics 2-8
Battery 2-10
Battery Charger 2-12
Tilt Alarm 2-13
Shift Operational Checklist 2-14
Monthly Operational Checklist 2-17
Semi-Annual Operational Checklist 2-19
Troubleshooting 2-22
Lubrication Chart 2-24

MidWestTech | Terex Genie Eagle 32/21E Jr. Articulated Boom Lift Service Manual | Public... Order the manual at mid-west-tech.com >

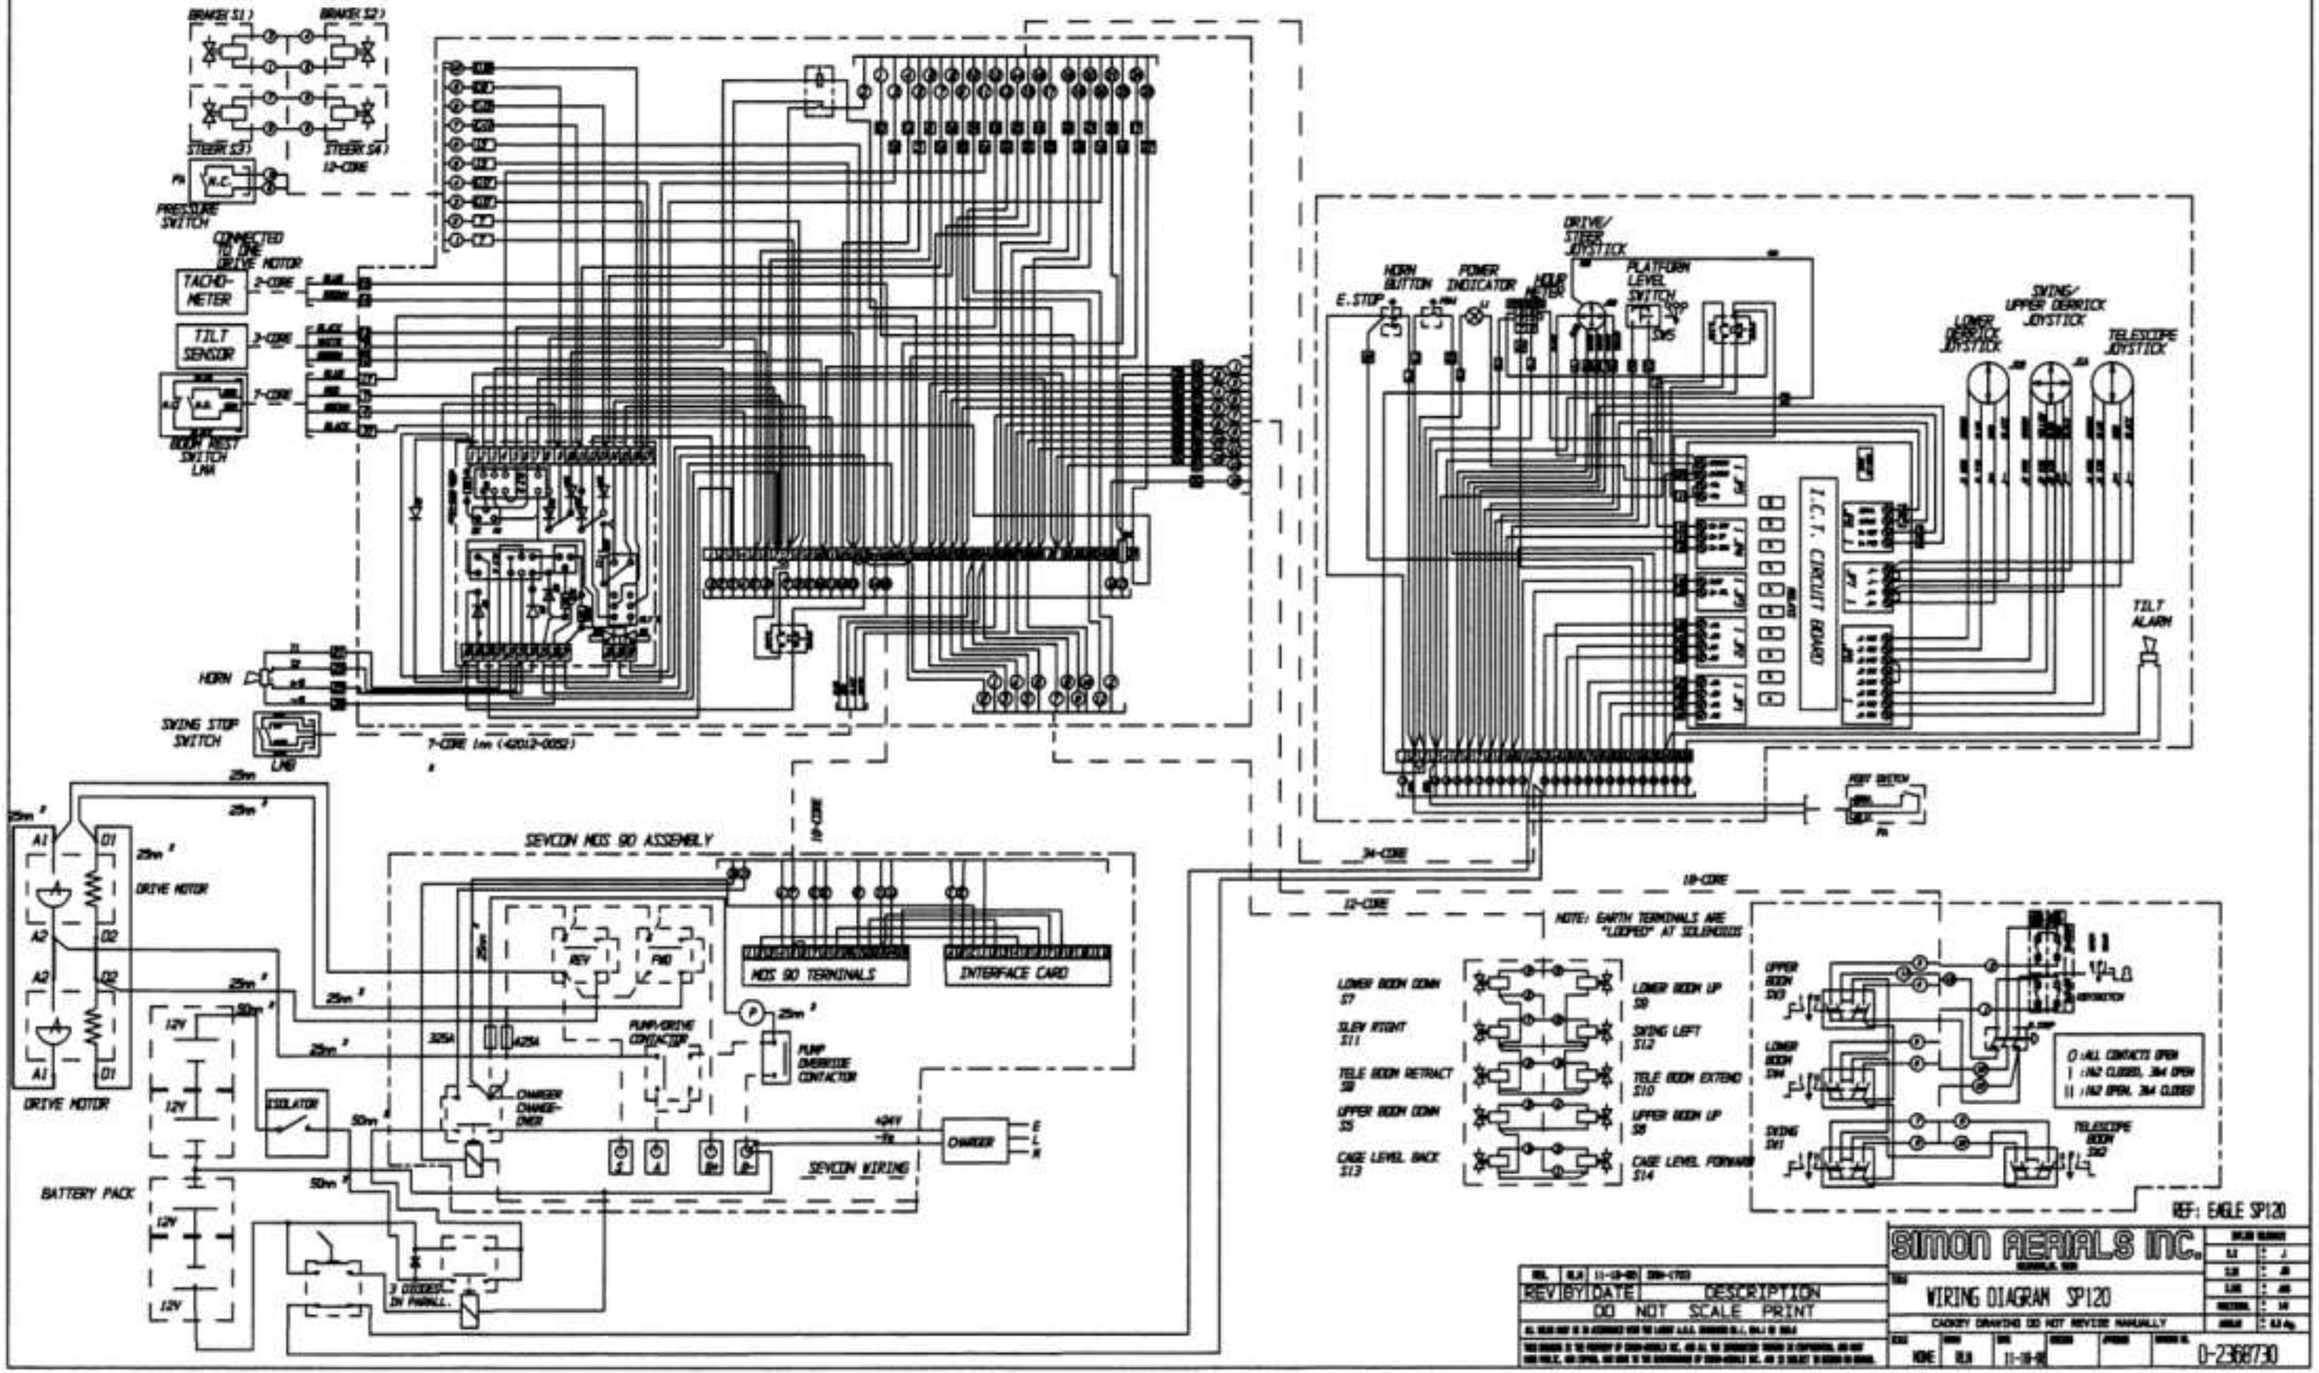

Order the manual at mid-west-tech.com >