
ELECTRIC EAGLE
32/21 N
41/24 N

A TEREX COMPANY

TECHNICAL MANUAL

Section 2: Safe Working Practice
Section 3: Operating Procedures
Special Precautions
Section 4: Emergency Procedures
of this Manual MUST BE READ
prior to operating your
SIMON ELECTRIC EAGLE
32/21 N or 41/24 N.

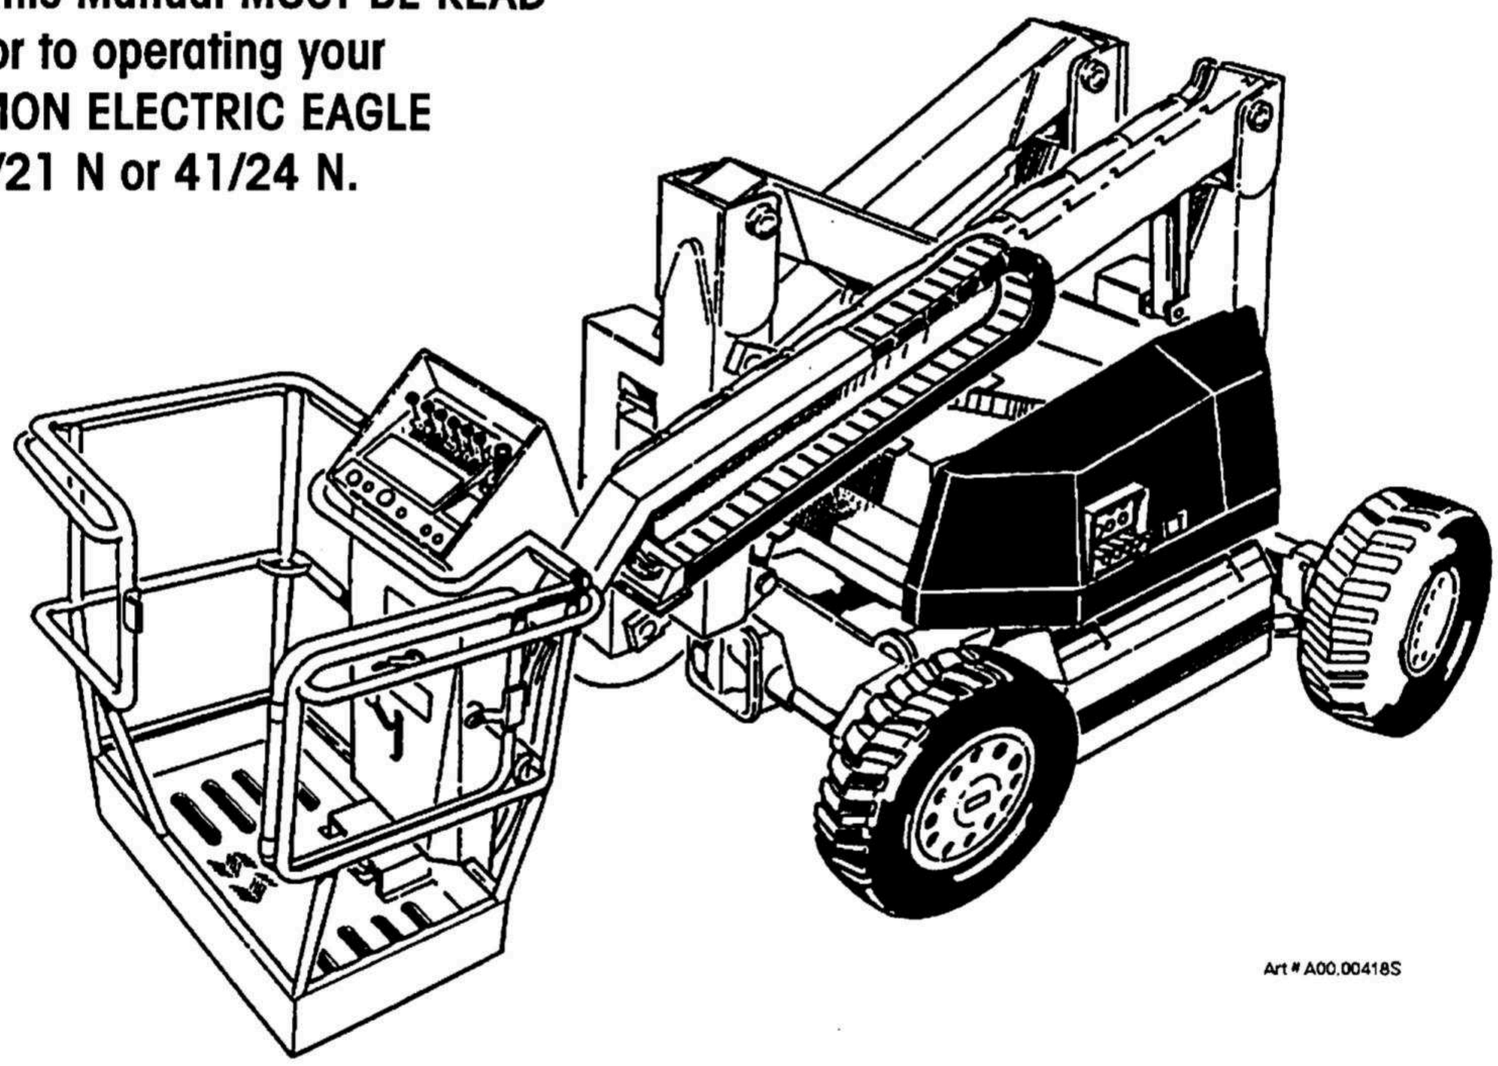

Art # A00.00418S

Originally published as:

Hydraulic Lift Platform Technical Manual, Boxer Mk. 3 Series (Electric)

by:

Simon Aerials Ltd., Little Island, Co. Cork, Ireland
Reprinted in U.S.A.

(U.S.) Part No. 89-412790 • Issue 4 dated Sep, 1993 •

MidWestTech | Terex Genie Eagle 32/21N , 41/24N Boom Lift Service Manual | Publication 89_412790

Order the manual at mid-west-tech.com >

CONTENTS

			Page No.
Amendments			(i)
Boxer - General View Diagram			(ii)
Introduction			(iii)
SECTION 1	-	BOXER 170 MK.3 (E) SPECIFICATION	
	-	Closed Dimensions and Weights (Chart 1)	1.1
	-	Operating Dimensions (Chart 2)	1.1
	-	Design Specifications (Chart 3)	1.2
	-	Design Specification (Chart 4)	1.3
	-	Design Specification (Chart 5)	1.4
	-	Mechanical Components	1.5
	-	Hydraulic Components	1.5
	-	Electric Components	1.5
	-	Hydraulic Oil and Equivalent Oil Information	1.6
	-	BOXER MK.3 (E) WORKING ENVELOPES	
	-	General Information	1.9
	-	Boxer 120	1.11
	-	Boxer 130	1.13
	-	Boxer 140	1.15
	-	Boxer 150	1.17
	-	Boxer 170	1.19
	-	BOXER MK.3 NARROW AISLE DIMENSIONS	
	-	Boxer 120 N	1.23
	-	Boxer 140 N	1.25
	-	Boxer 150 N	1.27
SECTION 2	-	SAFE WORKING PRACTICE	
	-	Use of the Machine	2.1
	-	Information Sources	2.1
	-	Hazards	2.1
	-	Warnings	2.3
SECTION 3	-	OPERATING PROCEDURES	
	-	Pre-Use Checks	3.1
	-	Ground Control Checks	3.1
	-	Cage Control Checks	3.2
	-	Machine Use (On the Highway)	3.2
	-	Drive Controls	3.2
	-	Service Brakes (Drive Mode)	3.2
	-	Emergency Braking	3.2
	-	Access Controls	3.3
	-	Access Controls (Cage Assembly)	3.3
	-	Access Operation (Cage Assembly)	3.3
	-	Cage Rotation	3.4
	-	Cage Levelling	3.4
	-	Ground Controls	3.4
	-	Ground Access Control Operation	3.5
	-	Complex Control Operation	3.5
	-	After Use	3.5
	-	Battery Charging	3.5
	-	Battery Indicator	3.5

MidWestTech | Terex Genie Eagle 32/21N , 41/24N Boom Lift Service Manual | Publication... Order the manual at mid-west-tech.com >

		Page No.
	SPECIAL PRECAUTIONS	
	- Cold Weather	3.6
	- Overhead Electrical Cables	3.6
	- Safe Working Load (SWL)	3.6
	- Wind Conditions	3.6
	- Transportation	3.7
	- Towing	3.7
	- Overhead Crane Operations	3.7
	- Driving on Slopes	3.7
	- Bedding-In New Brakes	3.7
	- Testing the Tilt Alarm Circuit	3.8
	- Differential Lock (Diff. Lock) Operation	3.8
SECTION 4	**EMERGENCY PROCEDURES**	
	- Procedure	4.1
	- Cage Operator Incapacity	4.1
	- Cage Control Failure	4.1
	- Immobility due to loss of Drive	4.1
	- To Dis-engage the Brakes	4.3
	- To Re-engage the Brakes	4.4
	- Overhead Crane Operation	4.4
	- Hydraulic Pump Failure	4.4
	- Emergency Rotation	4.4
	- Emergency Lowering From the Cage Assembly (Optional Fit)	4.5
SECTION 5	**THE HYDRAULIC CIRCUIT**	
	- The Pump Motor	5.1
	- Lift Function Valve Manifold Block	5.1
	- Hydraulic Steering System	5.1
	- Hydraulic Lift Cylinders	5.1
	- Zoom Cylinder	5.1
	- Cage Levelling Cylinders	5.1
	- Hydraulic Oil Tank	5.1
	- Braking System (120, 130, 140 and 150 Only)	5.2
	- Braking System (170 Only)	5.2
	- The Hydraulic Module (diagram)	5.3
	SETTING-UP PROCEDURES	
	- Relief Valves	5.5
SECTION 6	**THE ELECTRICAL CIRCUIT**	
	- Introduction	6.1
	- Batteries	6.1
	- Pump and Drive Motors	6.2
	- Emergency Stop Control Switches	6.2
	- Footswitch	6.2
	- Tilt Alarm	6.2
	- Movement Alarm	6.2
	- Relays - Identification and Function	6.2
	- D.C. Contactors	6.2
	- D.C. Converter (48 volts to 12 volts) (Optional Fit)	6.3
	- Automatic Beacon Warning System (Options)	6.3
	- Fuses	6.3
	- The Electric Module (diagram)	6.5

MidWestTech | Terex Genie Eagle 32/21N , 41/24N Boom Lift Service Manual | Publication... Order the manual at mid-west-tech.com >

			Page No.
	-	HDI CONTROLLER ADJUSTMENTS	
	-	Plugging Current/Acceleration Adjustment	6.7
	-	Drive Motor Controller	6.9
	-	Drive Motor Controller - Bench Test	6.15
	-	Bench Test Circuit Lay-out (diagram)	6.17
	-	Electric Drive Circuit (diagram)	6.19
SECTION 7	-	MAINTENANCE INSTRUCTIONS	
	-	Tyres	7.1
	-	Wheelnut Security	7.1
	-	Drive Assembly	7.1
	-	Service Brake (Driving Mode)	7.2
	-	Parking Brake	7.2
	-	Steering Assembly	7.2
	-	Chassis and Plinth Labels	7.2
	-	Lift Pump Motor Assembly	7.2
	-	Batteries and Battery Mountings	7.3
	-	D.C. Contactors	7.3
	-	Manifold Assembly	7.3
	-	Hydraulic Oil Tank	7.3
	-	Minor Equipment Mounting	7.3
	-	Plinth/Superstructure Hoses/Cables	7.3
	-	Pin Bushes	7.3
	-	Pivot Pin Replacement	7.3
	-	Slew Bearing	7.6
	-	Superstructure	7.8
	-	Zoom Cylinder	7.8
	-	Zoom Pads	7.8
	-	Lift Cylinders	7.9
	-	Levelling Cylinders	7.9
	-	Brake Adjustment (120, 130, 140 and 150 Only)	7.10
	-	Brakes (170 Only)	7.12
SECTION 8	-	FAULT-FINDING	
	-	Introduction	8.1
	-	Fault-finding Hints	8.2
SECTION 9	-	MAINTENANCE SCHEDULES	
	-	General Information	9.1
	-	Hydraulic Oils	9.1
	-	Health Warning (Hydraulic Oils)	9.2
	-	Recommended Equivalent Hydraulic Oils	9.2
	-	Pivot Pins and Bearings	9.2
	-	Servicing Check List (Basic Machines Only)	9.4
	-	Daily Routine Servicing	9.5
	-	Weekly Routine Servicing	9.7
	-	Monthly Routine Servicing	9.9
	-	Six-Monthly Routine Servicing	9.11
	-	Yearly Routine Servicing	9.13
	-	Four-Yearly Routine Servicing	9.15
	-	Lubrication Chart	9.17
	-	Lubrication Diagram	9.19
	-	Master Brake Cylinder Location Diagram	9.21
	-	Slew Bearing Lubrication	9.23

MidWestTech | Terex Genie Eagle 32/21N , 41/24N Boom Lift Service Manual | Publication... Order the manual at mid-west-tech.com >