
EAGLE 50/30

A TEREX COMPANY

TECHNICAL MANUAL

Section 2: Safe Working Practice
Section 3: Operating Procedures
Special Precautions
Section 4: Emergency Procedures
of this Manual MUST BE READ
prior to operating your
EAGLE 50/30

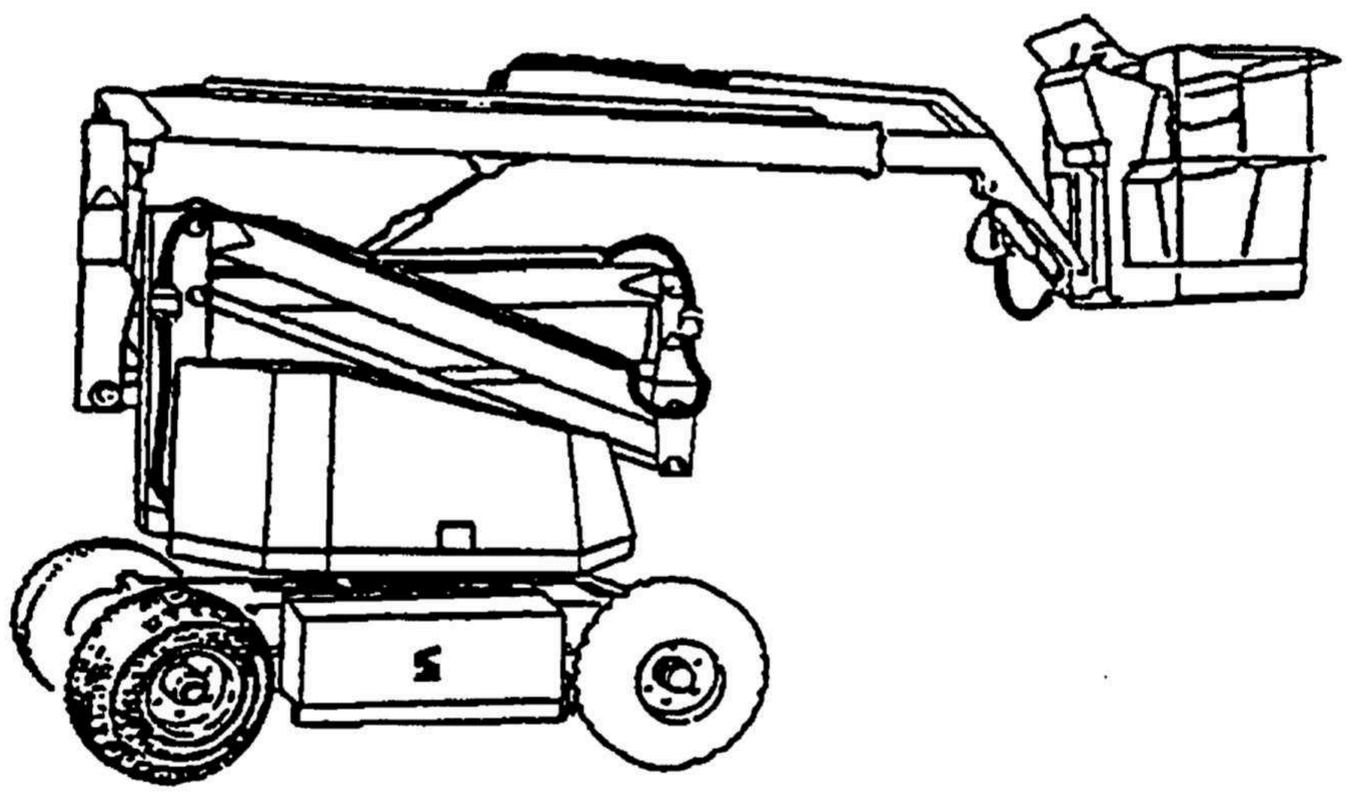

Originally published as:

Hydraulic Lift Platform Technical Manual, Boxer 170 E

by:

Simon Aerials Ltd., Courtstown Industrial Park, Little Island, Co. Cork, Ireland. Reprinted in U.S.A.

(U.S.) Part No. 89-413788 • Issue 2 dated Sept, 1993 •

MidWestTech | Terex Genie Eagle 50/30 Articulated Boom Lift Service Manual | Publication 89_413788

Order the manual at mid-west-tech.com >

CONTENTS

Subject	Page
Amendment Record	(i)
Introduction	(ii)

SECTION 1 BOXER 170 E SPECIFICATION

Clause	Subject	Page
1.	Closed Dimensions and Weights	1.1
2.	Operating Dimensions	1.1
3.	Design Specification	1.1
4.	Mechanical Components	1.2
5.	Hydraulic Components	1.2
6.	Oil	1.2
7.	Equivalent Oils	1.2
8.	Electric Components	1.3
9.	Working Envelope	1.3

SECTION 2 SAFE WORKING PRACTICE

Clause	Subject	Page
1.	Use of the Machine	2.1
2.	Information Sources	2.1
3.	Hazards	2.1
4.	Warnings	2.3

SECTION 3 OPERATING PROCEDURES

Clause	Subject	Page
1.	Pre-use Checks	3.1
2.	Ground Control Checks	3.1
3.	Cage Control Checks	3.2
4.	Use on the Highway	3.2
5.	Drive Controls	3.3
5.1	Forward and Reverse	3.3
5.2	Drive Speed Control	3.3
5.3	Steering Control	3.3
6.	Driving	3.3
7.	Differential Lock	3.4
7.1	Engage Differential Lock	3.4
8.	Braking System	3.4
8.1	Brakes in Static Mode	3.4
8.2	Brakes in Drive Mode	3.5

Continued

MidWestTech | Terex Genie Eagle 50/30 Articulated Boom Lift Service Manual | Publication... Order the manual at mid-west-tech.com >

CONTENTS (continued)

SECTION 3 OPERATING PROCEDURES (continued)

Clause	Subject	Page
8.3	Emergency Braking	3.5
9.	Access Operations (Cage Control)	3.5
10.	Cage Rotation	3.5
11.	Cage Levelling	3.6
12.	Access Operations (Ground Control)	3.6
13.	Complex Control Operation	3.7
14.	After Use	3.7
15.	Battery Charging	3.7
16.	Battery Indicator	3.8
17.	Special Precautions - Cold Weather	3.8
18.	Special Precautions - Safe Working Load	3.8
19.	Special Precautions - Overhead Electrical Cables	3.9
20.	Special Precautions - Towing	3.9
21.	Special Precautions - Wind Conditions	3.9
22.	Special Precautions - Crane Operations	3.9
23.	Special Precautions - Driving on Slopes	3.10
24.	Special Precautions - Testing the Tilt Alarm Circuit	3.12

SECTION 4 EMERGENCY PROCEDURES

Clause	Subject	Page
1.	Procedure	4.1
2.	Cage Operator Incapacity	4.1
3.	Cage Control Failure	4.1
4.	Immobility due to Loss of Drive	4.1
4.1	Battery Failure	4.1
4.2	Drive Motor/Gearbox Failure	4.1
4.2.1	Towing Operations - Towing Package Fitted	4.2
4.2.2	Towing Operations - Towing Package Not Fitted	4.2
5.	Disengage the Brakes	4.3
6.	Re-engage the Brakes	4.3
7.	Crane Operations	4.3
8.	Hydraulic Pump Failure	4.3
8.1	Lowering all Booms	4.4
9.	Emergency Rotation	4.4
10.	Emergency Lowering from Cage (Optional)	4.4

Continued

MidWestTech | Terex Genie Eagle 50/30 Articulated Boom Lift Service Manual | Publication... Order the manual at mid-west-tech.com >

CONTENTS (continued)

SECTION 5 THE HYDRAULIC CIRCUIT

Clause	Subject	Page
1.	Pump Motor	5.1
2.	Lift Function Valve Manifold Block	5.1
3.	Hydraulic Steering System	5.1
4.	Hydraulic Lift Cylinder	5.1
5.	Zoom Cylinder	5.1
6.	Cage Levelling Cylinder	5.1
7.	Hydraulic Oil Tank	5.3
8.	Brakes	5.3
9.	Hydraulic Module	5.3

SECTION 6 THE ELECTRICAL CIRCUIT

Clause	Subject	Page
1.	Introduction	6.1
1.1	Access Circuit	6.1
1.2	Drive Circuit	6.1
2.	Batteries	6.1
2.1	Battery Charger	6.1
2.2	Battery Controller	6.1
2.3	Battery Indicator	6.3
3.	Pump and Drive Motors	6.3
4.	Emergency Stop Pushbuttons	6.3
5.	Footswitch Control	6.3
6.	Tilt Alarm	6.3
7.	Movement Alarm	6.3
8.	Relays - Identification and Functions	6.4
9.	D.C. Contactors	6.4
10.	D.C. Converter (Optional)	6.4
11.	Automatic Beacon Warning System (Optional)	6.4
12.	Fuses	6.5
13.	Drive Motor Controller	6.5
14.	Hour Meter	6.5

Continued

MidWestTech | Terex Genie Eagle 50/30 Articulated Boom Lift Service Manual | Publication... Order the manual at mid-west-tech.com >

REMOVE ALL BURRS AND SHARP EDGES

IF IN DOUBT–ASK DO NOT SCALE

ALL DIMENSIONS IN MM

OTHER OPTIONS

JS 188 – TRAVEL LIGHTS
JS 189 – DC CONVERTOR
JS 190 – WORK LAMP
JS 229 – BATTERY ISOLATOR
22000-0423 – CHARGER/MACHINE INTERLOCK
22000-0242 – R.C.C.B.

NOTES:
