
CONSTRUCTOR
MODEL AT45

Genie®
A TEREX COMPANY

SERVICE
MANUAL

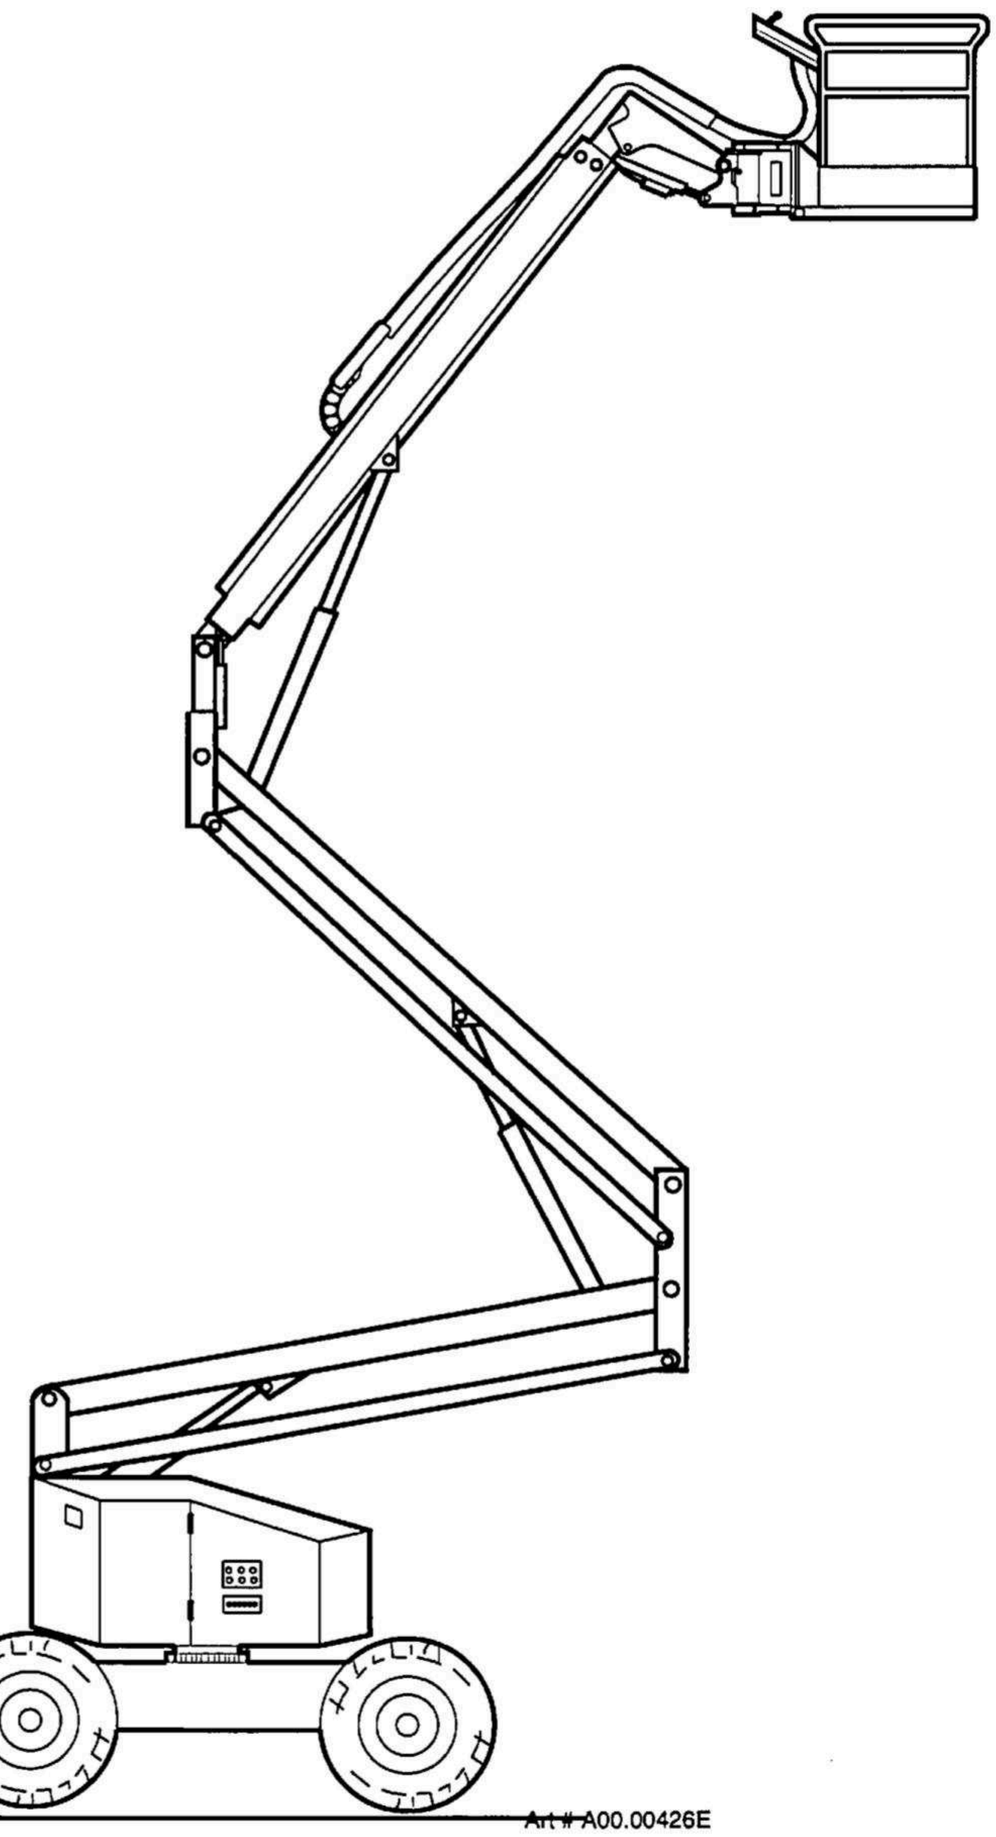

For Service Concerns Only
Direct Phone Line to
Service Department,
8:00 AM to 5:00 PM
Central Time,
Monday thru Friday.

Phone (414) 355-3181

Art # A00.00426E

Part No. 89-445007 • Revision "0.2" dated May 1996 •

MidWestTech | Terex Genie Constructor AT45 Articulated Boom Lift Service Manual | Publication 89_445007

Order the manual at mid-west-tech.com >

Table of Contents

Introduction vi
Machine Specifications viii
Primary Machine Component ix
Undercarriage Component Locator x
Superstructure Component Locator xi
Lower Boom Component Locator xiii
Middle Boom Component Locator xiv
Upper Boom Component Locator xv
Platform Component Locator xvi
Lubrication Chart xviii
Lubrication Diagram xix

Section 1: Transportation and Emergency Procedures

Transporting the Unit 1-4
Unloading Procedures 1-6
Emergency System and Procedures
- Emergency Pump 1-8
- Unpowered Emergency Movement 1-8
- Emergency Lowering 1-9

Section 2: Hydraulic System

Hydraulic Fluid 2-5
- Handling Precautions 2-5
- Fluid Recommendations 2-5
- Hydraulic Fluid Analysis 2-5
- System Flushing Procedure 2-6

Hydraulic System Components 2-9
- Hydraulic Pump 2-9
  - Main Hydraulic Pump 2-9
  - Main Hydraulic Pump Adjustment 2-10
- Main Hydraulic Pump De-stroke Valve 2-10
  - Emergency Pump 2-11
  - Emergency Pump Relief Valve Adjustment 2-11
- Drive/ Steer Manifold Assembly 2-11
  - Control Valve Manifold 2-11
  - Directional Control Valves 2-12
- Motion Control Valve Assembly 2-12
  - Motion Control Valve 2-12
  - Brake Needle Valve 2-12
  - Shuttle Valve 2-13
  - Pressure Reducing Valve 2-13
  - Cross Port Relief Manifold 2-13
  - Stop Cushion Solenoid Valve 2-13
- High Pressure Filter 2-13
  - High Pressure Filter Element 2-13
- Hydraulic Fluid Reservoir 2-13
- Hydraulic Reservoir Maintenance 2-14

MidWestTech | Terex Genie Constructor AT45 Articulated Boom Lift Service Manual | Publi... Order the manual at mid-west-tech.com >

Table of Contents (Continued)

Section 2: Hydraulic System (Continued)
Boom Lift System 2-14
Directional Control Valves 2-14
Platform 2-14
Ground 2-14
Lift Cylinders 2-15
Boom Telescope System 2-16
Directional Control Valves 2-16
Platform 2-16
Ground 2-16
Pressure Reducing Valve 2-16
Telescope Cylinder 2-17
Superstructure Swing System 2-18
Directional Control Valves 2-18
Platform 2-18
Ground 2-18
Double Counterbalance Valve (Swing) 2-18
Swing Drive Motor/ Reducer Assembly 2-18
Platform Rotate System 2-19
Rotate Control Valve 2-19
Rotary Actuator 2-19
Rotary Actuator Maintenance 2-19
Platform Rotator Pressure Relief Valve 2-19
Platform Leveling System 2-20
Level Control Valve 2-20
Double Pilot Operated Check Valve 2-20
Master Level Cylinder 2-20
Relief Valves 2-20
Slave Level Cylinder 2-20
Steer System 2-22
Drive/ Steer Manifold Assembly 2-22
Steer Cylinder 2-22
Steer System Maintenance 2-22
Hydraulic Swivel (Optional) 2-23
Solenoid Valve Checks 2-23

Section 3: Drive System
Drive System Components 3-3
Drive Motors 3-3
Front Wheel Motor 3-3
Hydraulic Drive Motor 3-3
Rear Axle Assembly 3-3
Rear Axle Drive Motor 3-4
Rear Axle Drive Motor Replacement 3-4
Rear Axle Assembly Replacement 3-5
Rear Axle Brake Adjustment 3-5
Hydraulic Manifold Valve Assembly 3-7

MidWestTech | Terex Genie Constructor AT45 Articulated Boom Lift Service Manual | Publi... Order the manual at mid-west-tech.com >

Table of Contents (Continued)


Section 3: Drive System (Continued)

Motion Control Valve Assembly 3-7
Motion Control Valve 3-7
Flow Control Valve 3-7
Shuttle Valve 3-8
Pressure Reducing Valve 3-8
Cross Port Relief Manifold 3-8
Solenoid Valve 3-8
Drive Enable Valve 3-8
Platform Drive Control Handle 3-8

Section 4: Electrical System

Electrical System 4-3
Battery 4-3
Battery Maintenance (In Storage) 4-3
Battery Maintenance (In Use) 4-3
Battery Troubleshooting 4-4
Battery Replacement 4-4
Electrical Theory of Operation 4-5
Ground Ignition Circuit 4-5
Platform Ignition Circuit 4-5
Pump Circuit 4-5
Drive Control Handle Circuit 4-5
Platform Control Box 4-6
Emergency Stop Button 4-6
Ignition Switch 4-6
Toggle Switch 4-6
Push Button 4-6
Light Emitting Diode 4-7
Foot Pedal Switch 4-7
Ground Control Box 4-8
Circuit Breaker 4-8
Toggle Switch 4-8
Push Button 4-8
Key Switch 4-8
Volt Meter 4-8
Hour Meter 4-8
Engine Oil Pressure Gauge 4-9
Pendant Control 4-9
Toggle Switch 4-9
Movement Alarm 4-9
Tilt Alarm 4-9
Tilt Alarm Test 4-10
Tilt Alarm Sensor Adjustment 4-10
Warning Horn 4-10
Relays 4-10
Limit Switch 4-10
Electrical and Continuity Checks 4-11

MidWestTech | Terex Genie Constructor AT45 Articulated Boom Lift Service Manual | Publi... Order the manual at mid-west-tech.com >

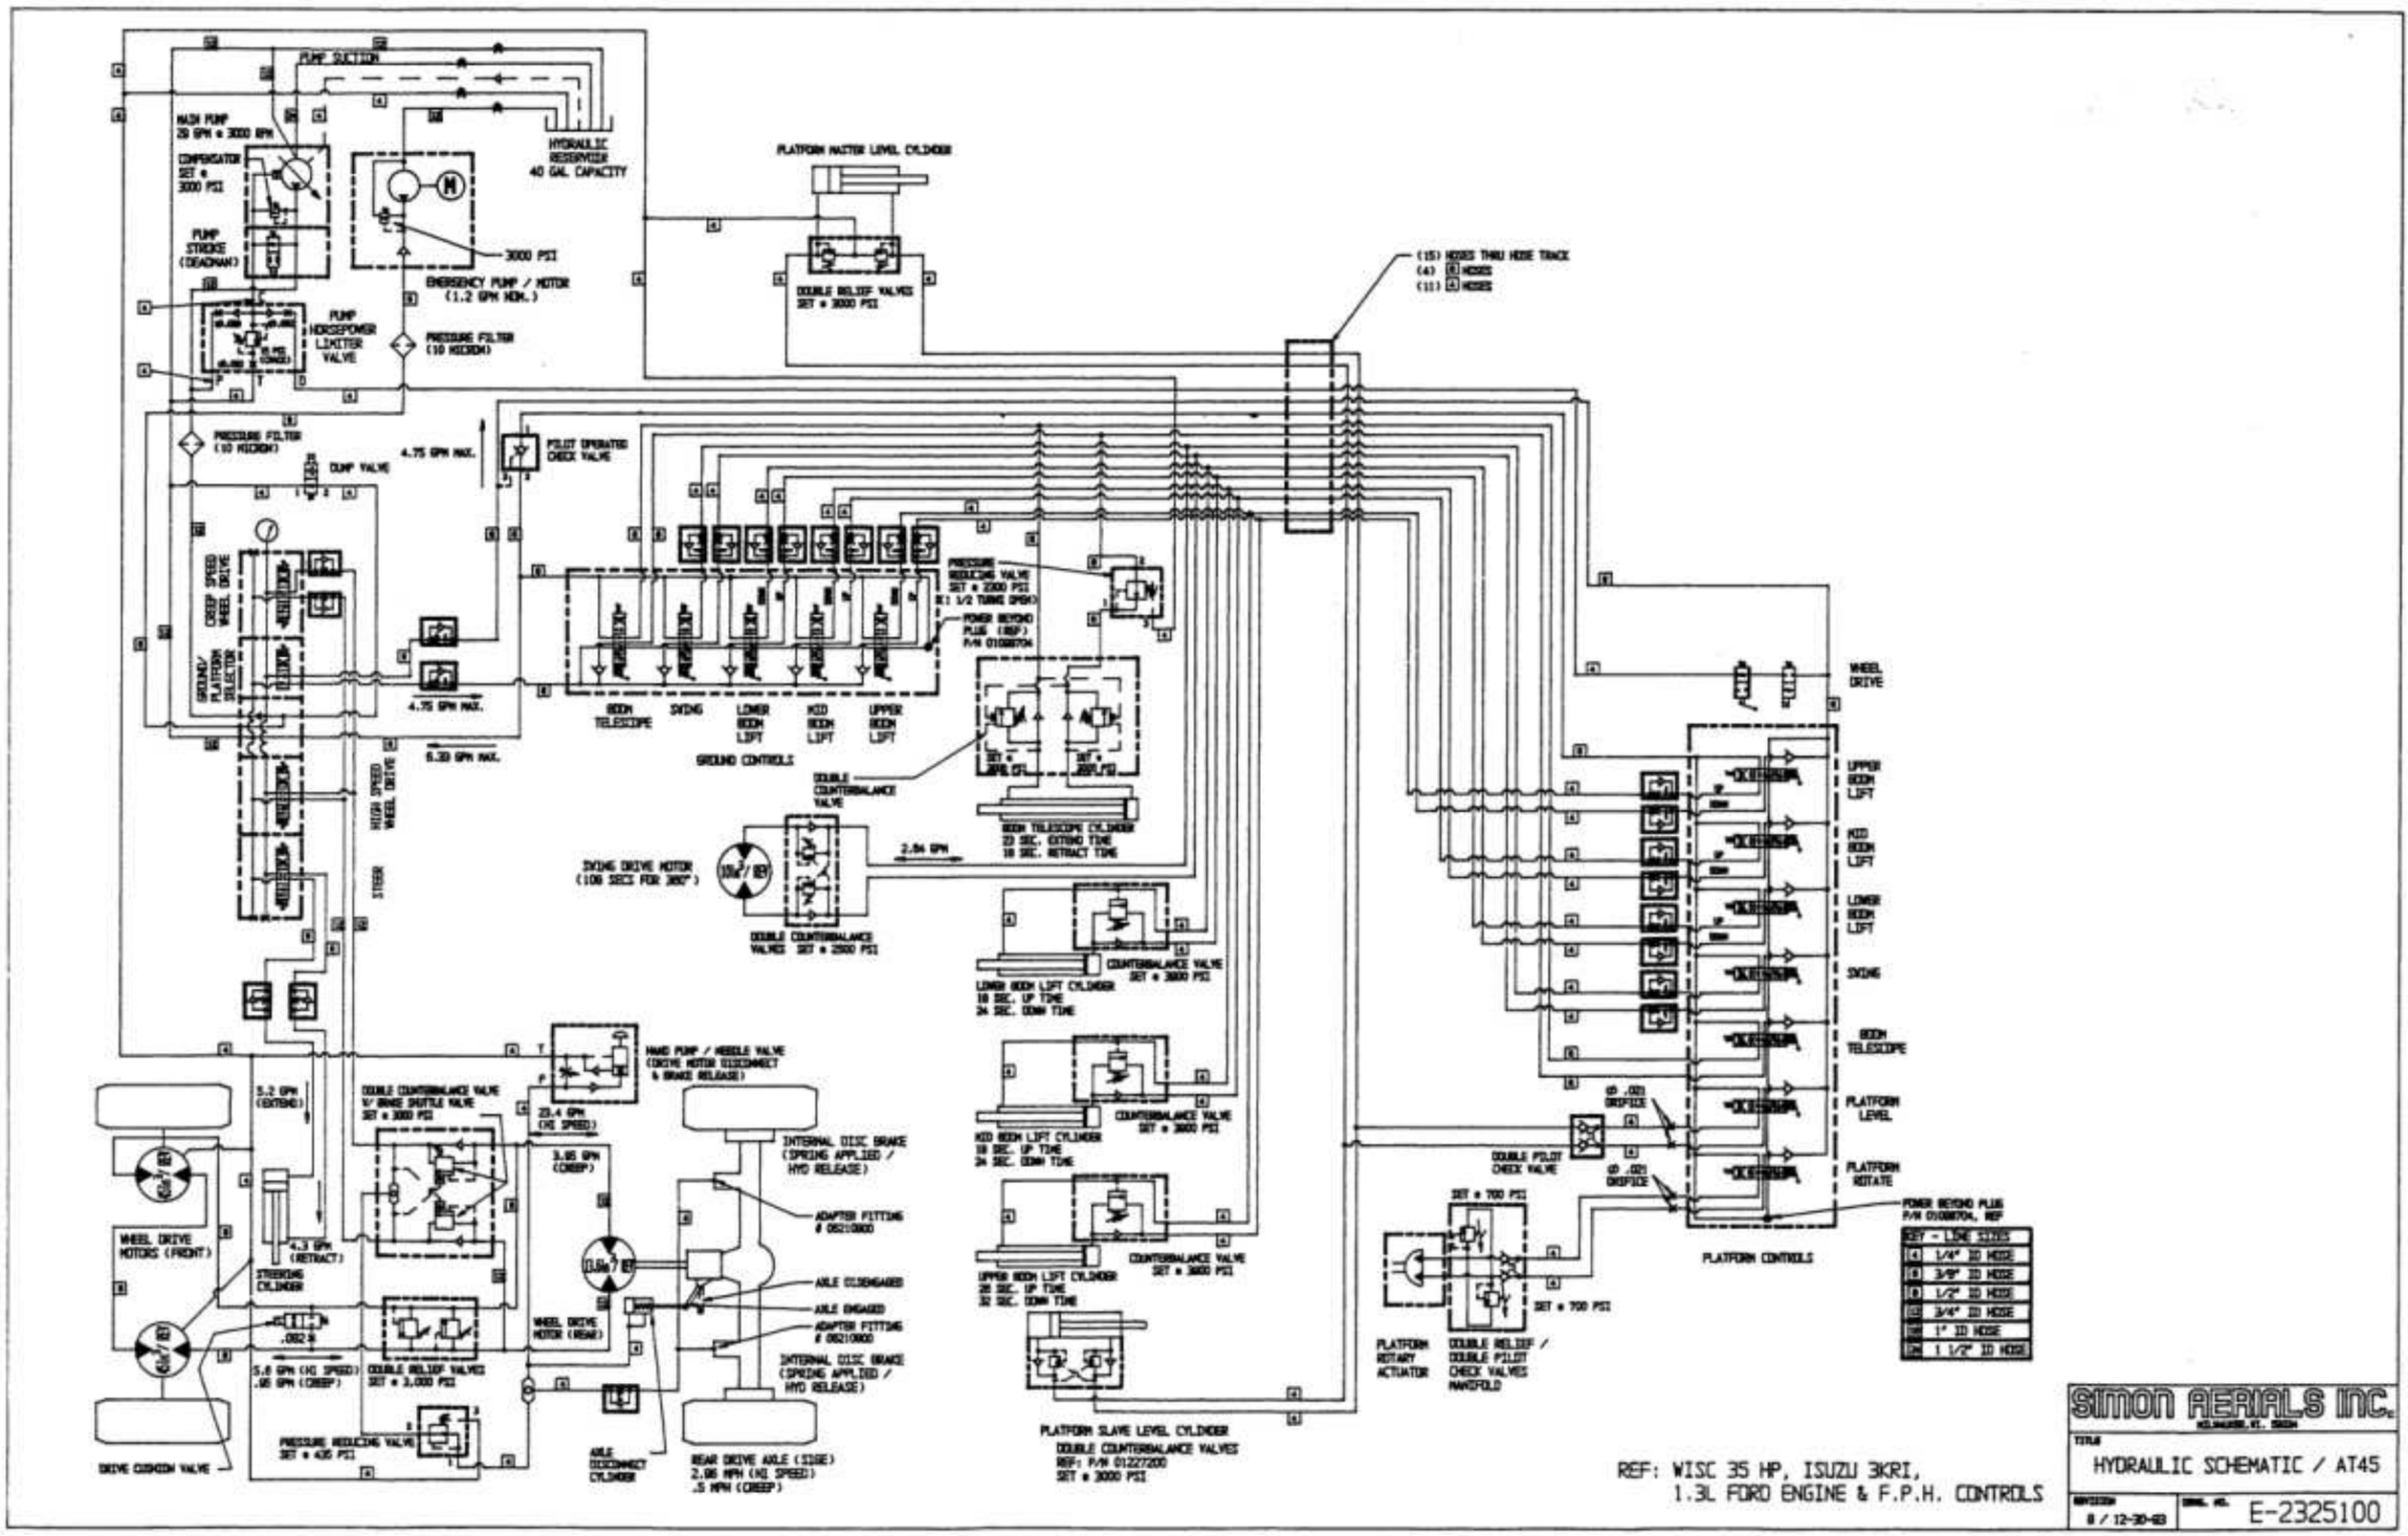

Order the manual at mid-west-tech.com >