
MODEL AT 60

Featuring "Full Hydraulic" Control System

SERVICE MANUAL

Genie®
A TEREX COMPANY

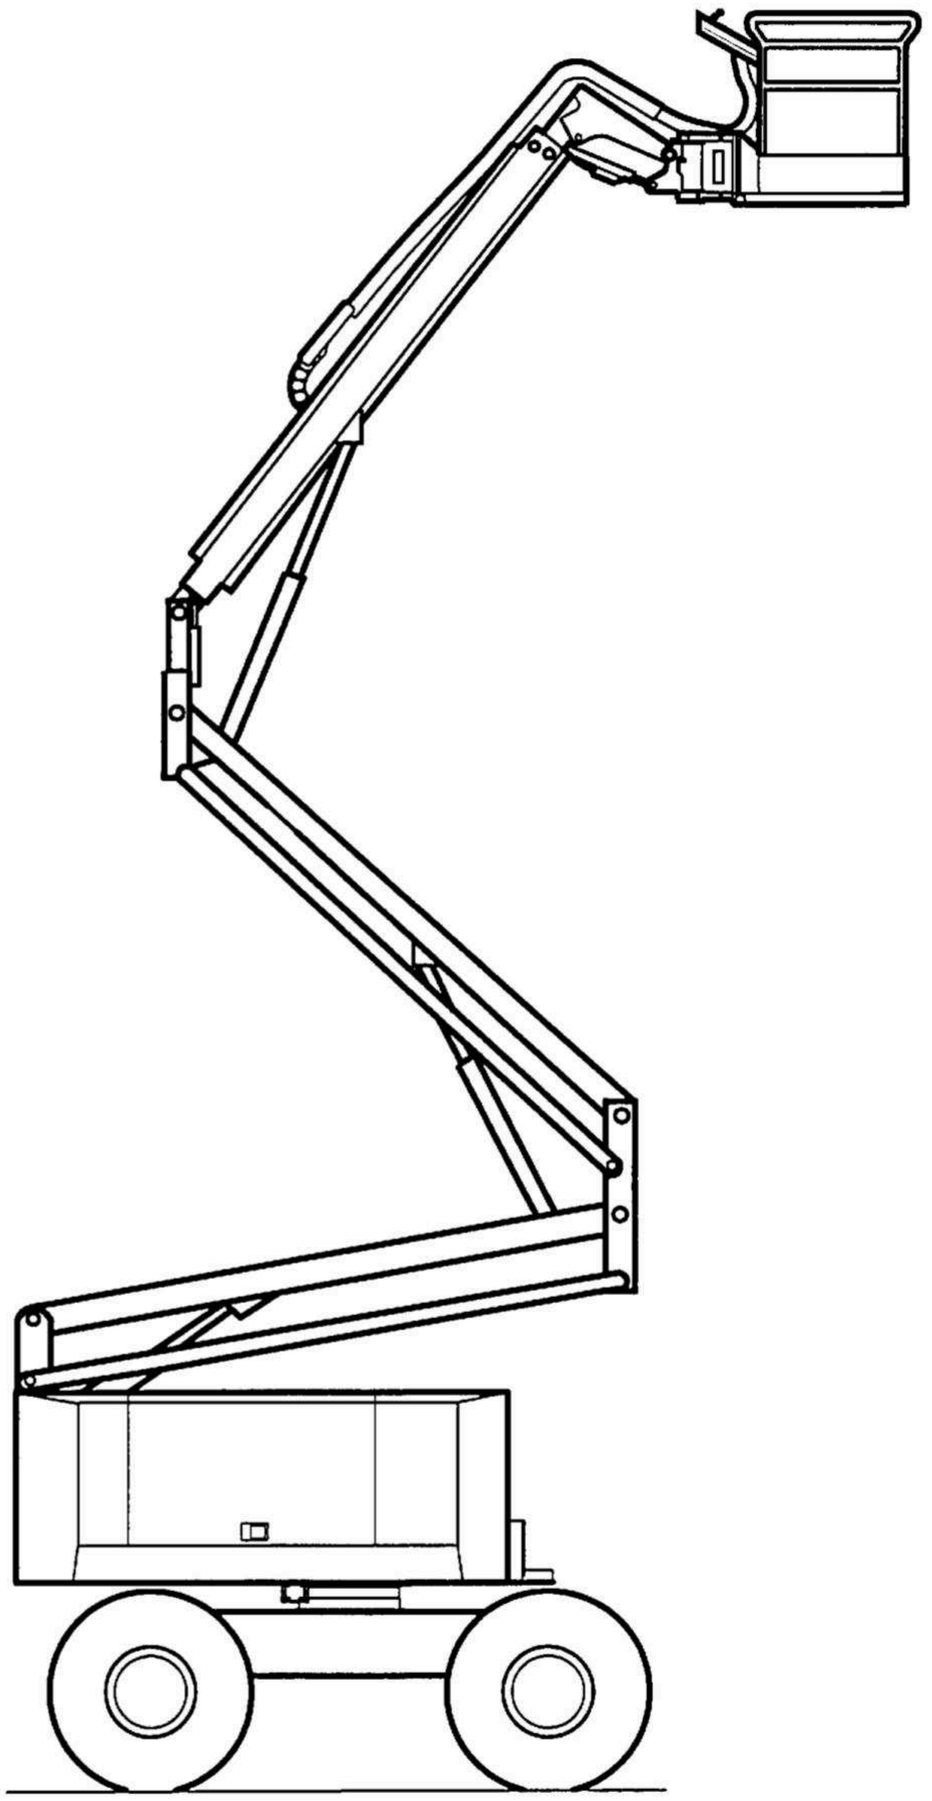

For Service Concerns Only:
Direct Phone Line to Service Department, 8:00 AM to 5:00 PM Central Time, Monday thru Friday.

Phone (414) 355-3181

Art # A00.00439E

Part No. 89-446107 • Revision "0.5" dated Dec. 1996 •

MidWestTech | Terex Genie AT60 Hydraulic Articulated Boom Lift Service Manual | Publication 89_446107
Order the manual at mid-west-tech.com >

Table of Contents

Introduction vi
Machine Specifications viii
Machine Component Locator ix
Undercarriage Component Locator x
Superstructure Component Locator xi
Lower Boom Component Locator xii
Mid Boom Component Locator xiii
Upper Boom Component Locator xiv
Platform Component Locator xv
Lubrication Chart xvi

Section 1: Transportation and Emergency Procedures

Transporting the Unit 1-4
Lifting the Unit 1-6
Unloading Procedures 1-8
Emergency System and Procedures 1-10
Emergency Electrical Pump 1-10
Unpowered Emergency Movement 1-10
Emergency lowering 1-11

Section 2: Hydraulic System

Hydraulic Fluid 2-5
- Handling Precautions 2-5
- Fluid Recommendations 2-5
- Fluid Contamination Checks 2-5
- System Flushing Procedure 2-6

Hydraulic System Components 2-9
- Electro-Proportional Circuit 2-9
- Hydraulic Pumps 2-9
  - Main Hydraulic Pump (Type 1) 2-9
    - Main Hydraulic Pump Adjustment 2-10
  - Main Hydraulic Pump (Type 2) 2-11
    - Main Hydraulic Pump Adjustment 2-13
  - Emergency Pump 2-13
    - Emergency Pump Adjustment 2-13
- High Pressure Filter 2-14
  - High Pressure Filter Element 2-14
- Hydraulic Fluid Reservoir 2-14
  - Hydraulic Reservoir Maintenance 2-14
- Drive/ Brake Valve Assembly 2-15
  - Motion Control Valve 2-15
  - Brake Needle Valve 2-15
  - Brake Shuttle Valve 2-15
  - Pressure Reducing Valve 2-16
  - Double Relief Valve 2-16
  - Drive Cushion Solenoid Valve 2-16
  - Two Speed Drive Valve 2-16

MidWestTech | Terex Genie AT60 Hydrualic Articulated Boom Lift Service Manual | Publica... Order the manual at mid-west-tech.com >

Table of Contents (Continued)

Section 2: Hydraulic System (Continued)

Boom Lift System 2-16
Directional Control Valves 2-16
Lift Cylinders 2-17
Boom Telescope System 2-18
Directional Control Valves 2-18
Pressure Reducing Valve 2-18
Telescope Cylinder 2-19
Superstructure Swing System 2-20
Directional Control Valves 2-20
Double Counterbalance Valve 2-20
Swing Drive Motor/ Reducer Assembly 2-20
Platform Rotate System 2-21
Rotate Control Valve 2-21
Rotary Actuator 2-21
Rotary Actuator Maintenance 2-21
Platform Rotator Pressure Relief Valve 2-21
Platform Level System 2-22
Level Control Valve 2-22
Double Pilot Operated Check Valve 2-22
Master Level Cylinder 2-22
Relief Valves 2-22
Slave Level Cylinder 2-22
Steer System 2-24
Drive/ Steer Manifold Assembly 2-24
Steer Cylinder 2-24
Steer System Maintenance 2-24
Hydraulic Swivel 2-24

Section 3: Drive System

Drive System Components 3-3
Drive Motors 3-3
Front Wheel Motor 3-3
Hydraulic Drive Motor 3-3
Rear Axle Drive Motor 3-4
Rear Axle Drive Motor Replacement 3-4
Rear Axle Assembly Replacement 3-4
Rear Axle Brake Adjustment 3-6
Rear Axle Assembly 3-6
Drive/ Brake Valve Assembly 3-7
Motion Control Valve 3-7
Brake Needle Valve 3-7
Brake Shuttle Valve 3-7
Pressure Reducing Valve 3-8
Double Relief Valve 3-8
Drive Cushion Solenoid Valve 3-8
Two Speed Drive Valve 3-8
Drive Enable Valve 3-8
Hydraulic Manifold Valve Assembly 3-8


MidWestTech | Terex Genie AT60 Hydrualic Articulated Boom Lift Service Manual | Publica... Order the manual at mid-west-tech.com >

Table of Contents (Continued)

Section 4: Electrical System

Electrical System 4-3
Battery 4-3
Battery Maintenance (In Use) 4-3
Battery Troubleshooting 4-4
Battery Replacement 4-4
Electrical Theory of Operation 4-5
Ground Ignition Circuit 4-5
Platform Ignition Circuit 4-5
Pump Circuit 4-5
Drive Control Handle Circuit 4-5
Platform Control Box 4-6
Emergency Stop Button 4-6
Ignition Switch 4-6
Toggle Switch 4-6
Push Button 4-6
Light Emitting Diode 4-7
Foot Pedal Switch 4-7
Ground Control Box 4-8
Circuit Breaker 4-8
Toggle Switch 4-8
Push Button 4-8
Key Switch 4-8
Volt Meter 4-8
Hour Meter 4-8
Engine Oil Pressure Gauge 4-9
Pendant Control 4-9
Toggle Switch 4-9
Movement Alarm 4-9
Tilt Alarm 4-9
Tilt Alarm Test 4-10
Tilt Alarm Sensor Adjustment 4-10
Warning Horn 4-10
Relays 4-10
Limit Switch 4-10
Electrical and Continuity Checks 4-11

MidWestTech | Terex Genie AT60 Hydrualic Articulated Boom Lift Service Manual | Publica... Order the manual at mid-west-tech.com >

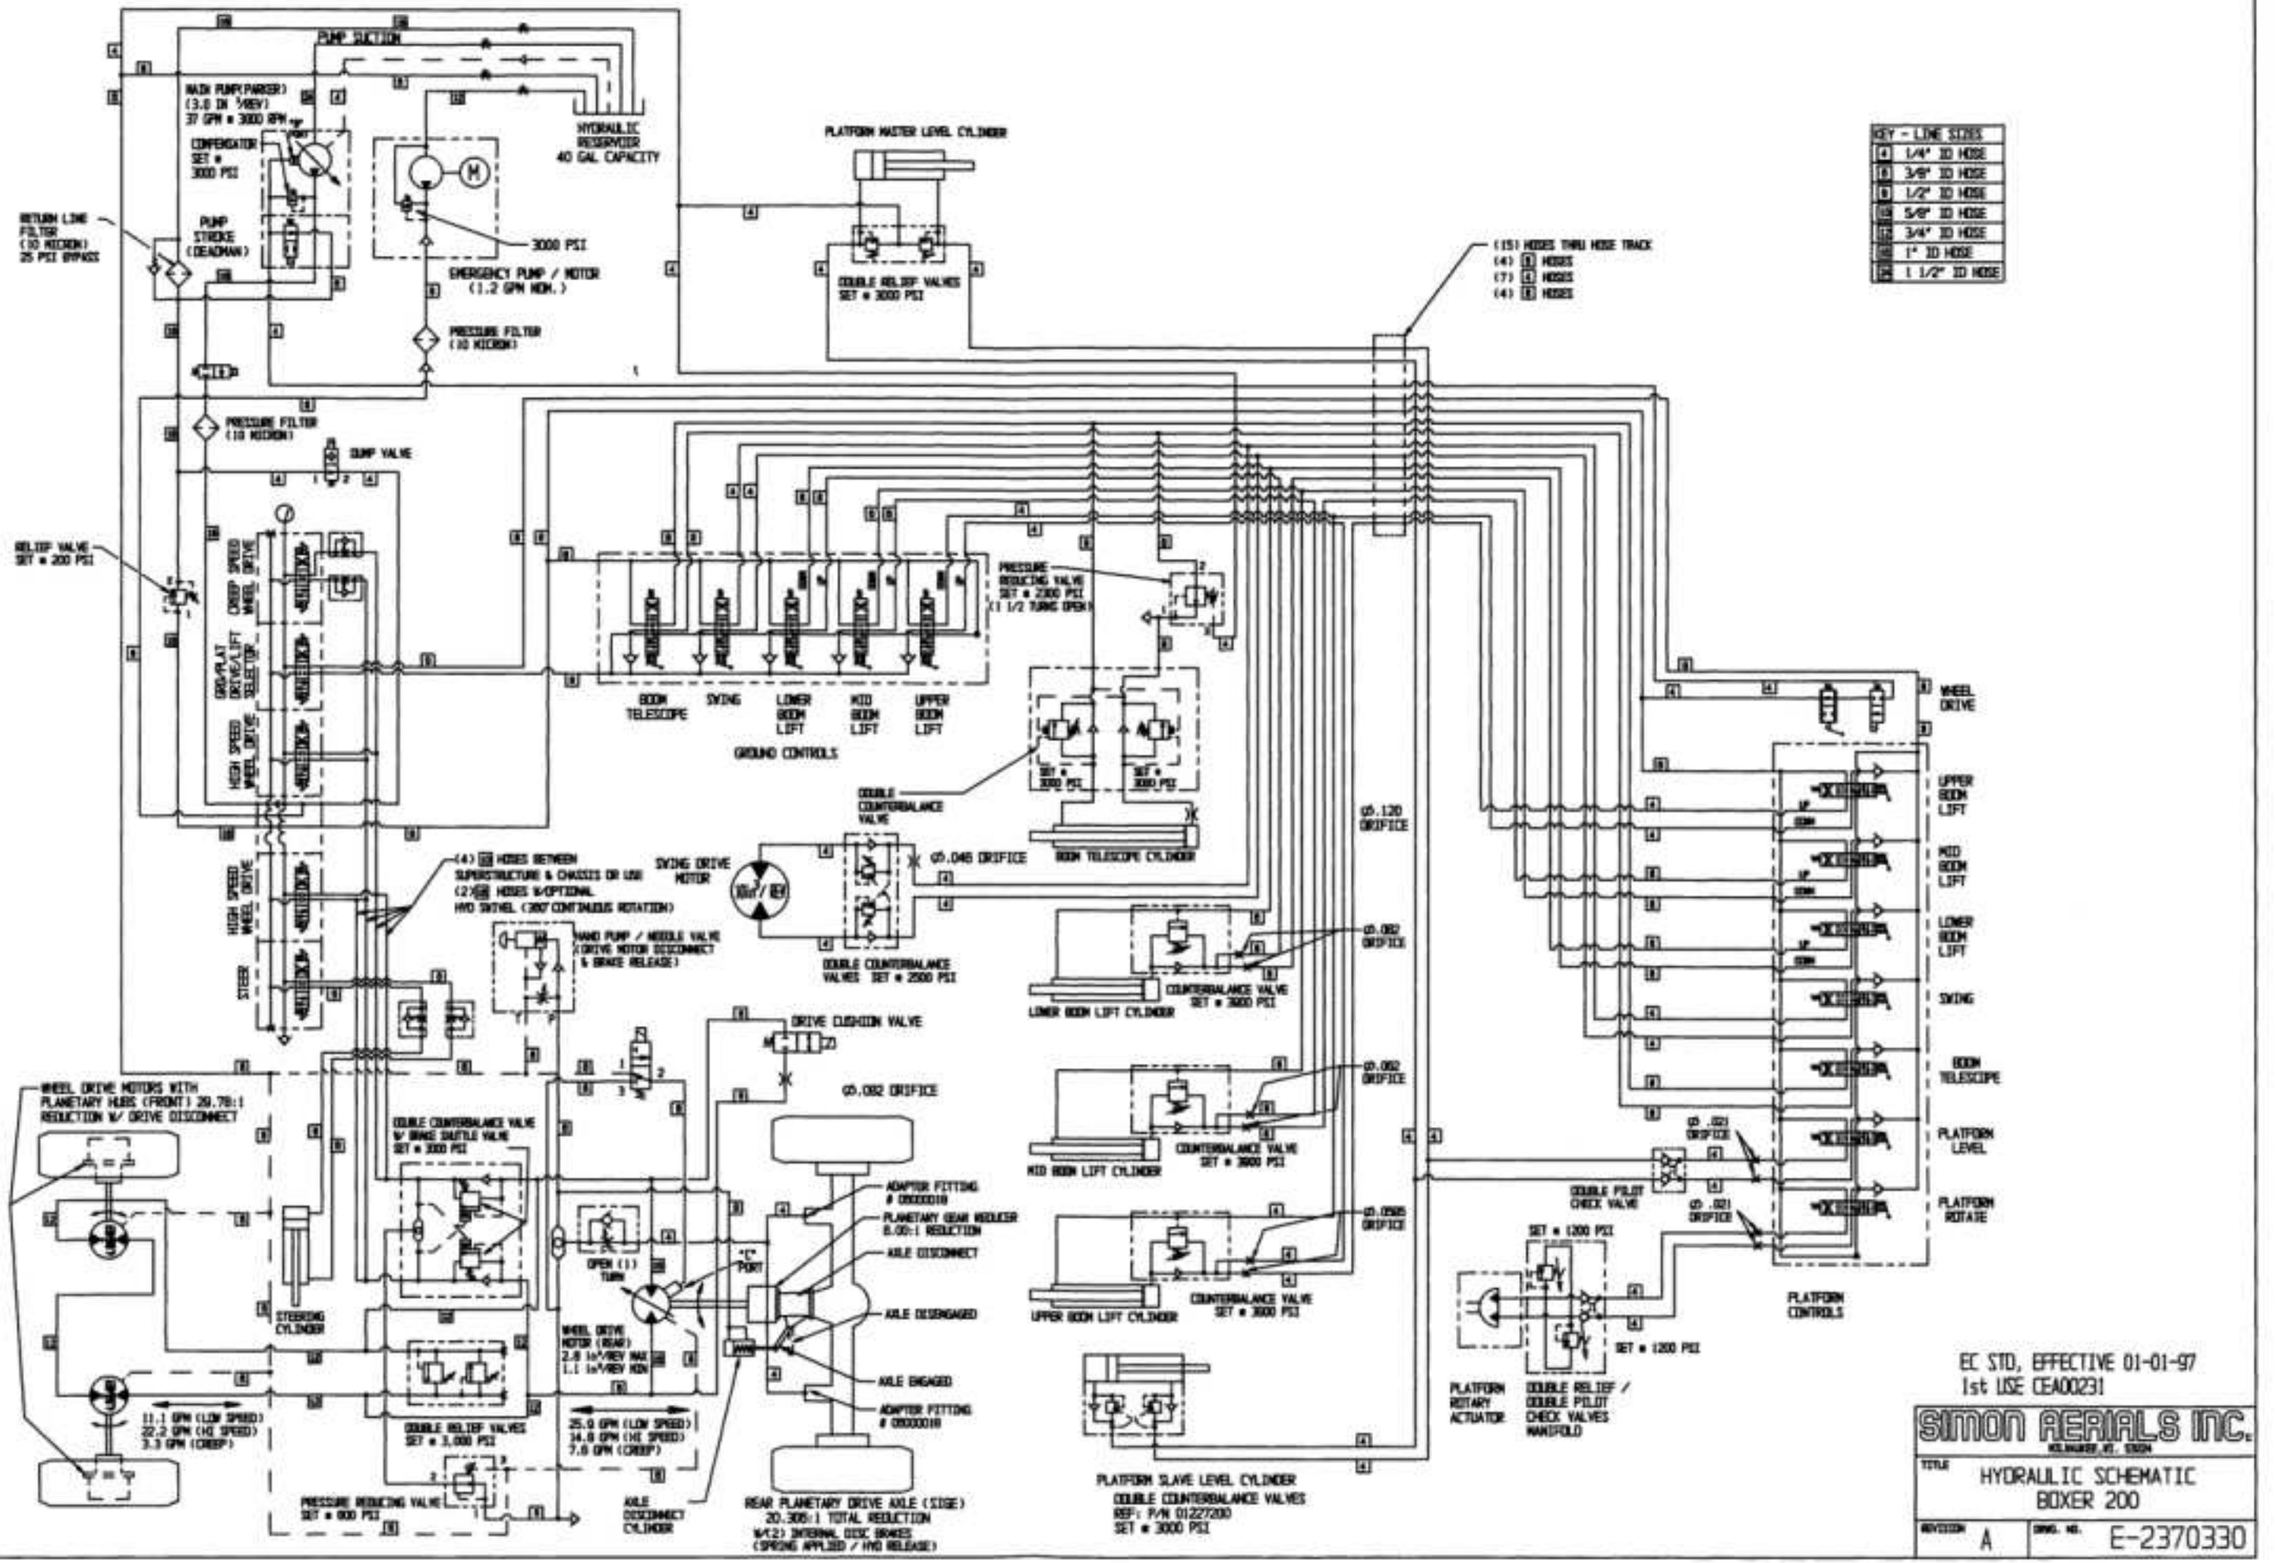

Order the manual at mid-west-tech.com >