
FALCON
2034
VERTICAL LIFT

SERVICE
MANUAL

Genie®
A TEREX COMPANY

For Service Concerns Only:
Direct Phone Line to
Service Department,
8:00 AM to 5:00 PM
Central Time,
Monday thru Friday.

Phone (414) 355-3181

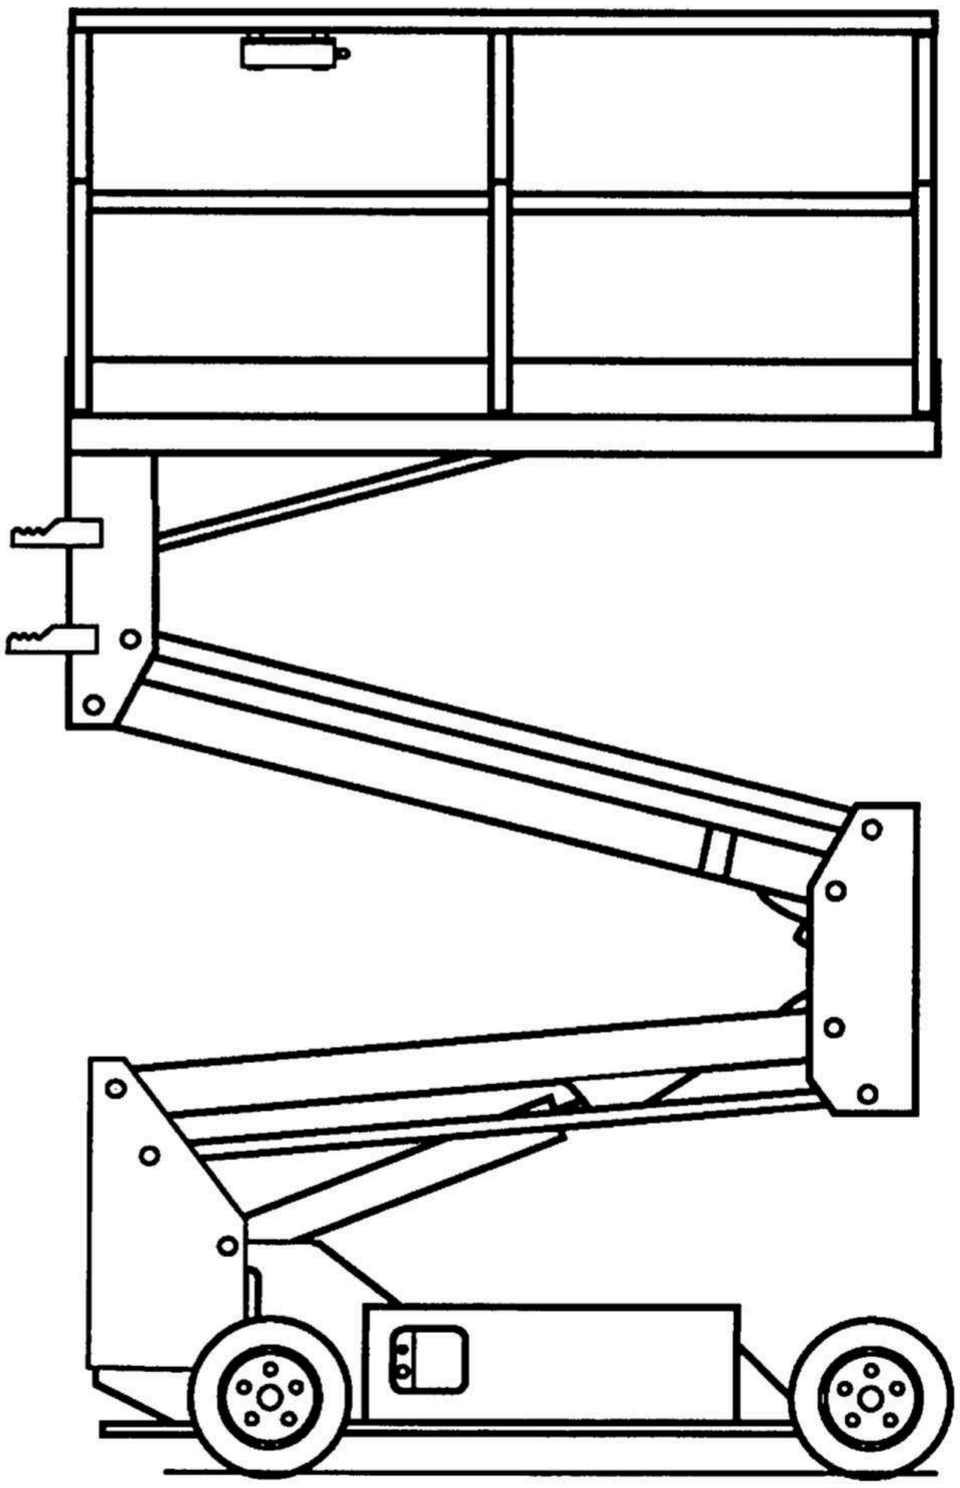

Part No. 89-750007 • Initial Issue, dated November, 1992 •

MidWestTech | Terex Genie Falcon 2034 Vertical Boom Lift Service Manual | Publication 89_750007

Order the manual at mid-west-tech.com >

Table of Contents

Introduction v
Machine Specifications vii
Primary Machine Components viii
Undercarriage Components ix
Lubrication Chart x
Lubrication Diagram xi

Section 1: Transportation and Emergency Procedures

Transporting the Unit 1-3
- Towing of the Falcon 2034 1-3
- Fork Lifting of the Falcon 2034 1-3
- Truck Transport of the Falcon 2034 1-3
- Unloading Procedures 1-4

Emergency System and Procedures 1-5
- Emergency Lowering 1-5
- Emergency Drive 1-5
- Emergency Procedures 1-6

Section 2: Hydraulic System

Hydraulic Fluid 2-3
- Handling Precautions 2-3
- Fluid Recommendations 2-3
- Hydraulic Fluid Analysis 2-3
- System Flushing Procedure 2-4

Hydraulic System Components 2-5
- Hydraulic Fluid Reservoir 2-5
- Hydraulic Pump 2-5
- Control Valve Assembly 2-5
- Main Relief Valve 2-5
- Sequence Valve 2-6
- Steer Valve 2-6
- Steer Bypass Valve 2-6
- Drive Valve 2-6
- Counterbalance Valves (Drive) 2-6
- Lift Valve (Normally Closed) 2-6
- Lift Valve (Normally Open) 2-7
- Brake Release Shuttle Valve 2-7
- Hi Speed Valve 2-7
- Check Valves 2-7
- Lowering Valve 2-7
- Velocity Fuse 2-7
- Pressure Switch 2-7
- Cylinders 2-7
- Drive Motors 2-7

Hydraulic System Functional Description 2-8

MidWestTech | Terex Genie Falcon 2034 Vertical Boom Lift Service Manual | Publication 8... Order the manual at mid-west-tech.com >

Table of Contents (Continued)

Section 3: Electrical System

Electrical System 3-3
- Battery 3-3
  - Battery Maintenance (In Storage) 3-3
  - Battery Maintenance (In Use) 3-3
  - Battery Preventive Maintenance 3-4
  - Battery Replacement 3-4
- Battery Charger 3-4
  - Battery Charger Troubleshooting 3-5
    - No Transformer Hum and Ammeter Does Not Register 3-6
    - Transformer Hums But No Ammeter Indication 3-6
    - Charger Dc Fuse Link(s) Blows 3-6
    - Charger Output Is Low 3-6
    - Charger Does Not Turn Off 3-7
    - AC Line Fuse or Circuit Breaker Blows 3-7
- Movement Alarm (Optional) 3-7
- Tilt Alarm (Optional) 3-7
  - Tilt Alarm Test 3-7
  - Tilt Alarm Adjustment 3-7
- Descent Alarm (Optional) 3-8
- Automatic Warning Beacon (Optional) 3-8
- Relays 3-8
- Emergency Stop Button 3-8

MidWestTech | Terex Genie Falcon 2034 Vertical Boom Lift Service Manual | Publication 8... Order the manual at mid-west-tech.com >

Table of Contents (Continued)

Section 4: Mechanical Components

Mechanical Components 4-3
- Undercarriage 4-3
- Tires 4-3
  - Changing Tires 4-3
- Wheels And Lug Nuts 4-4
- Front Hub Assembly 4-4
- Repacking Front Wheel Bearings 4-4
- Drive Motors 4-4
- Steer Cylinder Seal Replacement 4-4
- Brake Cylinder Seal Replacement 4-5
- Hoses and Cables 4-5
- Boom 4-5
- Boom Lift Cylinder 4-5
  - Boom Lift Cylinder Removal 4-6
  - Boom Lift Cylinder Replacement 4-6
  - Boom Lift Cylincer Seal Replacement 4-7
- Boom And Parallel Arm Pivot Pin Replacement 4-7
- Boom And Parallel Arm Pivot Pin Bushing Replacement 4-8
- Lift Cylinder Holding Valve Replacement 4-8
- Lift Cylinder Velocity Fuse Replacement 4-8
- Cushion Cylinder Replacement 4-8

Section 5: Troubleshooting


General Troubleshooting Tips 5-3
Troubleshooting Chart 5-4

Index

Appendix

Hydraulic Schematic SCS-218951-0 ..... A-3
Hydraulic Schematic SDS-216190-0 ..... A-5
Electrical Schematic SCS-218950-0 ..... A-7
Electrical Schematic SCS-218949-0 ..... A-9
Electrical Schematic SDS-216779-0 ..... A-11

MidWestTech | Terex Genie Falcon 2034 Vertical Boom Lift Service Manual | Publication 8... Order the manual at mid-west-tech.com >

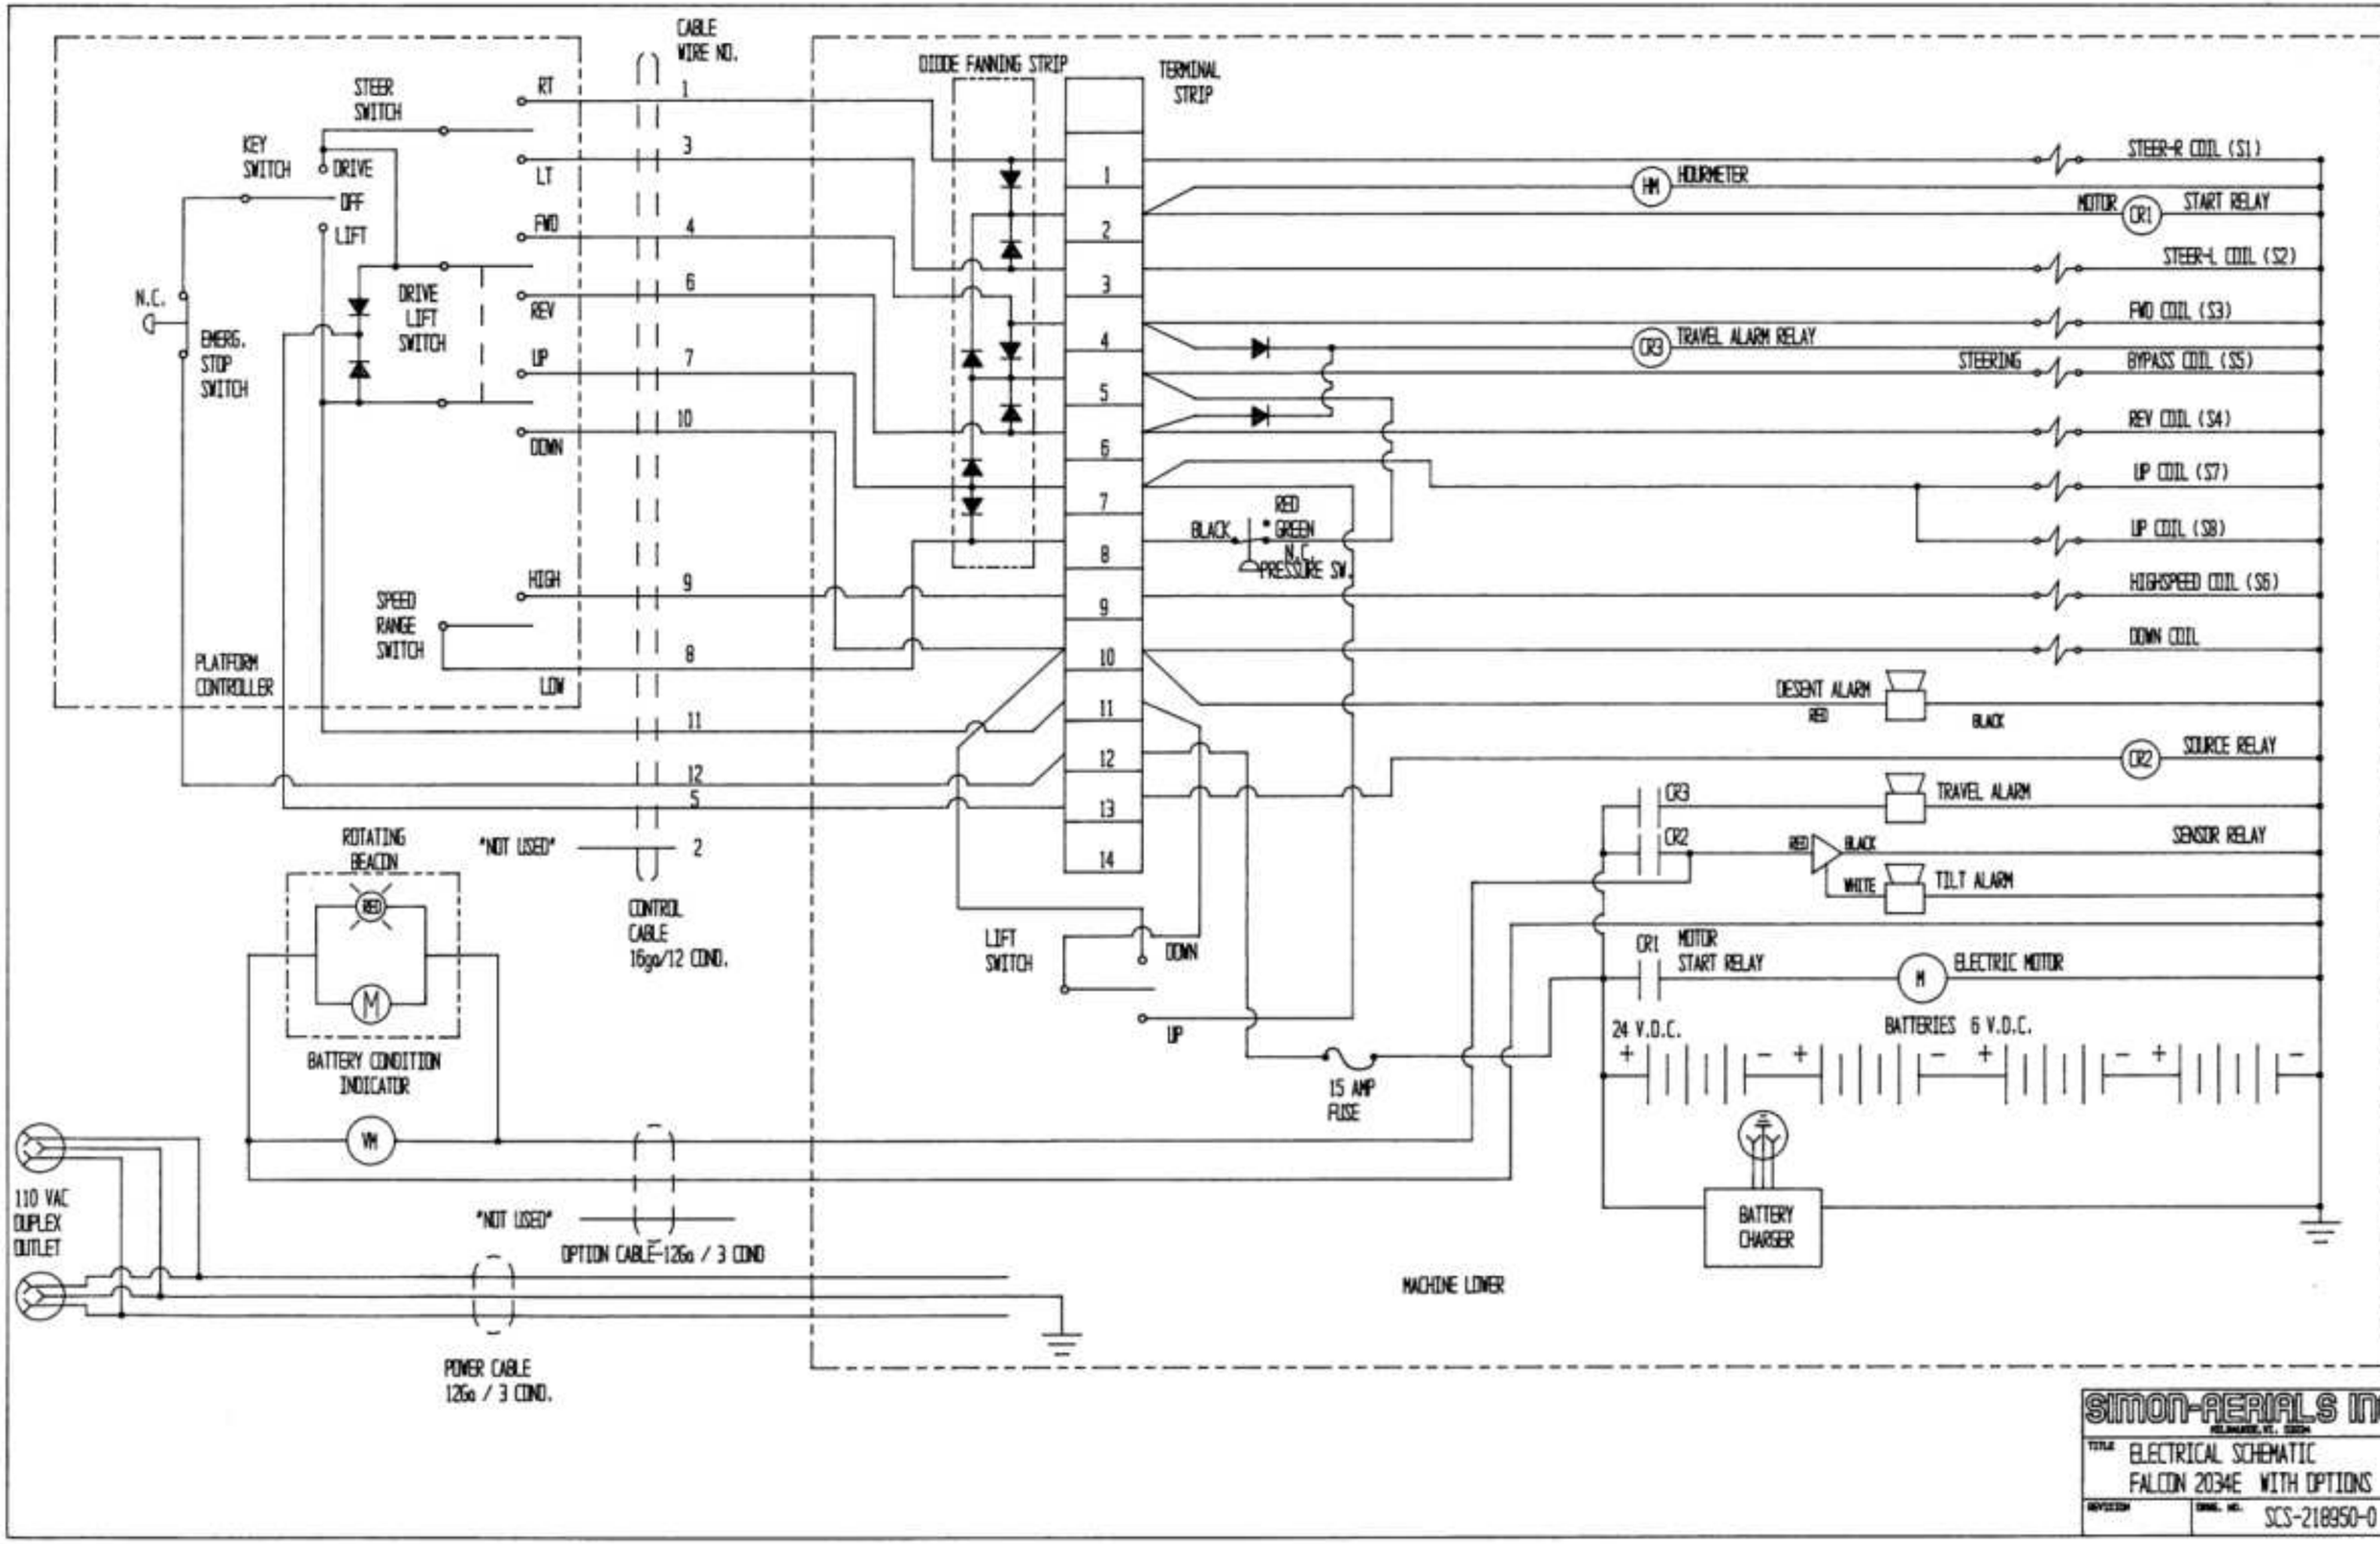

Order the manual at mid-west-tech.com >