PART MANUAL

GRADALL®

552/554

9020-5894

April 24, 2006

CORPORATE OFFICE

JLG INDUSTRIES, INC.
1 JLG DRIVE
McConnellsburg, PA
17233-9533
USA
Telephone: (717) 485-5161
Fax: (717) 485-6417

GRADALL DIVISION

JLG INDUSTRIES, INC.
406 Mill Avenue S.W.
New Philadelphia, OH
44663
USA
Telephone: (330) 339-2211
Fax: (330) 339-8458

MidWestTech | Gradall 552, 554 Telehandler Parts Manual | Publication 9020-5894 Order the manual at mid-west-tech.com >

CHASSIS AND ATTACHING PARTS

Cab Enclosure 2-4
Cab Glass 2-12
Frame and Attaching Parts 2-2, 2-3
Front Axle Mounting 2-5, 2-6
Heater amd Piping 2-4.1
Hub and Spindle 2-7.1, 2-7.2
Rear Axle 2-7
Rear Axle Mounting 2-5.1
Transmission Mounting 2-8, 2-9, 2-10, 2-11

BOOMS

Boom (2S) 3-20, 3-21
Extension and Retraction Chains (3SS/3SL) 3-10, 3-11, 3-12
First Section (3SS/3SL) 3-2, 3-3
First Section (3S) 3-15
Hose Take Up Beam and Cover (3SS/3SL) 3-9
High Reach Head 3-14
Manual Fourth Section (3SS/3SL) 3-8
Second Section (3SS/3SL) 3-4, 3-5
Second Section (3S) 3-16, 3-17
Third Section and Sleeve (3SS/3SL) 3-6, 3-7
Third Section (3S) 3-18
Universal Head 3-13

ATTACHMENTS AND ACCESSORIES

Attachment 4-16, 4-17
Carriage (60" and 80") 4-4a
Low Pivot Carriage (48" and 72") 4-3
Outrigger 4-19
Quick Switch Coupler 4-18
QS-PPG Structurals 4-14
Side Shift PPG Structurals 4-12a, 4-13
Swing Fork Assembly 4-10
Universal Carriage (48") 4-2
Winch 4-5
Winch Reaving 4-6, 4-7, 4-8, 4-9, 4-10a

ENGINES AND ATTACHING PARTS

Air Cleaner (Diesel) 5-8
Air Cleaner (Gas) 5-9
Air Cleaner Piping 5-12
Auxiliary Transmission Cooler 5-11
Engine (Chrysler Gas) 5-2
Engine (GM Diesel) 5-1
Fuel Tank 5-4, 5-5
Radiator 5-6
Surge Tank 5-7
Transmission Cooler 5-10

MidWestTech | Gradall 552, 554 Telehandler Parts Manual | Publicatio... Order the manual at mid-west-tech.com >

DRIVE TRAIN

Axle Housing 6-25a, 6-33, 6-37, 6-45, 6-53, 6-60, 6-65
Case and Converter Housings. 6-19.2, 6-19.3
Case Group 6-19.4, 6-19.5
Clutch and Gear Group 6-19.10, 6-19.11, 6-19.12
Control Valve 6-6a, 6-7a, 6-19.14
Differential 6-38, 6-39, 6-46, 6-47, 6-54, 6-55,6-61
Differential Carrier 6-34, 6-35, 6-66
Drive Shaft 6-22a
First Stage Clutch 6-12a
Flex Plate and Torque Converter 6-19.6
Forward, Output & 3rd Clutch & Gear Group 6-19.9
Front Axle Assy 6-64
Front Cover and Input Shaft 6-2, 6-3a
Front Differential Carrier 6-26a, 6-27a
Hub Group 6-40, 6-41, 6-48, 6-49, 6-56, 6-57, 6-67
Information Sheet 6-1a
Low, Forward, 3rd, Reverse & 2nd Clutch 6-19.13
Main Case 6-4, 6-5
Modulator (Control) Valve 6-19.15
Output Group 6-16
Planetary Wheel End 6-32a
Planetary Wheel End Assembly 6-36
Pump and Filter 6-8
Pump Drive 6-9
Rear Differential Carrier 6-28a, 6-29a
Reverse & 2nd and Low Clutch & Gear Group 6-19.8
Second Stage Clutch 6-13
Shaft and Steering Knuckle Flange 6-42, 6-50
Shaft Spindle and Hubs 6-62, 6-63
Steering Mechanism 6-30a, 6-31a
Sump Tube 6-18, 6-19.1a
Third Stage Clutch 6-14a, 6-15
Tie Rod and Yoke Assembly 6-43, 6-51, 6-59
Torque Converter 6-10a
Torque Converter Attaching Drive Parts 6-19.7
Trunnion Shaft and Steering Flange 6-58
Wheels 6-20a, 6-21a
Yoke and Flange 6-17

CONTROLS

Auxiliary Hydraulics and Electric Control 7-6
Engine Controls 7-4
Hydraulic Controls 7-1, 7-1.1
Steering Column 7-5
Steering Selector 7-2
Transmission Controls 7-3

BRAKES

Brake Lines 8-1, 8-2, 8-3, 8-4
Brake Master Cylinder 8-12, 8-13

MidWestTech | Gradall 552, 554 Telehandler Parts Manual | Publication... Order the manual at mid-west-tech.com >

BRAKES - Continued

Brake Pedal 8-6, 8-7, 8-8
Brakes 8-24, 8-24.1, 8-25, 8-26, 8-27, 8-28
Hydrovac 8-10, 8-11
Hydrovac Air 8-5
Parking Brake 8-14, 8-14.1
Parking Brake Cable 8-9
Parking Brake Caliper 8-15, 8-16, 8-17
Service Brake Caliper 8-18, 8-18a, 8-19
Service Brake Lines 8-1
Wheel Brake Cylinder 8-21, 8-22, 8-23

HYDRAULIC CIRCUITS

Auxiliary Hydraulics 9-13
Auxiliary Hydraulics and Electric 9-14, 9-14.1, 9-15, 9-15.1
Boom (3SL) Tilt Hydraulics 9-5
Boom Lift Hydraulics 9-12, 9-12.1
Crowd Hydraulics 9-8, 9-9
Fork Tilt Hydraulics 9-6, 9-6.1
Front Sway Hydraulics 9-16
Hydraulic Reservoir and Pump Supply Hydraulics 9-2
Outrigger Hydraulics 9-27
Pump to Valves and Tank Return Hydraulics 9-3.1a, 9-3.2
QS-PPG Arm Cylinder Hydraulics 9-24, 9-25
QS-PPG Clamp Cylinder Hydraulics 9-26
Rear Axle Stabilizer Hydraulics 9-17, 9-17.1
Side Shift and QS-PPG Clamp Cylinder Hydraulics 9-23
Side Shift PPG Arm Cylinder Hydraulics 9-20a, 9-21
Side Shift PPG Clamp Cylinder Hydraulics 9-22
Steering Hydraulics 9-10, 9-10.1, 9-11
Swing Fork Hydraulics 9-18, 9-18a, 9-19a
Tank to Pump Hydraulics 9-2.2
Tilt (2S) QS Boom Hydraulics 9-6.2, 9-6.3
Tilt (3S) QS Boom Hydraulics 9-7
Tilt & Tilt Compensating Frame Hydraulics 9-7.2, 9-7.3
Tilt & Tilt Compensating Hydraulics 9-4
Winch Hydraulics 9-28, 9-29


HYDRAULIC COMPONENTS

Accumulator Charge Valve 10-28
Arm Lift Cylinder 10-16
Auxiliary Valve 10-20, 10-21
Brake Valve 10-29
Clamp Cylinder 10-17
Compensating Cylinder 10-6, 10-7
Crowd Cylinder 10-2, 10-3, 10-4
Hydraulic Filter Assembly 10-24
Hydraulic Pump 10-23, 10-23.1
Lift Cylinder 10-1
Main Control Valve 10-19
Outrigger Cylinder 10-13

MidWestTech | Gradall 552, 554 Telehandler Parts Manual | Publication 9020-5894

Order the manual at mid-west-tech.com >

CHASSIS & ATTACHING PARTS
Transmission Mounting
Units With Funk Transmission
Revised 2-87

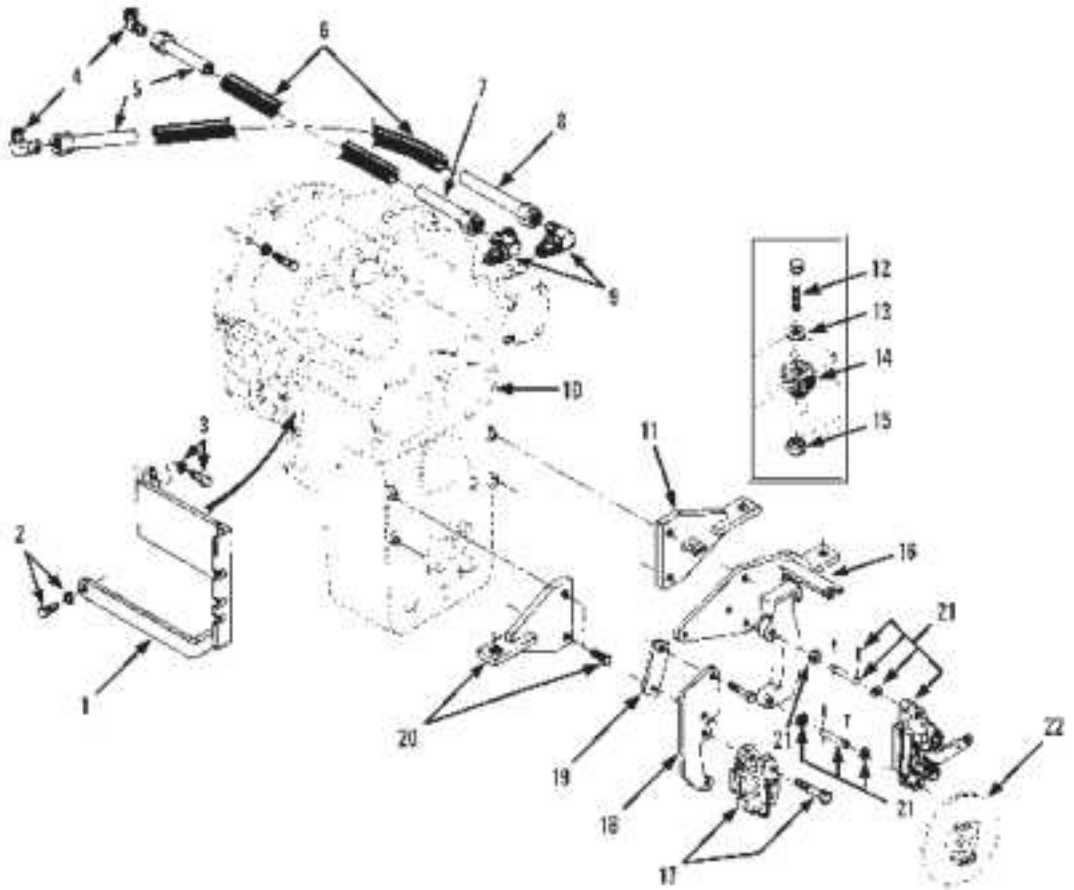

Item	Part No.	Qty.	Description Of Part
1	9040-0323	1	TRANSMISSION CONTROL BRACKET
2	8820-1018	1	HEX HD CAPSCREW, 5/16-18X3/4, GR5
	8855-1010	1	LOCKWASHER, 5/16
3	8820-1033	2	HEX HD CAPSCREW, 3/8-16X3/4, GR5
	8855-1011	2	LOCKWASHER, 3/8
4	8874-3046	2	MALE ELBOW - 90 DEGREES 3/4X3/4 TUBE
5	9060-0327	2	COOLING LINE
6	9002-6633	2	HOSE
7	9060-0326	1	COOLING LINE
8	9060-0325	1	COOLING LINE
9	8866-2067	2	ELBOW - 90 DEGREES (includes
	8859-1207		o-ring)
10		1	FUNK TRANSMISSION
11	9040-0488	1	LH MOUNTING BRACKET (552)
	9060-0807	1	LH MOUNTING BRACKET (554)
12	8820-1069	2	HEX HD CAPSCREW, 1/2-13X2, GR5

Item	Part No.	Qty.	Description Of Part
13	8856-1107	2	FLAT WASHER, 1/2
14	9060-0096	2	RUBBER MOUNT
15	8850-1008	2	HEX NUT, 1/2-13
16	9060-0807	1	TRANSMISSION MOUNTING BRACKET (LH-554 disc)
17	9060-1045	1	BRAKE CALIPER
	8820-1101	2	HEX HD CAPSCREW, 5/8-11X3, GR5
18	9060-1044	1	CALIPER MOUNTING BRACKET
	8820-1097	2	HEX HD CAPSCREW, 5/8-11X2, GR5
19	9020-1741	AR	SHIM
20	9040-0335	1	RH MOUNTING BRACKET
	9040-0997	1	RH MOUNTING BRACKET (gas)
	8820-1093	2	HEX HD CAPSCREW, 5/8-11X1, GR5
21	9040-0925	1	BRAKE CALIPER
	9002-1622	2	PIN
	8856-1113	4	FLAT WASHER, 1/2
	8863-1320	4	COTTER PIN, 1/8X1-1/2
22	9040-0923	1	DISC

MidWestTech | Gradall 552, 554 Telehandler Parts Manual | Publication 9020-5894 Order the manual at mid-west-tech.com >