GRADALL®

Illustrated Parts Manual

Models
534B-6
534B-8


S/N 8344001L thru 0144870S

P/N - 9020-7316

Revised July 6, 2007



JLG®

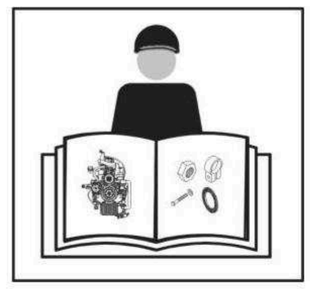

Order the manual at mid-west-tech.com >

SECTION 1 – INTRODUCTION

Table of Contents ..... 1-1 thru 1-4
Alphabetical Index ..... 1-5 thru 1-8
Service Kits ..... 1-9 thru 1-11
Part Number Index ..... 1-12 thru 1-28

SECTION 2 – CHASSIS & ATTACHING PARTS

Frame Shrouding & Trim 2-1
Cab Enclosure, Wiper and Defroster 2-2
Cab Heater and Piping 2-3
Front Axle Cradle and Mounting 2-4
Rear Steering Axle and Attaching Parts 2-5

SECTION 3 – BOOMS

First and Second Boom Sections 3-1
Third Boom Section, Push Beam & Cable 3-2, 3-3
Quick Switch Assembly 3-4

SECTION 4 – ATTACHMENTS & ACCESSORIES

48" & 66" Carriage and Sand Bucket 4-1
Truss Boom 4-2
Winch - Truss Boom 4-3
Outriggers 4-4
Winch Assembly 4-5
6 Foot Vertical Mast 4-6
Glow Plug Installation 4-7
Pintle Hook Installation 4-8

SECTION 5 – ENGINE & ATTACHING PARTS

Waukesha Diesel Engine Mounting 5-1
Perkins Diesel Engine Mounting 5-1
Fuel Tank & Lines 5-2
Radiator & Hoses 5-3
Ether Starting Kit 5-4
Air Cleaner Piping (Waukesha) 5-5
Air Cleaner Piping (Perkins) 5-5
Air Cleaner 5-6

SECTION 6 – DRIVE TRAIN

Transmission Mounting & Controls 6-1
Flex Plate and Torque Converter 6-2
Case and Converter Housing 6-3
Converter Housing Attaching Parts 6-4
Clutch and Gear Group (Rev., 2nd and low) 6-5

MidWestTech | Gradall S34B-6, 534B-8 Telehandler Parts Manual | Publica... Order the manual at mid-west-tech.com >

SECTION 6 - DRIVE TRAIN (continued)

Clutch and Gear Group (Forward, output and third) 6-6
Clutch Assemblies 6-7
Modulator Valve 6-8
Control Valve 6-9
Drive Shaft 6-10
Housing Assembly 6-11
Front Axle Assembly 6-11
Differential Carrier 6-12
Axle Shaft and Planetary Wheel End 6-13
Wheels and Tires 6-14
Planetary Hub 6-15

SECTION 7 – CONTROLS

Transmission, Tilt, Auxiliary & Sway with Mounting Parts (Dash) 7-1
Boom Tilt, Auxiliary & Sway 7-2
Accelerator Linkage (Waukesha) 7-3
Accelerator Linkage (Perkins) 7-3
Steering Column 7-4

SECTION 8 – BRAKES

Booster Hydraulics and Brake Lines (Waukesha) 8-1
Booster Hydraulics and Brake Lines (Perkins) 8-1
Brake and Inching Linkage (Waukesha) 8-2
Brake and Inching Linkage (Perkins) 8-3
Parking Brake and Control 8-4
Brake Cylinder and Booster 8-5
Service Brake (Soma Axle) 8-6
Parking Brake Caliper 8-7
Parking Brake Control (Mico Lock) 8-8

SECTION 9 – HYDRAULIC CIRCUITS

Tank to Pump, Drive Motor Drains and Return to Tank 9-1
Drive and Steering Control (Waukesha) 9-2
Drive and Steering Control (Perkins) 9-2
Rear Drive Hydraulics 9-3
Steering Hydraulics 9-4
Boom Lift (Waukesha) 9-5
Boom Lift (Perkins) 9-5
Crowd 9-6
Tilt and Tilt Compensating 9-7
Unit Sway 9-8
Auxiliary and Electrical 9-9

MidWestTech | Gradall S34B-6, 534B-8 Telehandler Parts Manual | Publicatio... Order the manual at mid-west-tech.com >

SECTION 9 - HYDRAULIC CIRCUITS (continued)

Oil Cooler and Pilot Pump 9-10
Oil Cooler and Pilot Pump (Perkins) 9-10
Truss Boom 9-11
Outrigger Hydraulics 9-12
Hydraulics & Parking Brake Lines (model 5 axle) 9-13
Accumulator Charging Valve & Lines (model 5 axle) 9-14

SECTION 10 – HYDRAULIC COMPONENTS

Lift Cylinder 10-1
Crowd Cylinder 10-2
Tilt & Tilt Compensating Cylinders 10-3,10-4
Sway Cylinder 10-5
Steering Cylinder 10-6
Main Hydraulic Control Valve 10-7
Priority Flow Control Valve 10-8
Forward-Reverse Control Valve 10-9
Series Parallel Valve 10-10
Solenoid Valve 10-11
Rear Drive Main Relief Valve 10-12
Crossover Relief Valve 10-13
Main Hydraulic Pump 10-14
Pilot Pump (Waukesha) 10-15
Pilot Pump (Perkins) 10-15
Rear Drive Motor 10-16
Winch Motor 10-17
Filter-Oil Reservoir 10-18
Directional Control Valve 10-19
Accumulator Charge Valve 10-20
Brake Valve 10-21
Parking Brake Valve 10-22
Outrigger Valve Assembly 10-23
Dual P.O. Check Valve 10-24
Dual P.O. Check Valve 10-25
Counterbalance Control Valve 10-26

SECTION 11 – ELECTRICAL

Dash Wiring 11-1
Wiring-Frame and Waukesha Engine 11-2
Wiring-Frame and Perkins Engine 11-3
Wiring-Lights 11-4

MidWestTech | Gradall S34B-6, 534B-8 Telehandler Parts Manual | Publicatio... Order the manual at mid-west-tech.com >