Farmall® 110A
Farmall® 120A
Farmall® 125A
Farmall® 140A
Tier 3
Tractor

OPERATOR'S MANUAL

Part number 90324194
1st edition English
December 2019

CASE IH AGRICULTURE

MidWestTech | Case Farmall 110A, 120A, 125A, 140A Tier 3 Tractor Operator's Manual | Publication 90324194
Order the manual at mid-west-tech.com >

Contents

1 GENERAL INFORMATION

Note to the owner 1-1
Intended use 1-2
Electro-Magnetic Compatibility (EMC) 1-3
Product identification 1-4
Operator's manual storage on the machine 1-7
Machine orientation 1-8
Machine orientation 1-9
Machine components 1-10

2 SAFETY INFORMATION

Safety rules and signal word definitions 2-1
Safety rules 2-2
Ecology and the environment 2-12
Safety features 2-13
Safety signs 2-16
Instructional signs 2-40

3 CONTROLS AND INSTRUMENTS

Access to operator's platform

Proper entry and exit 3-1

Operator's seat

Mechanical operator's seat 3-3
Pneumatic operator's seat 3-4
Seat belt operation 3-6

Instructional seat

Overview 3-7

Forward controls

Front console 3-8
Foot pedals 3-10

Left-hand side controls

Power Take-Off (PTO) (without cab) 3-11
Parking brake 3-12
Door and window operation 3-13
Storage 3-14

Right-hand side controls

Transmission controls 3-15

MidWestTech | Case Farmall 110A, 120A, 125A, 140A Tier 3 Tractor Operator's Manual... Order the manual at mid-west-tech.com >

Hi / Lo Transmission 3-16
Power Take-Off (PTO) (with cab) 3-17
Hydraulic controls 3-18
Right-hand post 3-20
Heating, Ventilation, and Air Conditioning (HVAC) controls 3-21
Door and window operation 3-23
Mobile telephone usage 3-24

Rearward controls

Rear window operation 3-25
Rear window wiper 3-25

Overhead controls

Radio 3-26
Radio operation 3-27
Dome light 3-31
Roof hatch 3-31

Display

Analog/Digital Instrument Cluster (ADIC) 3-32
Warning and status indicators 3-33
Display overview 3-36
Alarms 3-37
Setup menu 3-41
Wheel calibration 3-42
Maintenance intervals 3-44
Audible alarm buzzer 3-45
Speed units 3-46
Active error codes and warnings 3-47
Backlighting and dimming 3-48
Display 3-49

4 OPERATING INSTRUCTIONS

Commissioning the unit

Run-in period of a new machine 4-1
Roll Over Protective Structure (ROPS) 4-2

Starting the unit

Starting the engine 4-4
Engine starting aids 4-6

Stopping the unit

Stopping the tractor 4-8
Hydraulic trailer brakes 4-10

MidWestTech | Case Farmall 110A, 120A, 125A, 140A Tier 3 Tractor Operator's Manual... Order the manual at mid-west-tech.com >

Moving the unit

General transmission operation 4-11
Steering control 4-13

5 TRANSPORT OPERATIONS

Road transport

Basic instructions 5-1
High visibility position markers 5-2

Recovery transport

Towing the tractor 5-7

6 WORKING OPERATIONS

Tires and wheels

Tires and wheels 6-1
Tire load and inflation charts 6-1
Tractor ballasting 6-8
Liquid ballast 6-10
Front wheel tread settings 6-12
Rear wheel tread settings 6-16
Bar axle adjustment 6-18
Dual rear wheels 6-23

Driveline

Creeper gears 6-25
Four-Wheel Drive (4WD) 6-28
Differential lock 6-29
Front axle oscillation 6-30

Hydraulic system


Hydraulic Power Lift (HPL) 6-32
Hydraulic remote control valves 6-35
Connecting remote cylinders 6-37
Bleeding remote cylinders 6-39
Operating single-acting hydraulic cylinders 6-40
Operating double-acting hydraulic cylinders 6-41
Operating continuous flow hydraulic equipment 6-42

Implements

Adjusting the drawbar 6-44
Hitch operation 6-47
Power Take-Off (PTO) operation 6-52

MidWestTech | Case Farmall 110A, 120A, 125A, 140A Tier 3 Tractor Operator's Manual... Order the manual at mid-west-tech.com >

Front console controls (with cab)

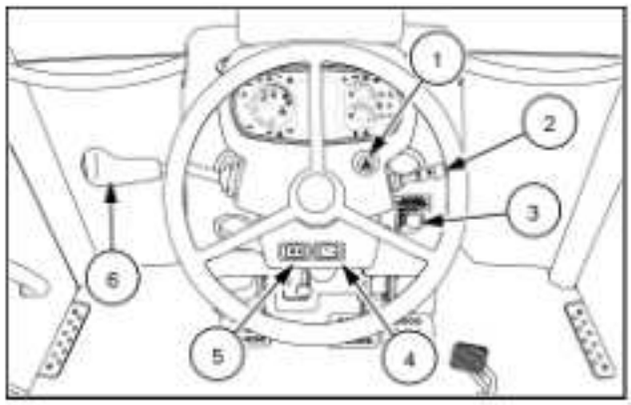

(1) – Hazard light switch



Press the hazard signal to activate. The switch flashes simultaneously along with the front and rear directional indicators.

(2) – Multi function lever



Press the end of the multifunction lever to activate the horn.




Turn the lever to the side light icon. The side lights turn on.



Turn the lever to the low beam headlight icon. The low beam headlights turn on.



Pull and release the lever to flash the high beam headlights. Push the lever forward to engage the high beam headlights.



Lift the lever upward to indicate a right turn. Push the lever down to indicate a left turn.

(3) – Ignition switch and key
Activate the grid heater and accessories, illuminate the instrument panel, and turn the engine on or off.

(4) – Switch, Up/Down – ADIC

(5) – Switch, Home – ADIC

(6) – Shuttle lever




Direction selection – forward or reverse

Ignition key switch (with and without cab)


The ignition key has three positions:

- Position **(1)** – There is no power to the electrical system. The fuel sender under is off.
- Position **(2)** – The accessories activate, including the grid heater. The warning lights and the instrument panel illuminate.
- Position **(3)** – The starter motor cranks and the engine starts.

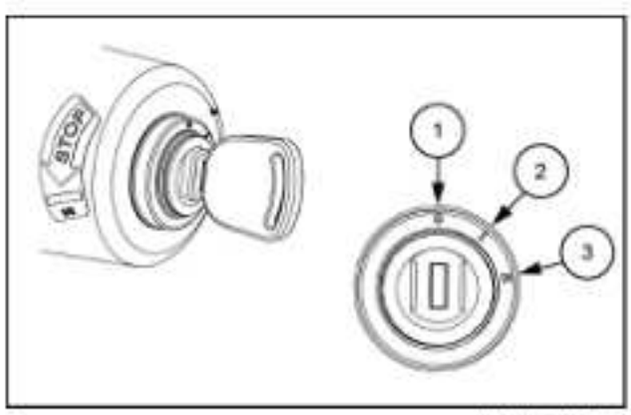

MidWestTech | Case Farmall 110A, 120A, 125A, 140A Tier 3 Tractor Operator's Manual... Order the manual at mid-west-tech.com >


5. Move the latches **(1)** to free the air filter **(2)**.
6. Remove the air filter.

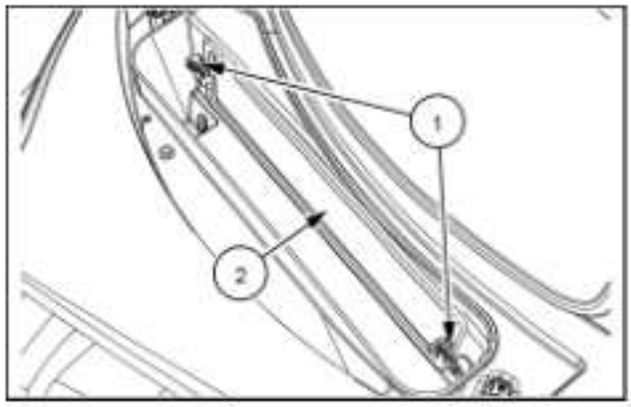

4

7. Clean the air filters.
   A. Place each air filter upside down and tap them lightly on a flat service.
   B. Pass a jet of compressed air in the direction shown. Do not exceed a pressure of **689 kPa** (**100 psi**).

   NOTICE: *Never use diesel, gasoline, solvents, or water to clean an air filter. These substances will damage the filter cartridge.*
8. Install each air filter back into place, and then secure them with the latches.
9. Install the left-hand air filter cover and the right-hand air filter cover.

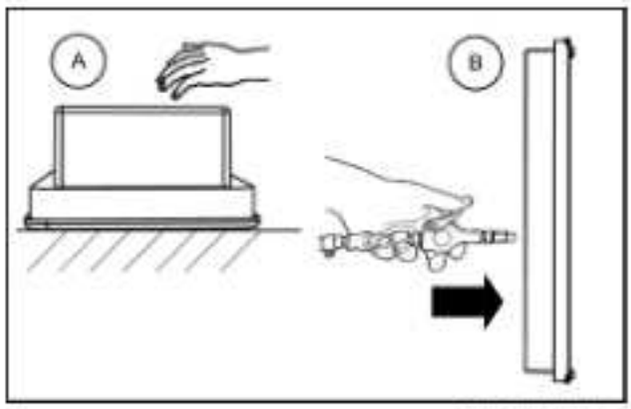

5

MidWestTech | Case Farmall 110A, 120A, 125A, 140A Tier 3 Tractor Operator's Manual... Order the manual at mid-west-tech.com >

Shipping weights index – Farmall 125A and Farmall 140A

Machines that have a flange rear axle

Model	Platform / Traction		Front axle	Front tires	Rear tires	Unladen front weight	Unladen rear weight	Unladen total weight
Farmall 125A Farmall 140A	ROPS	2WD	Heavy duty	10.00–16	18.4–38	1630 kg (3594 lb)	2260 kg (4982 lb)	3890 kg (8576 lb)
	Cab	2WD	Heavy duty	10.00–16	18.4–38	1650 kg (3638 lb)	2580 kg (5688 lb)	4230 kg (9326 lb)
	ROPS	4WD	Heavy duty	14.9–28	18.4–38	1890 kg (4167 lb)	2590 kg (5710 lb)	4480 kg (9877 lb)
	Cab	4WD	Heavy duty	14.9–28	18.4–38	1960 kg (4321 lb)	2860 kg (6305 lb)	4820 kg (10626 lb)

Machines that have a bar rear axle

Model	Platform / Traction		Front axle	Front tires	Rear tires	Unladen front weight	Unladen rear weight	Unladen total weight
Farmall 125A Farmall 140A	ROPS	2WD	Heavy duty	10.00–16	18.4–38	1630 kg (3594 lb)	2300 kg (5093 lb)	3940 kg (8686 lb)
	Cab	2WD	Heavy duty	10.00–16	18.4–38	1650 kg (3638 lb)	2620 kg (5776 lb)	4270 kg (9414 lb)
	ROPS	4WD	Heavy duty	14.9–28	18.4–38	1890 kg (4167 lb)	2630 kg (5798 lb)	4520 kg (9965 lb)
	Cab	4WD	Heavy duty	14.9–28	18.4–38	1930 kg (4255 lb)	2900 kg (6393 lb)	4830 kg (10648 lb)

MidWestTech | Case Farmall 110A, 120A, 125A, 140A Tier 3 Tractor Operator's Manual... Order the manual at mid-west-tech.com >

(9)

Brake fluid instruction
(Make sure that the level of the fluid is always above the minimum level (MIN) as indicated on the reservoir.)
Read operator's manual.


Quantity: 1

Part number:
82010204



82010204 22

Location:
On the right-hand side of the brake fluid reservoir **(1)**.

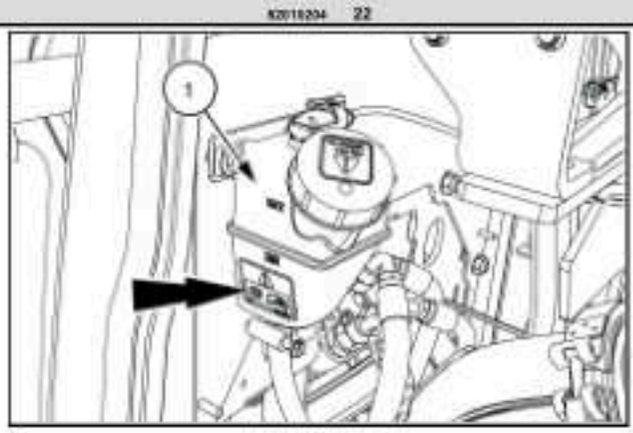

NHBL147R0023AA 23

(10)

ULTRA LOW SULFUR FUEL ONLY


Quantity: 1

Part number:
English: 87493418



87493418_A 24

Location:
On the fuel tank, below the filler cap **(1)**.

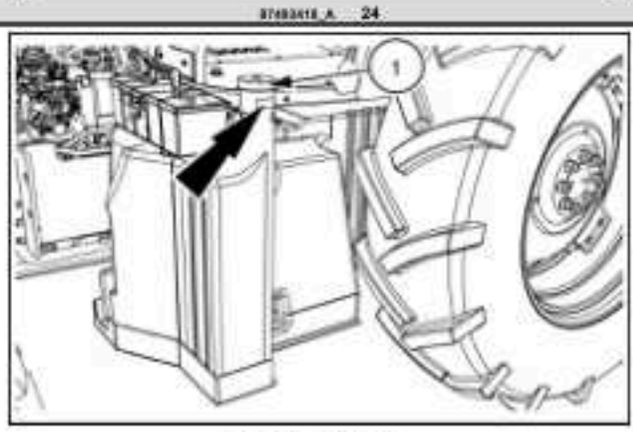

NHSI19TR0045AA 25

MidWestTech | Case Farmall 110A, 120A, 125A, 140A Tier 3 Tractor Operator's Manual... Order the manual at mid-west-tech.com >

(3)


CAUTION
Use the expansion tank to refill antifreeze.
(Failure to comply could result in death or serious injury.)

Quantity: 1
English: 47695809
Spanish: 47695811



47695809 10

Location:
On the right-hand side of the radiator **(1)**.

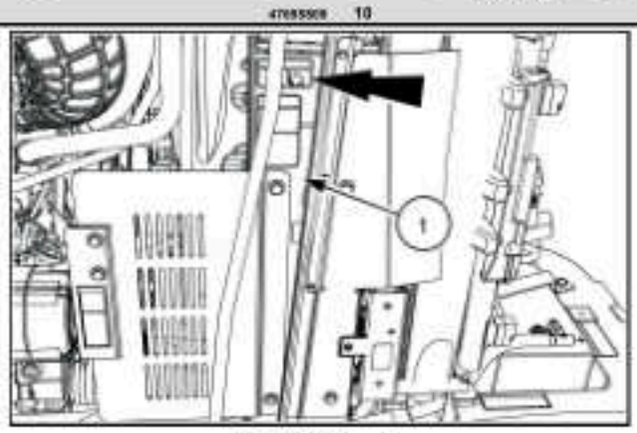

N-BL147R0090AA 11

MidWestTech | Case Farmall 110A, 120A, 125A, 140A Tier 3 Tractor Operator's Manual... Order the manual at mid-west-tech.com >