Farmall® 55C
Farmall® 65C
Farmall® 75C

Efficient Power - Tractor

*PIN ELRFC0***LA200001 and above*

OPERATOR'S MANUAL

Part number 90437423
3rd edition English
January 2021
Replaces part number 90377799

CASE IH AGRICULTURE

MidWestTech | Case Farmall 55C, 65C, 75C Efficient Power EP Tractor Operator's Manual | Publication 90437423
Order the manual at mid-west-tech.com >

Contents

1 GENERAL INFORMATION

General information 1-1
Manual scope 1-3
Intended use 1-4
Electro-magnetic compatibility (EMC) 1-6
International symbols 1-7
Identification plates 1-9
Approval data plate 1-19
Machine orientation 1-20
Ecology and the Environment 1-21
Exhaust Gas Recirculation (EGR) system 1-22

2 SAFETY INFORMATION

Safety rules and signal word definitions 2-1
Safety rules 2-2
Ecology and environment 2-10
Noise levels 2-11
Vibration levels 2-12
Towing the tractor for recovery 2-13
Tractor jacking points 2-14
Burn prevention 2-15
Burn prevention 2-16
Wheel chock 2-17
Safety signs 2-18

3 CONTROLS AND INSTRUMENTS

ACCESS TO OPERATOR'S PLATFORM

Access to operator's platform 3-1
Mounting and dismounting 3-2
Getting to know the internal parts of the cab 3-3
Rear-view outside mirrors - Localization overview 3-6

OPERATOR'S SEAT

Operator seat 3-7
Air seat 3-8

INSTRUCTOR'S SEAT

Instructor's seat 3-10

FORWARD CONTROLS

Instrument panel 3-10
Front controls 3-16

MidWestTech | Case Farmall 55C, 65C, 75C Efficient Power EP Tractor Operator's Man... Order the manual at mid-west-tech.com >

LEFT-HAND SIDE CONTROLS

Left side console 3-20
Left side post controls 3-21
Hand brake lever - Operating 3-23

RIGHT-HAND SIDE CONTROLS

Version with cab 3-24
Heating, ventilation or air-conditioning control 3-27
Cabless version 3-29
Park lock 3-31

Power sockets

Electrical systems - Localization overview 3-32

Settings and display

Instrument cluster Analog-Digital Instrument Cluster (ADIC) - Program 3-33
Instrument cluster - Program 3-35
Ground speed calibration 3-37
Programming maintenance work 3-40
Activating/deactivating buzzer 3-42
Setting units of measurement 3-43
Resetting the oil change counter 3-44
Viewing error codes 3-45
Regenerating the diesel particulate filter (DPF) automatically/manually 3-46

4 OPERATING INSTRUCTIONS

COMMISSIONING THE UNIT

Basic operating safety rules 4-1
Filling the fuel tank 4-2

STARTING THE UNIT

Starting the engine 4-3

STOPPING THE UNIT

Stopping the engine 4-4
Battery isolator control switch 4-6

MOVING THE UNIT

Machine movement start-up 4-7
Low idle speed management 4-8

5 TRANSPORT OPERATIONS

ROAD TRANSPORT

Tractor transporting 5-1

MidWestTech | Case Farmall 55C, 65C, 75C Efficient Power EP Tractor Operator's Man... Order the manual at mid-west-tech.com >

RECOVERY TRANSPORT
Towing the tractor 5-1

6 WORKING OPERATIONS

GENERAL INFORMATION
Roll Over Protective Structure (ROPS) 6-1

Transmission
Transmission operation 6-2

Four-Wheel Drive (4WD)
Four-wheel drive with electro-hydraulic control 6-4

DIFFERENTIAL LOCK
Mechanical differential lock 6-6

REAR POWER TAKE-OFF (PTO)
Safety rules 6-6
Attaching Power-Take Off (PTO) driven equipment 6-7
Power take-off speeds 6-9
Indipendent Power Take-Off 6-10
Synchronised power take-off 6-12
Stationary power take off operation switch 6-14

REAR REMOTE CONTROL VALVE(S)
Remote control valves - Safety rules 6-15
Operation 6-15

REAR HYDRAULIC LIFT
General 6-17
Rear hydraulic lift 6-18
Proportional control lever 6-21

Three-point hitch
Rear three-point hitch - Operating 6-23
Rear three-point hitch - Operating — Configuring the tractor when towing a trailer with single or multiple axles 6-26
Additional equipment attachment points 6-27

TOWBAR
Safety rules 6-28
Towbar 6-29

MidWestTech | Case Farmall 55C, 65C, 75C Efficient Power EP Tractor Operator's Man... Order the manual at mid-west-tech.com >

Creeper control lever


- Figure **3**. Control lever for models without a cab (ROPS).
- Figure **4**. Control lever for models with a cab.

The creeper unit control lever **(1)** allows you to select additional underdrive gears in both forward and reverse direction.
The operation must be carried out with the engine running, the tractor stationary and clutch pedal depressed.


To move the lever **(1)** you need to pull the safety ring upwards **(2)**.

- Move the lever **(1)** forward into position **(A)** to disengage the creeper (normal gears).
- Move the lever **(1)** backward into position **(B)** to engage the creeper (underdrive).

NOTE: *The creeper unit lever **(1)** in position **(B)** corresponding to underdrive, inhibits the operation of the higher range.*

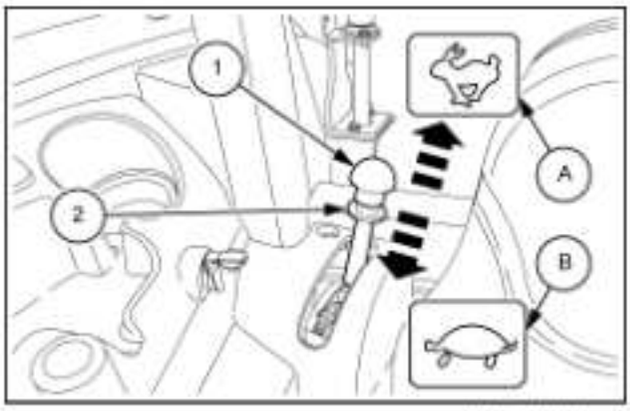

M04.13TR02323AB 3

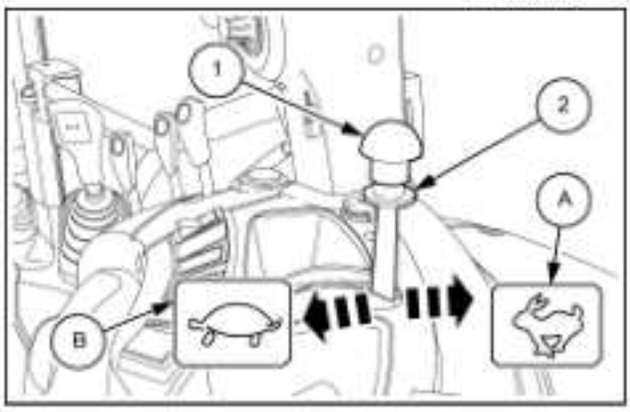

M04.13TR02323AB 4

By using the gearbox control, the range gear, and the reverser, you can select 12 forward gears and 12 reverse gears.

By using the gearbox control, the range gear, the reverser, and the creeper, you can select in the slow range **(I)** and medium range **(II)** a further 8 forward gears and 8 reverse gears. bringing the gearbox to 20 forward gears and 20 reverse gears.

Four-Wheel Drive (4WD)

Four-wheel drive with electro-hydraulic control

⚠ WARNING

Overturning hazard!
Four-wheel drive (4WD) greatly increases traction. Extra caution is needed on slopes. Compared to two-wheel drive, a 4WD machine maintains traction on steeper slopes, increasing the possibility of overturning.
Failure to comply could result in death or serious injury.


W0403A

Front-wheel drive increases the tractor's grip on the ground; the advantages are evident when working on uneven, muddy or slippery ground, when ploughing or working in difficult conditions.

MidWestTech | Case Farmall 55C, 65C, 75C Efficient Power EP Tractor Operator's Man... Order the manual at mid-west-tech.com >

Rear hitch - Grease - Mechanical lift


Use a pump to inject **MULTI-PURPOSE GREASE EXTREME PRESSURE AND ANTI-WEAR NLGI 2** grease into the lubricating nipple indicated.

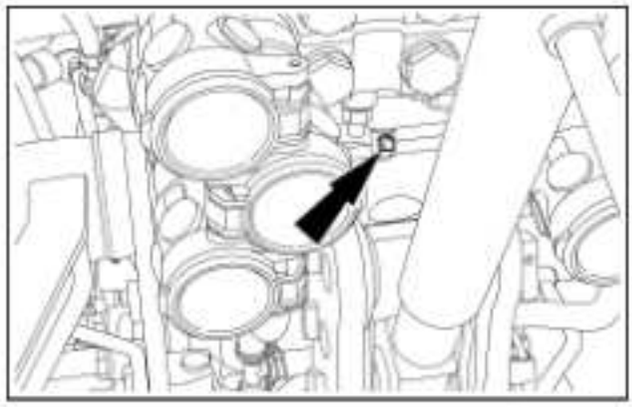

MDL13TR02328AB 1

Axle articulation - Grease – (4WD)


Using a grease gun, pump **MULTI-PURPOSE GREASE EXTREME PRESSURE AND ANTI-WEAR NLGI 2** grease into the two lubrication fittings shown.

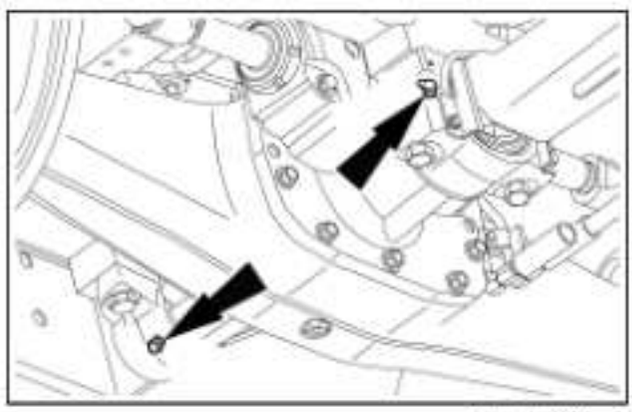

DCUTLNE191457A 1

Steering knuckle - Grease – (2WD)

Using a grease gun, pump **MULTI-PURPOSE GREASE EXTREME PRESSURE AND ANTI-WEAR NLGI 2** grease into the grease fittings **(1)** shown (one for each side).

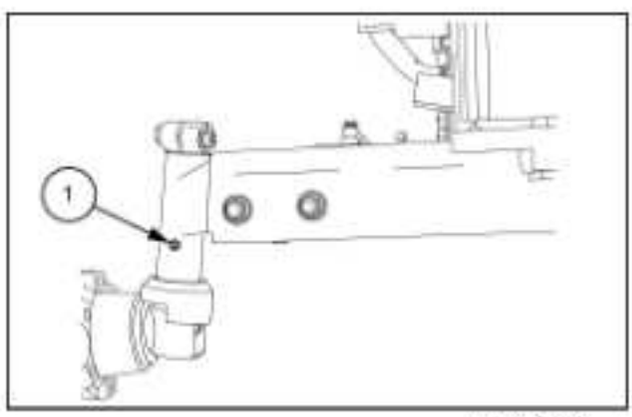

MDL13TR02369AB 1

MidWestTech | Case Farmall 55C, 65C, 75C Efficient Power EP Tractor Operator's Man... Order the manual at mid-west-tech.com >

Maximum permitted loads on front and rear axle

⚠ WARNING

Overturning hazard!
The operator must know the correct OPERATING LOAD capacity of the machine before attempting to operate the machine. Always follow the recommended load limits.
Failure to comply could result in death or serious injury.

W8216A

NOTICE: *The total weight of the tractor, including the ballast and the weight of the implements carried, must not exceed the limits given in the table below. The values refer to the axle capacity.*

Maximum permissible weight for road transport

	Maximum front axle load	Maximum Rear Axle Loading	Total maximum load
2WD	2000 kg (4409 lb)	3300 kg (7275 lb)	4500 kg (9921 lb)
4WD	2500 kg (5512 lb)	3300 kg (7275 lb)	4800 kg (10582 lb)

NOTICE: *for the tires listed in the table below, it is necessary to refer to the maximum load of the pair of tires and NOT to the maximum axle load.*

Front tires ■ 2WD

Tires	Maximum load per pair of tires
6.50 - 16	1230 kg (2712 lb)
7.50 - 16	1750 kg (3858 lb)

Front tires ■ 4WD

Tires	Maximum load per pair of tires
11.2 R 20	2180 kg (4806 lb)
300/70 R20	2120 kg (4674 lb)
320/70 R 20	2300 kg (5071 lb)
11.2 R 24	2360 kg (5203 lb)
12.4 R 20	2500 kg (5511.6 lb)
360/70 R 20	3700 kg (8157 lb)

Rear tires

Tires	Maximum load per pair of tires	Tires	Maximum load per pair of tires
12.4 R 32	3000 kg (6614 lb)	340/85 R 28	3500 kg (7716 lb)
320/85 R 32	3000 kg (6614 lb)	380/85 R 28	4120 kg (9083 lb)
13.6 R 28	3100 kg (6834 lb)	380/85 R 30	4360 kg (9612 lb)
12.4 R 36	3200 kg (7055 lb)	420/85 R 30	5000 kg (11023 lb)
14.9 R 28	3600 kg (7937 lb)	420/70 R 30	4240 kg (9348 lb)
14.9 R 30	3700 kg (8157 lb)	420/70 R 28	4860 kg (10714 lb)
16.9 R 30	4600 kg (10141 lb)	480/70 R 30	5150 kg (11354 lb)
380/70 R 28	3500 kg (7716 lb)	16.9 R 28	4480 kg (9877 lb)
420/85 R 28	4860 kg (10714 lb)		

NOTICE: *Braking regulations in some countries may impose lower weight limits for road transport than the figures quoted in the above tables.*

MidWestTech | Case Farmall 55C, 65C, 75C Efficient Power EP Tractor Operator's Man... Order the manual at mid-west-tech.com >