ORIGINAL INSTRUCTIONS

OPERATOR'S MANUAL

Workmaster™ 25
Tier 4B (final)
Compact Tractor

Part number 90441870
2nd edition English
December 2020
Replaces part number 51414247

CE

NEW HOLLAND AGRICULTURE

MidWestTech | New Holland Workmaster 25 Tier 4B Compact Tractor Operator's Manual | Publication 90441870

Order the manual at mid-west-tech.com >

Contents

1 GENERAL INFORMATION

Note to the Owner 1-1
Intended use 1-2
Electro-Magnetic Compatibility (EMC) 1-4
Product Identification Number (PIN) 1-5
Operator's manual storage 1-6
Machine orientation 1-7
Emissions overview 1-8

2 SAFETY INFORMATION

Safety rules and signal word definitions 2-1
Safety rules 2-2
Do not operate tag 2-7
Ecology and the environment 2-8
Safety signs 2-9
Instructional signs 2-20

3 CONTROLS AND INSTRUMENTS

Operator's seat

Seat belt 3-1
Seat controls 3-2
Roll-Over Protective Structure (ROPS) 3-3

Forward controls

Instrument cluster panel 3-5
Cruise control 3-7
Transmission shuttle shift lever 3-8
Clutch pedal 3-9
Brake pedals 3-10
Foot throttle pedal 3-11
Hand throttle lever 3-12
Horn switch (optional) 3-13
Power Take-Off (PTO) switch 3-14
Key switch 3-15
Differential lock pedal 3-16
Hydrostatic Transmission (HST) foot pedals 3-17
Multifunctional light switch 3-18

Left-hand side controls

Transmission range lever 3-19
Park brake lever 3-20
Four-Wheel Drive (4WD) lever 3-21
Mid Power Take-Off (PTO) lever 3-22

MidWestTech | New Holland Workmaster 25 Tier 4B Compact Tractor Operator's Manu... Order the manual at mid-west-tech.com >

Right-hand side controls

Hydraulic Power Lift (HPL) lever 3-23
Rear remote control valve(s) - optional 3-24
Transmission speed shift lever 3-26

Exterior controls

Hood release lever 3-27

4 OPERATING INSTRUCTIONS

Commissioning the unit

Engine break-in procedure 4-1
Power Take-Off (PTO) - Operation 4-2
Rear three-point hitch 4-4
Attaching three-point hitch equipment 4-5
Drawbar - Operation 4-8
Top link adjustment 4-9
Hydraulic Power Lift (HPL) drop rate control valve 4-10

Starting the unit

Starting the engine 4-11
Cold starting aids 4-13
Starting the tractor with jumper cables 4-14

Stopping the unit

Stopping the engine 4-15
Service brakes 4-16
Emergency stopping 4-18

Moving the unit

Steering - Operation 4-19
Hydrostatic Transmission (HST) - Operation 4-20
Transmission operation at low ambient temperatures 4-22
12 x 12 transmission - Operation 4-23

Parking the unit

Park brake - Operation 4-25

5 TRANSPORT OPERATIONS

Road transport

External lighting - Identification 5-1
Hazard warning light - Operation 5-2
Turn signal - Operation 5-3
Road light/work light - Operation 5-4

MidWestTech | New Holland Workmaster 25 Tier 4B Compact Tractor Operator's Manu... Order the manual at mid-west-tech.com >

Rear work light (optional) 5-5
Driving the vehicle 5-6

Shipping transport
Carrying the tractor on a transporter 5-7

Recovery transport
Towing the tractor for recovery 5-7

6 WORKING OPERATIONS
General information
Ballasting the tractor 6-1
Tractor ballasting weights 6-3
Operator presence system 6-5

7 MAINTENANCE
General information
General information 7-1
Safety rules 7-3
Biodiesel fuels 7-4
Refueling the tractor 7-5
Consumables 7-6
Engine cooling system - Basic instructions 7-7

Maintenance planning
Maintenance chart 7-8

Every 8 hours or daily
Engine lubrication system - Check 7-9
Engine cooling system - Check 7-10
Transmission - Check 7-12
Radiator screen cleaning 7-13

After first 50 hours
Engine lubrication system - Change fluid 7-14
Fuel filters - Replace 7-15
Hydraulic oil suction filter - Replace 7-16
Hydrostatic Transmission (HST) oil filter - Replace 7-17
Roll Over Protective Structure (ROPS) frame - Check 7-18
Wheel hardware - Check 7-19

Every 50 hours
Machine fittings - Grease 7-20
Transmission - Check 7-22
Tire pressure - Check 7-23

MidWestTech | New Holland Workmaster 25 Tier 4B Compact Tractor Operator's Manu... Order the manual at mid-west-tech.com >


Four-Wheel Drive (4WD) lever

The four wheel drive (4WD) is controlled by a lever. The lever is located on the left-hand control pod.

NOTE: *Use four wheel drive when additional traction is required while operating on loose soil, in wet, slippery conditions, or on slopes. For normal operation on firm soil, level hard surfaces, or when operating the unit at high speeds, disengage the four wheel drive to maximize tire and drive-line life and to obtain better fuel economy.*

Mechanical transmission model


To engage the four wheel drive on mechanical transmission model tractors, stop the tractor completely, depress the clutch pedal and move the lever **(1)** completely forward. To disengage the four wheel drive, stop the tractor completely, depress the clutch pedal and pull the lever **(1)** rearward.

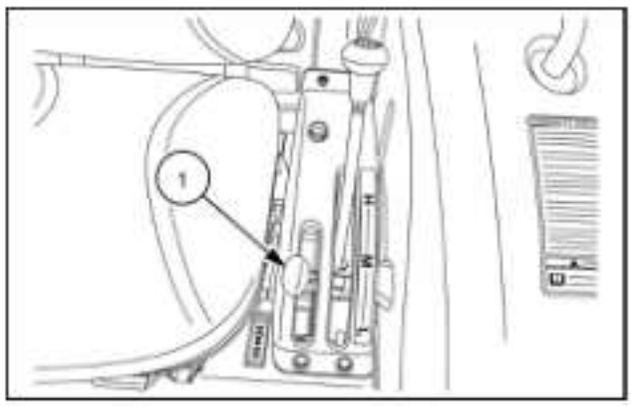

NHL12CT30885AA 1

Hydrostatic Transmission (HST) model

To engage the four wheel drive on HST model tractors, stop the tractor completely and move the lever **(1)** completely forward. To disengage the four wheel drive, stop the tractor completely and pull the lever **(1)** rearward.

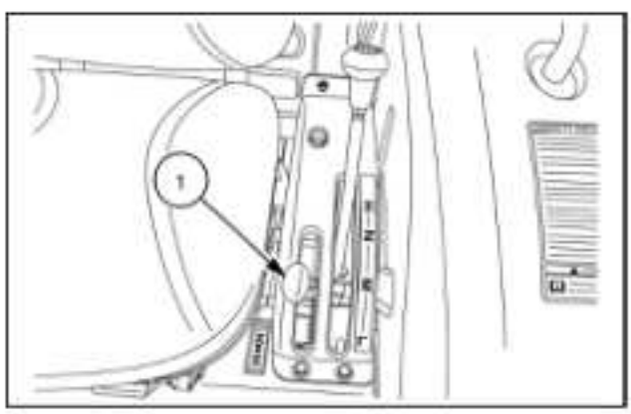

NHL12CT30886AA 2

MidWestTech | New Holland Workmaster 25 Tier 4B Compact Tractor Operator's Manu... Order the manual at mid-west-tech.com >

Tire load capacity

The table below is the load capacity of the tires. Do not over the load the tires. The axle rating of the tractor may be less than the capacity of the tires. Do not exceed the maximum permissible mass of the tractor.

Front tire inflation pressures and load capacity				
Tire Type	**Tire Size**	**Recommended air pressure**	**Maximum load capacity at Minimum inflation pressure**	**Maximum load capacity at maximum inflation pressure**
Agricultural (R1)	7-14, 4PR, R1	**41 – 248 kPa (6 – 36 psi)**	**160 kg (353 lb)**	**449 kg (990 lb)**
Turf (R3)	25 x 8.50-14, 4PR, R3	**34 – 152 kPa (5 – 22 psi)**	**251 kg (553 lb)**	**599 kg (1321 lb)**
Industrial (R4)	25 x 8.50-14, 6PR, R4	**207 – 345 kPa (30 – 50 psi)**	**716 kg (1579 lb)**	**966 kg (2130 lb)**

Rear tire inflation pressures and load capacity				
Tire Type	**Tire Size**	**Recommended air pressure**	**Maximum load capacity at minimum inflation pressure**	**Maximum load capacity at maximum inflation pressure**
Agricultural (R1)	11.2-24, 4PR, R1	**83 – 124 kPa (12 – 18 psi)**	**454 kg (1001 lb)**	**1152 kg (2540 lb)**
Turf (R3)	41 x 14.00-20, 4PR, R3	**69 – 172 kPa (10 – 25 psi)**	**825 kg (1819 lb)**	**1397 kg (3080 lb)**
Industrial (R4)	43 x16-20, 4PR, R4	**138 kPa (20 psi)**	**2059.0 kg (4539.3 lb)**	**2059.0 kg (4539.3 lb)**

MidWestTech | New Holland Workmaster 25 Tier 4B Compact Tractor Operator's Manu... Order the manual at mid-west-tech.com >

Maintenance planning

Maintenance chart

Maintenance action	Check	Cleaning	Change fluid	Replace	Tighten	Test	Bleed	Drain fluid	Adjust	Grease	Page no.
Every 8 hours or daily											
Engine lubrication system - Check	x										7-9
Engine cooling system - Check	x										7-10
Transmission - Check	x										7-12
Radiator screen cleaning		x									7-13
After first 50 hours											
Engine lubrication system - Change fluid			x								7-14
Fuel filters - Replace				x							7-15
Hydraulic oil suction filter - Replace				x							7-16
Hydrostatic Transmission (HST) oil filter - Replace				x							7-17
Roll Over Protective Structure (ROPS) frame - Check	x										7-18
Wheel hardware - Check					x						7-19
Every 50 hours											
Machine fittings - Grease									x		7-20
Transmission - Check	x										7-12
Tire pressure - Check	x										7-23
Clutch Pedal Free Play - Check								x			7-25
Hydrostatic transmission (HST) neutral adjustment - Check	x										7-26
Belt - Check	x										7-27
Mechanical service brakes - Check								x			7-28
Front axle differential fluid level - Check	x										7-29
Air cleaner - Outer element - Cleaning		x									7-30
Every 250 hours											
Engine lubrication system - Change fluid			x								7-14
Fuel filters - Replace				x							7-15
Hydraulic oil suction filter - Replace				x							7-16
Hydrostatic Transmission (HST) oil filter - Replace				x							7-17
Air cleaner - Outer element - Replace				x							7-35
Wheel hardware - Check					x						7-19
Roll Over Protective Structure (ROPS) frame - Check	x										7-18
Every 500 hours											
Front axle and differential fluid - Change			x								7-38
Transmission - Change fluid			x								7-40
Air cleaner - Inner element - Replace				x							7-41
Valves - Check	x										7-42
Every two years											
Engine cooling system - Drain fluid								x			7-43
As required											
Fuel injection system - Bleed							x				7-44
Roll Over Protective Structure (ROPS) frame - Replace - Possible damage				x							7-45
Battery - Test						x					7-46
Fuses - Check	x										7-47
Main fuse - Check				x							7-48
Headlight - Replace				x							7-49

MidWestTech | New Holland Workmaster 25 Tier 4B Compact Tractor Operator's Manu... Order the manual at mid-west-tech.com >


WARNING
(8)
Operate control only from tractor seat.
Read Operator's Manual.
Failure to comply could result in death or serious injury.

Quantity: 2
English Part Number: MT40229994



40229994 16

(8) Location: On the rear of the left-hand and right-hand fenders.

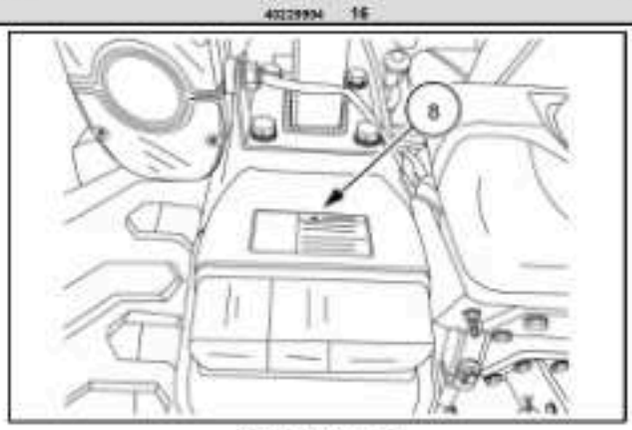

NHL12CT00843AA 17

(9)
Reflective red tape


•

Quantity: 2
English Part Number: MT40310801



86587781_RED 18

(9) Location: On both rear sides of the Roll Over Protective Structure (ROPS).

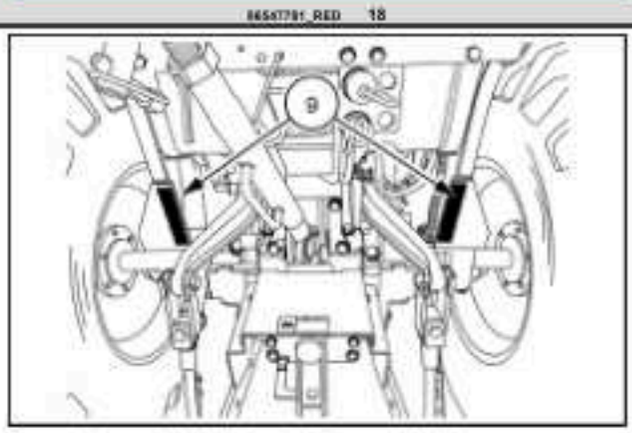

NHL15CT00331AA 19

MidWestTech | New Holland Workmaster 25 Tier 4B Compact Tractor Operator's Manu... Order the manual at mid-west-tech.com >