GRADALL®


Illustrated Parts Manual

Models
534B-9

Starting
S/N 0144860S

P/N - 9103-4312

Revised July 6, 2007

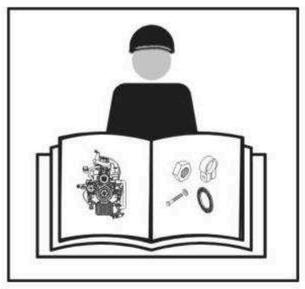

MidWestTech | Gradall 534B-9 Telehandler Parts Manual | Publication 9103-4312

Order the manual at mid-west-tech.com >

SECTION 1 - INTRODUCTION

Table of Contents ..... 1-1 thru 1-3
Alphabetical Index ..... 1-4 thru 1-8
Service Kits 1-9
Part Number Index ..... 1-10 thru 1-23

SECTION 2 - CHASSIS & ATTACHING PARTS

Frame Shrouding & Trim 2-1
Cab Enclosure, Wiper & Defroster 2-2
Heater & Piping 2-3
Front Axle Cradle & Mounting 2-4
Rear Steering Axle & Attaching Parts 2-5
Cab Glass 2-6

SECTION 3 - BOOMS

First & Second Boom Sections 3-1
Third Boom Section, Push Beam & Cable 3-2
Quick Switch Assembly 3-3

SECTION 4 - ATTACHMENTS & ACCESSORIES

Buckets & Carriages 4-1
Truss Boom 4-2
Truss Boom With Winch 4-3
Six Foot Vertical Mast 4-4
Slope Piler Carriage 4-5

SECTION 5 - ENGINE & ATTACHING PARTS

Perkins Diesel Engine Mounting 5-1
Engine Right Side View 5-2
Engine Left Side View 5-3
Radiator & Hoses 5-4
Air Cleaner Piping 5-5
Air Cleaner 5-6
Fuel Tank & Lines 5-7

SECTION 6 - DRIVE TRAIN

Transmission Mounting & Controls 6-1
Flex Plate & Torque Converter 6-2
Case & Converter Housing 6-3
Converter Housing Attaching Parts 6-4
Clutch & Gear Group (Reverse, 2nd & Low) 6-5
Clutch & Gear Group (Forward, Output & 3rd) 6-6
Clutch Assemblies 6-7
Modulator Valve 6-8
Control Valve 6-9
Propeller Shaft 6-10

* *Revised Introduction to reflect page number changes.*

MidWestTech | Gradall 534B-9 Telehandler Parts Manual | Publication 9103-4312
Order the manual at mid-west-tech.com >

SECTION 6 - DRIVE TRAIN (Continued)

Front Axle Assembly 6-11
Front Axle Housing 6-12
Front Axle Differential Carrier 6-13
Front Axle Shaft & Planetary Wheel End 6-14
Wheels & Tires 6-15
Planetary Hub 6-16
Front Axle Service Brakes 6-17
Front Axle Parking Brake 6-18

SECTION 7 - CONTROLS

Transmission Tilt & Sway with Mounting Parts 7-1
Boom Tilt & Sway 7-2
Accelerator Linkage 7-3
Steering Column 7-4

SECTION 8 - BRAKES

Hydraulics & Service Brake Lines 8-1
Hydraulics & Parking Brake Lines 8-2
Brake Pedal & Inching Linkage 8-3
Accumulator, Charging Valve & Lines 8-4

SECTION 9 - HYDRAULIC CIRCUITS

Oil Supply & Pressure Lines 9-1
Dump Circuit 9-2
Rear Drive 9-3
Steering 9-4
Lift Cylinder 9-5
Crowd Cylinder 9-6
Tilt & Tilt compensating Cylinder 9-7
Sway Cylinder 9-8

SECTION 10 - HYDRAULIC COMPONENTS

Lift Cylinder 10-1
Crowd Cylinder 10-2
Tilt Cylinder 10-3
Compensating Cylinder 10-4
Sway Cylinder 10-5
Steering Cylinder 10-6
Main Control Valve 10-7
Priority Flow Contrlol Valve 10-8
Forward Reverse Control Valve 10-9
Series Parallel Control Valve 10-10
Solenoid Valve 10-11
Dual P.O. Check Valve 10-12
Inching Valve 10-13

* *Revised Introduction to reflect page number changes.*

MidWestTech | Gradall 534B-9 Telehandler Parts Manual | Publication 9103-4312 Order the manual at mid-west-tech.com >

SECTION 10 - HYDRAULIC COMPONENTS (continued)

Main Hydraulic Pump 10-14
Pilot Pump 10-15
Rear Drive Motor 10-16
Accumulator Charge Valve 10-17
Oil Reservoir Filter 10-18
Directional Control Valve 10-19
Hydraulic Oil Reservoir 10-20
Brake Valve 10-21
Parking Brake Valve 10-22
Winch 10-23
Winch Motor 10-24
Crossover Valve 10-25
Joystick Assembly 10-26

SECTION 11 - ELECTRICAL

Dash Wiring 11-1
Batteries & Cables 11-2
Wiring - Frame & Engine 11-3

SECTION 12 - MISCELLANEOUS

Frame decals 12-1
Boom Decals 12-2


SECTION 13 - OPTIONAL EQUIPMENT

Joystick 13-1
Rear Wiper Installation 13-2
Rotating Beacon Assembly 13-3
Glow Plug Installation 13-4
Winch Drain Lines 13-5
Stabilizer Option 13-6
Auxiliary Controls Assembly 13-7
Pintle Hook 13-8
Winch Assembly 13-9
Winch 13-10
Outrigger Installation 13-11
Outrigger Valve Assembly 13-12
Outrigger Cylinder 13-13
Dual P.O. Check Valve (Outriggers) 13-14
Stabilizer Cylinder 13-15
Slope Piler Carriage 13-16
Sway Cylinder 13-17
Dual P.O. Check Valve 13-18
Auxiliary Hydraulics 13-19
Tilt on Joystick 13-20
Cab Enclosure 13-21
Steer Axle Advantage Kit 13-22
Steering Cylinder 13-23
* Rear Axle Rework Kit 13-24
* Hydraulic Controller 13-25
Work Light Package 13-26

MidWestTech | Gradall 534B-9 Telehandler Parts Manual | Publication 9103-4312

Order the manual at mid-west-tech.com >

ATTACHMENTS
(9130-5016) 66" Slope Piler Carriage
Starting Serial No. 0144860S
Original Issue 8-94
Revised 6-19-06

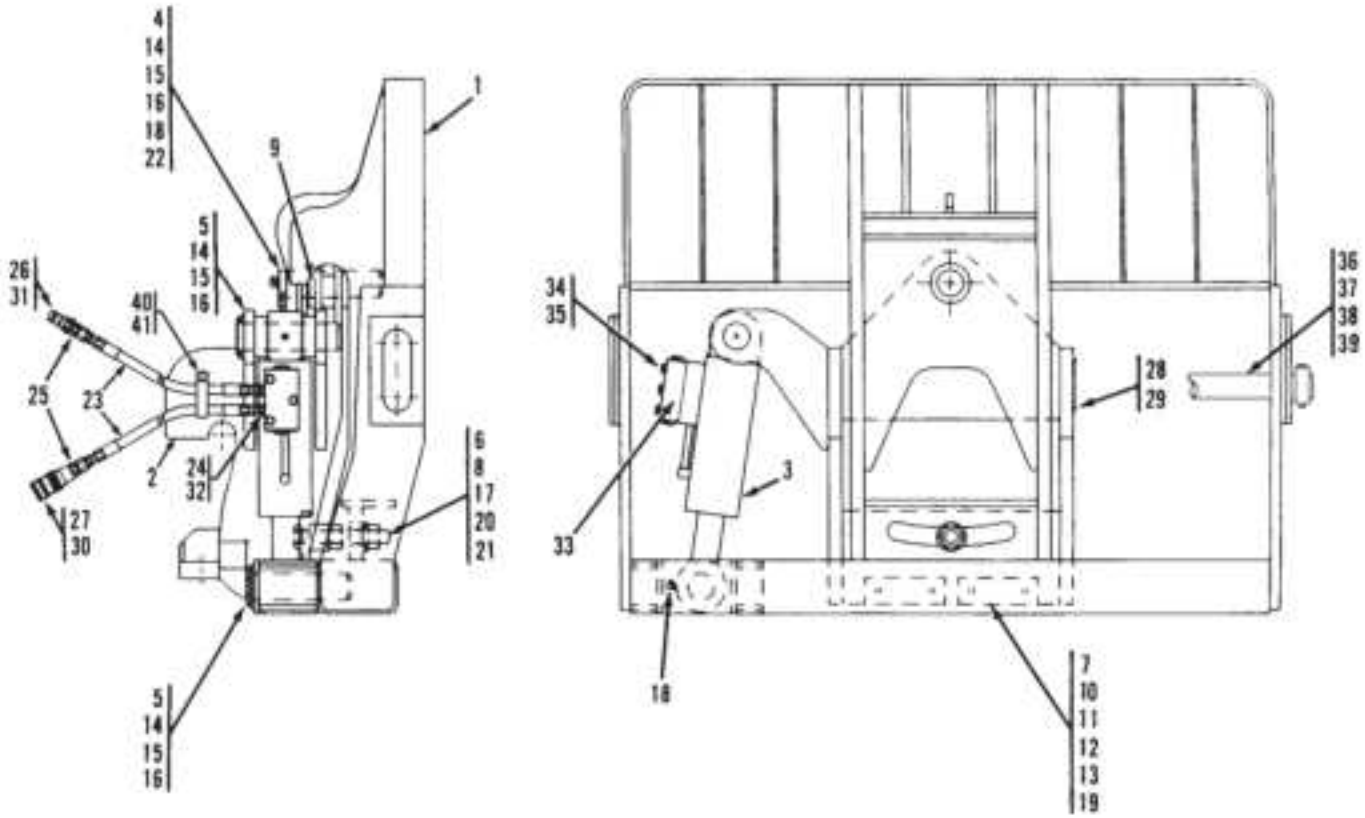


Item	Part No.	Qty.	Description Of Part
*	9130-5016	Ref	66" SLOPE PILER CARRIAGE, (includes all items)
	9103-3053	1	CAPACITY DECAL, (not shown)
1	9130-6030	1	CARRIAGE WELDMENT
2	9108-6122	1	ADAPTER WELDMENT
3		Ref	SWAY CYLINDER, (see page 13-17 for details)
4	9108-3248	1	BUSHING
*5	3423263	2	PIN
*6	9020-4007	1	TUBE
*7	9103-3186	2	BEARING PAD
8	9108-1577	1	TAP BOLT
9	9108-1594	1	THRUST WASHER
*10	9020-5870	AR	SHIM
11	9103-1236	2	SPACER
*12	8820-1535	4	HEX HD CAPSCREW, 3/8-24X1-1/4, GR5
*13	8820-1534	4	HEX HD CAPSCREW, 3/8-24X1, GR5
14	9108-1313	3	KEEPER PLATE
15	8820-1065	6	HEX HD CAPSCREW, 1/2-13X1, GR5
16	8855-1013	6	LOCKWASHER, 1/2
17	8852-1016	1	HEX LOCKNUT, 1-8
*18	8867-1022	2	LUBE FITTING, 90 DEGREES, 1/8
19	8856-1109	4	FLAT WASHER, 3/8
20	8850-1016	1	HEX NUT, 1-8
21	0510-1441	1	WASHER, 1-1/16
22	9108-1622	1	PIN
23	8471-6434	2	HOSE ASSY
24	8366-1316	2	CONNECTOR

Item	Part No.	Qty.	Description Of Part
*25	8866-1010	2	CONNECTOR, **(Before S/N 2005283-01)**
	8866-2018	2	CONNECTOR, **(S/N 2005283-01 & After)**
*26	9116-3138	1	MALE QUICK DISCONNECT, **(Before S/N 2005283-01)**
	9140-3414	1	MALE QUICK DISCONNECT, **(S/N 2005283-01 & After)**
*27	9116-3139	1	FEMALE QUICK DISCONNECT, **(Before S/N 2005283-01)**
	9140-3413	1	FEMALE QUICK DISCONNECT, **(S/N 2005283-01 & After)**
28	8834-1022	4	DRIVE SCREW, #10X3/8
29	9015-3001	1	SERIAL NUMBER PLATE
30	9104-3125	1	DUST PLUG
31	9104-3126	1	DUST CAP
*32	8866-2105	2	ELBOW, 90 DEGREES, (swivel nut)
33		Ref	DUAL P.O. CHECK VALVE, (see page 13-18 for details)
34	8820-1040	3	HEX HD CAPSCREW, 3/8-16X2-1/4, GR5
35	8855-1011	3	LOCKWASHER, 3/8
*36	9130-1083	1	FORK PIN
*37	9020-0003	2	COLLAR
*38	8820-1105	2	HEX HD CAPSCREW, 5/8-11X4, GR5
*39	8852-1310	2	LOCKNUT, 5/8-11
*40	8452-1062	1	SUPPORT CLAMP
*41	7714-3015	1	WHIZ-LOK NUT, 3/8-16

ER 46361, 48269, 49530, 49939, 50170 LK

* *Revised illustration & parts list.*

MidWestTech | Gradall 534B-9 Telehandler Parts Manual | Publication 9103-4312 Order the manual at mid-west-tech.com >

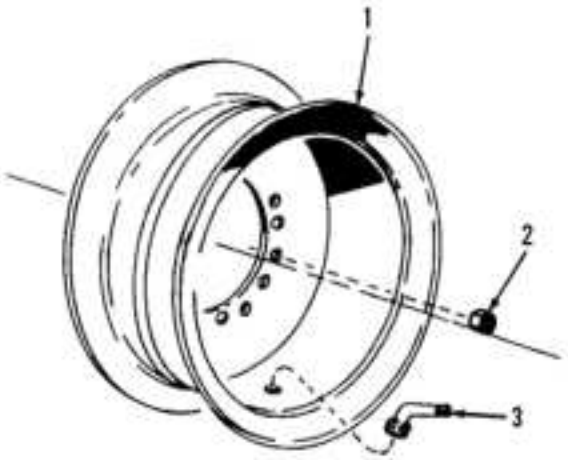

FRONT-STANDARD

Item	Part No.	Qty.	Description Of Part
1	9104-3298	1	RIM, 9.00 X 24
2	9104-3146	12	LUG NUT (lubricate and torque to 350-400 ft. lbs.)
3	9108-3385	1	VALVE
4	9103-3104	1	TIRE, 13.00 X 24, 12 PLY (G-2 traction regular tread) (not illustrated)

REAR-STANDARD

Item	Part No.	Qty.	Description Of Part
1	9104-3298	1	RIM, 9.00 X 24
2	9104-3146	12	LUG NUT (lubricate and torque to 350-400 ft. lbs.)
3	9108-3385	1	VALVE
4	9103-3104	1	TIRE, 13.00 X 24, 12 PLY (G-2 traction regular tread) (not illustrated)

FRONT-FLOATATION

Item	Part No.	Qty.	Description Of Part
1	9104-3292	1	RIM, 14.00 X 25
2	9104-3146	12	LUG NUT (lubricate and torque to 350-400 ft. lbs.)
3	9020-1452	1	VALVE
4	9103-3361	1	TIRE, 17.5 X 25, (L-2 Michelin radial) (not illustrated)

MidWestTech | Gradall 534B-9 Telehandler Parts Manual | Publication 9103-4312

Order the manual at mid-west-tech.com >

Item	Part No.	Qty.	Description Of Part
1		Ref	REAR DRIVE MOTOR ASSY (see page 10-16 for details)
*2	9104-3113	1	TUBE ASSY
*3	9104-3116	1	TUBE ASSY
4	9020-7290	4	HOSE ASSY
5	9002-7187	AR	NYLON TY-RAP
6	9104-3308	1	TUBE ASSY
7	9104-3309	1	TUBE ASSY
8	9020-2343	4	TUBE CLAMP
9	8820-1033	4	HEX HD CAPSCREW, 3/8-16 X 3/4, GR5
10	8856-1109	4	FLAT WASHER, 3/8
11		Ref	SERIES - PARALLEL VALVE (see page 10-10 for details)
12	8471-7900	1	HOSE ASSY
13	9104-3312	1	TUBE ASSY
14	9104-3311	1	TUBE ASSY
15	9104-3307	1	TUBE ASSY
16	9104-3310	1	TUBE ASSY
*17	9104-3115	1	TUBE ASSY
18	9002-8225	4	O-RING
19	8471-1342	8	FLANGE HALF
20	8820-1067	16	HEX HD CAPSCREW, 1/2-13 X 1-1/2, GR5
21	9020-7372	4	ADAPTER
*22	9104-3114	1	TUBE ASSY
23	9020-0482	1	TUBE CLAMP
24	8850-1008	8	HEX NUT, 1/2-13
25	9020-3506	8	FLAT WASHER, 1/2
26	8820-1036	1	HEX HD CAPSCREW, 3/8-16 X 1-1/4, GR5
27	9103-3481	8	STUD
28	8568-1076	2	GASKET
29	8866-2069	1	ELBOW, 90 DEGREES (includes item 30)
30	8859-1209	1	O-RING
31	8820-1070	1	HEX HD CAPSCREW, 1/2-13 X2-1/4, GR5
32	8856-1111	6	FLAT WASHER, 1/2
33	8820-1068	2	HEX HD CAPSCREW, 1/2-13 X1-3/4, GR5
34	8859-1209	1	O-RING
35	8866-2010	1	CONNECTOR (includes item 34)
36	8866-2110	1	ELBOW, 90 DEGREES (swivel nut)
37	8850-1008	3	HEX NUT, 1/2-13
38		Ref	FORWARD-REVERSE VALVE (see page 10-9 for details)
39	9002-7906	2	ELBOW, 90 DEGREES (swivel nut)
40	8471-7464	1	HOSE ASSY
41	7713-3342	1	HOSE ASSY
42	8866-2105	1	ELBOW, 90 DEGREES (swivel nut)
43	8366-1316	1	CONNECTOR
44	8866-2003	2	CONNECTOR (includes item 45)
45	8859-1202	2	O-RING
46	8820-1005	4	HEX HD CAPSCREW, 1/4-20 X 1, GR5
47	8850-1004	4	HEX NUT, 1/4-20
48	9103-1086	2	MOUNTING BRACKET
49		Ref	DIRECTIONAL CONTROL VALVE (see page 10-19 for details)
50	9002-7485	1	HOSE ASSY
51	8698-3191	2	TERMINAL, 1/4 SCREW SIZE
52	9002-8959	2	FEMALE TERMINAL
53		AR	WIRE, 14 GA. BLACK, 40" LONG
54	8859-1204	2	O-RING
55	8866-2064	2	ELBOW, 90 DEGREES (includes item 54)
56	8866-2119	2	ELBOW, 45 DEGREES (swivel nut)
57	8471-7577	2	HOSE ASSY

* *Changed part number on items 2, 3, 17 & 22.*

MidWestTech | Gradall 534B-9 Telehandler Parts Manual | Publication 9103-4312 Order the manual at mid-west-tech.com >