580K
Loader Backhoe

Operators Manual

9-11593

CASE
CONSTRUCTION

MidWestTech | Case 580K Loader Backhoe Operator's Manual | Publication 9-11593

Order the manual at mid-west-tech.com >

TABLE OF CONTENTS

Introduction 2
Safety 6
Specifications 22-38
Product Identification and Serial Numbers 39-40
Controls and Instruments
- Instrument Cluster 42
- Machine Controls 44
  - Direction Control Lever 44
  - Four Speed Transaxle Control and Foot Pedals 46
  - Turn Signal Control and Horn 47
  - Driving, Working, and Flasher Lamps 48
  - Hand Throttle, Key Switch, and Ether Starting Aid 49
  - Flood Lamps and Rotating Beacon 50
  - Alarm for Engine and Parking Brake, and Hydraulic Temperature 50
  - Parking Brake 51
  - Control for Front Drive Axle 52
  - Steering Column Tilt 53
  - Telescoping Steering Column 53
  - Loader Controls 54,55
  - Backhoe Controls 58-59
  - Auxiliary Attachments Control for Backhoes 60
  - Tilting Backhoe Controls 61
  - Three Point Hitch Controls 62
  - Standard Seat Controls 63
  - Suspensions Seat Controls 64,65
  - Seat Belts 66,67
  - Cab Controls 68-71


Operating Instructions
- Engine Operation 72-78
- Machine Operation 79
  - Adjusting the Seat 79
  - Selecting Transaxle Gear/ and Before You Operate the Machine . . 79
  - Machine Direction 80
  - Four Speed Transaxle 80
  - Machine Direction 80
  - Differential Lock 80
  - Working on a Hill 81
  - Four-Wheel Drive Operation 82
  - Parking the Machine 83
  - Towing 84
  - Transporting the Machine 85
  - Operating in Cold Weather 86
  - Operating in Hot Weather 87
- Loader Operation 88
  - Safety When You Work 88
  - Clutch Cutout Button 88
  - Bucket Level Indicator 89
  - 4-in-1 Bucket Indicators 89
  - Return-To-Dig 90

Backhoe Operation
- Safety When You Work 95
- General 96
- Stabilizer Pads 95
- Before You Dig With the Backhoe 97
- Moving the Backhoe Out of the Transport Position 99
- Backhoe Bucket Digging Positions 100
- Extendahoe Lock Pin 101
- Digging with the Backhoe 102
- Moving the Machine Forward on Level Ground 105
- Moving the Machine Forward On a Hill 106
- Moving the Backhoe into the Transport Position 107
- Frost Point 109
- Concrete Breaker Fork 110
- Case Coupler 111,112
- Lifting with the Backhoe 113
- Removing the Demountable Backhoe 116
- Installing the Demountable Backhoe 118
- Three Point Hitch Operation 119
- Removing the Three Point Hitch 121
- Installing the Three Point Hitch 123


Maintenance and Lubrication
- General Safety Before You Service 124
- Support Strut for Loader Lift Arms 125
- Systemgard Lubricant Analysis Service 126
- Tilting Engine Hood 126
- Fluid and Lubricants 127
- Diesel Fuel 129
- Engine Oil Recommendations 130
- Engine Run-In Period 131
- Run-In Maintenance Schedule 131
- Maintenance Schedule 132-135
- Engine Lubrication System 136,137
- Air Cleaner System 138-141
- Engine Cooling System 142,143
- Diesel Fuel System 144-147
- Hydraulic System 147-149
- Electrical System 150-155
- Power Shuttle Transmission 156-158
- Four Speed Transaxle 159
- Front Drive Axle 160
- Transfer Case 162
- Wheels and Tires 163
- Brakes 166-169
- Ether Starting Aid 170
- Loader Return-To-Dig Adjustment 171
- Fan Drive Belt Replacement 173
- Special Engine Starting Procedure 174
- Spark Arrester Muffler 175
- Cab Service 176-179
- Roll-Over Protective Structure (ROPS) 180-183
- Machine Storage 184
- Seat Belt 185
- Case Technical Manuals 186

After Delivery Check 187


MidWestTech | Case 580K Loader Backhoe Operator's Manual | Publication 9-11593 Order the manual at mid-west-tech.com >

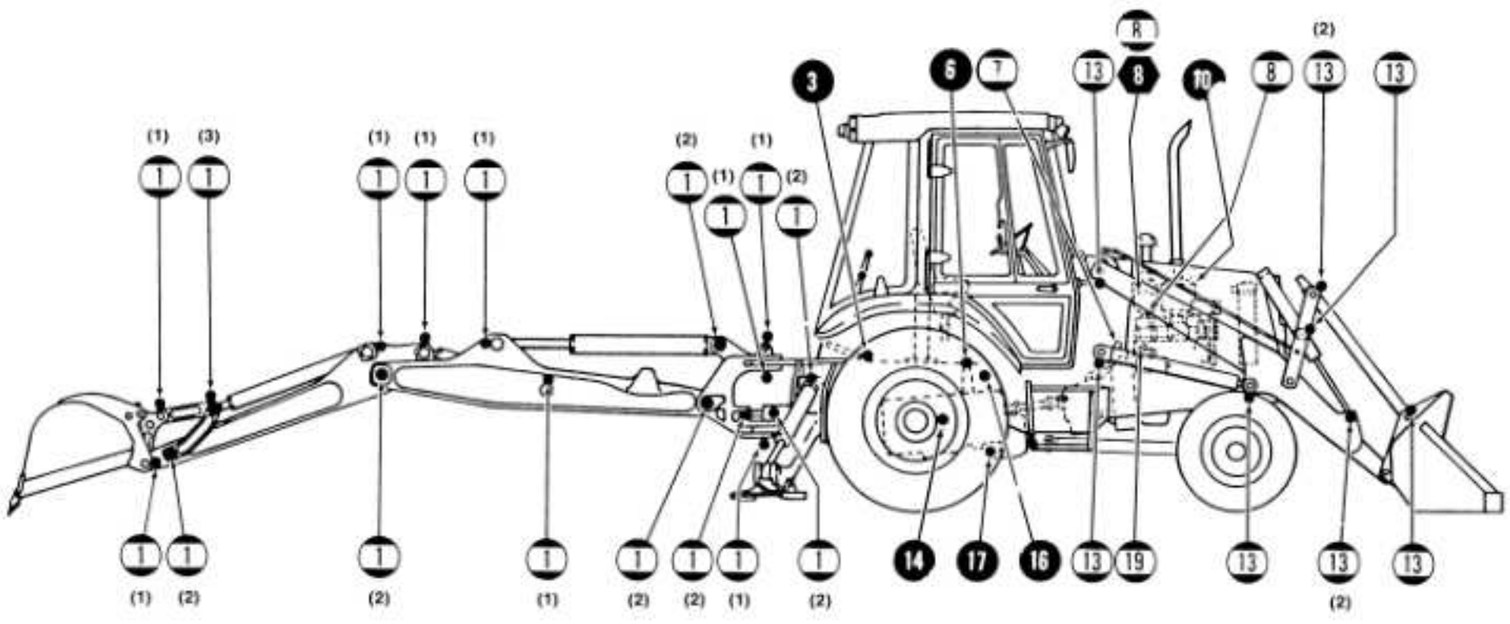



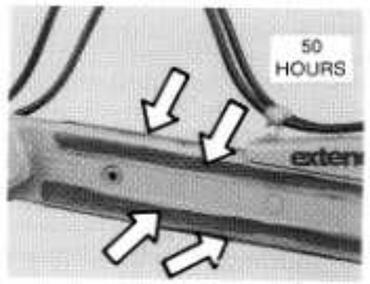

Extendable Dipper
Extend Dipper and Coat Slide With Grease

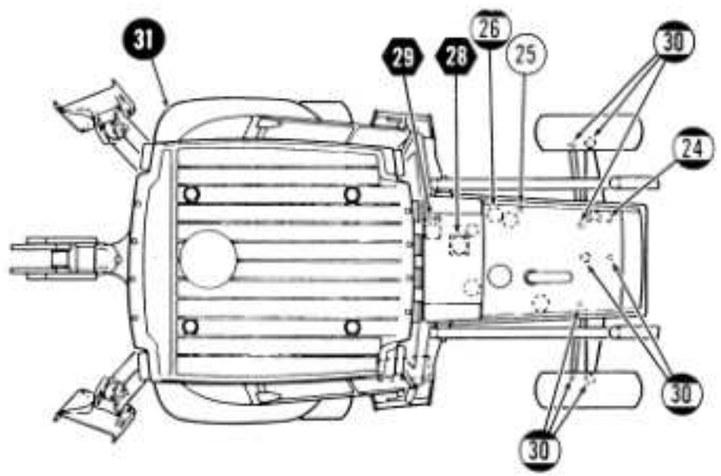

Order the manual at mid-west-tech.com >