580K Prestige loader Backhoe

Operator's manual

Don 9-13142

CASE CONSTRUCTION


MidWestTech | Case 580K Prestige Loader Backhoe Operator's Manual | Publication 9-131... Order the manual at mid-west-tech.com >

TABLE OF CONTENTS

To The Owner 2
Product Identification and Serial Numbers 6
Safety 8
Specifications 22
Operating Controls 40
Instrument Cluster 40
Machine Controls 42
Direction Control Lever 42
Four Speed Transaxle Control and Pedals 43
Turn Signal Control and Horn 45
Driving, Working, and Flasher Lamps 46
Hand Throttle, Key Switch 47
Rotating Beacon 48
Engine and Parking Brake Alarm 48
Hydraulic Fluid Temperature Alarm 48
Parking Brake 49
Control for Front Drive Axle 50
Loader Controls 51
Lift Arm and Bucket Control 51
Clam Control 52
Clutch Control Button 52
Backhoe Controls 53
Extendahoe Controls 54
Side Shift Lock Control 55
Standard Seat Controls 56
Suspensions Seat Controls 57
Seat Belts 58
Cab Controls 59
Operating Instructions 63
Engine Operation 63
Machine Operation 69
Starting 69
Selecting Transaxle Gear and Machine Direction 70
Four Speed Transaxle 70
Machine Direction 70
Differential Lock 70
Working on a Hill 71
Four-Wheel Drive Operation 72
Parking the Machine 73
Moving a Disabled Machine 74
Transporting the Machine 75
Operating in Cold Weather 76
Operating in Hot Weather 77
Loader Operation 78
Safety When You Work 78
Clutch Cutout Button 78
Bucket Level Indicator 79
4-in-1 Bucket Indicators 79
Return-To-Dig 80
Job Layout 81
Fitting the Bucket 82
Backhoe Operation 84
Safety When You Work 84
General 84
Stabilizer Pads 84
Sideshift Backhoe 85
Backhoe Bucket Digging Position 85
Before You Dig With the Backhoe 87
Moving the Backhoe Out of the Transport Position 89
Extendahoe Lock Pin 90
Moving Sideshift Backhoe 91
Digging with the Backhoe 93
Moving the Machine Forward on Level Ground 94
Moving the Machine Forward on a Hill 95
Moving the Backhoe into the Transport Position 96
Case Coupler 99
Lubrication and Maintenance 100
General Safety Before You Service 100
Support Strut for Loader Lift Arms 102
Tilting Engine Hood 103
Fluid and Lubricants 104
Engine Oil Recommendations 105
Diesel Fuel 106
Engine Run-In Period 107
Run-In Maintenance Schedule 107
Maintenance Schedule 108
Engine Lubrication System 112
Air Cleaner System 114
Engine Cooling System 118
Diesel Fuel System 120
Hydraulic System 123
Electrical System 126
Four Speed Transaxle 130
Front Drive Axle 132
Wheels and Tires 134
Brakes 137
Loader Return-To-Dig Adjustment 139
Rear Counterweight 141
Fan Drive Belt Replacement 142
Special Engine Starting Procedure 143
Cab Service 144
Roll-Over Protective Structure (ROPS) 146
Machine Storage 149
Seat Belt 150
Case Technical Manuals 151
Index 152
After Delivery Checks 155

MidWestTech | Case 580K Prestige Loader Backhoe Operator's Manual | Publication 9-13142 Order the manual at mid-west-tech.com >

SIDESHIFT BACKHOE

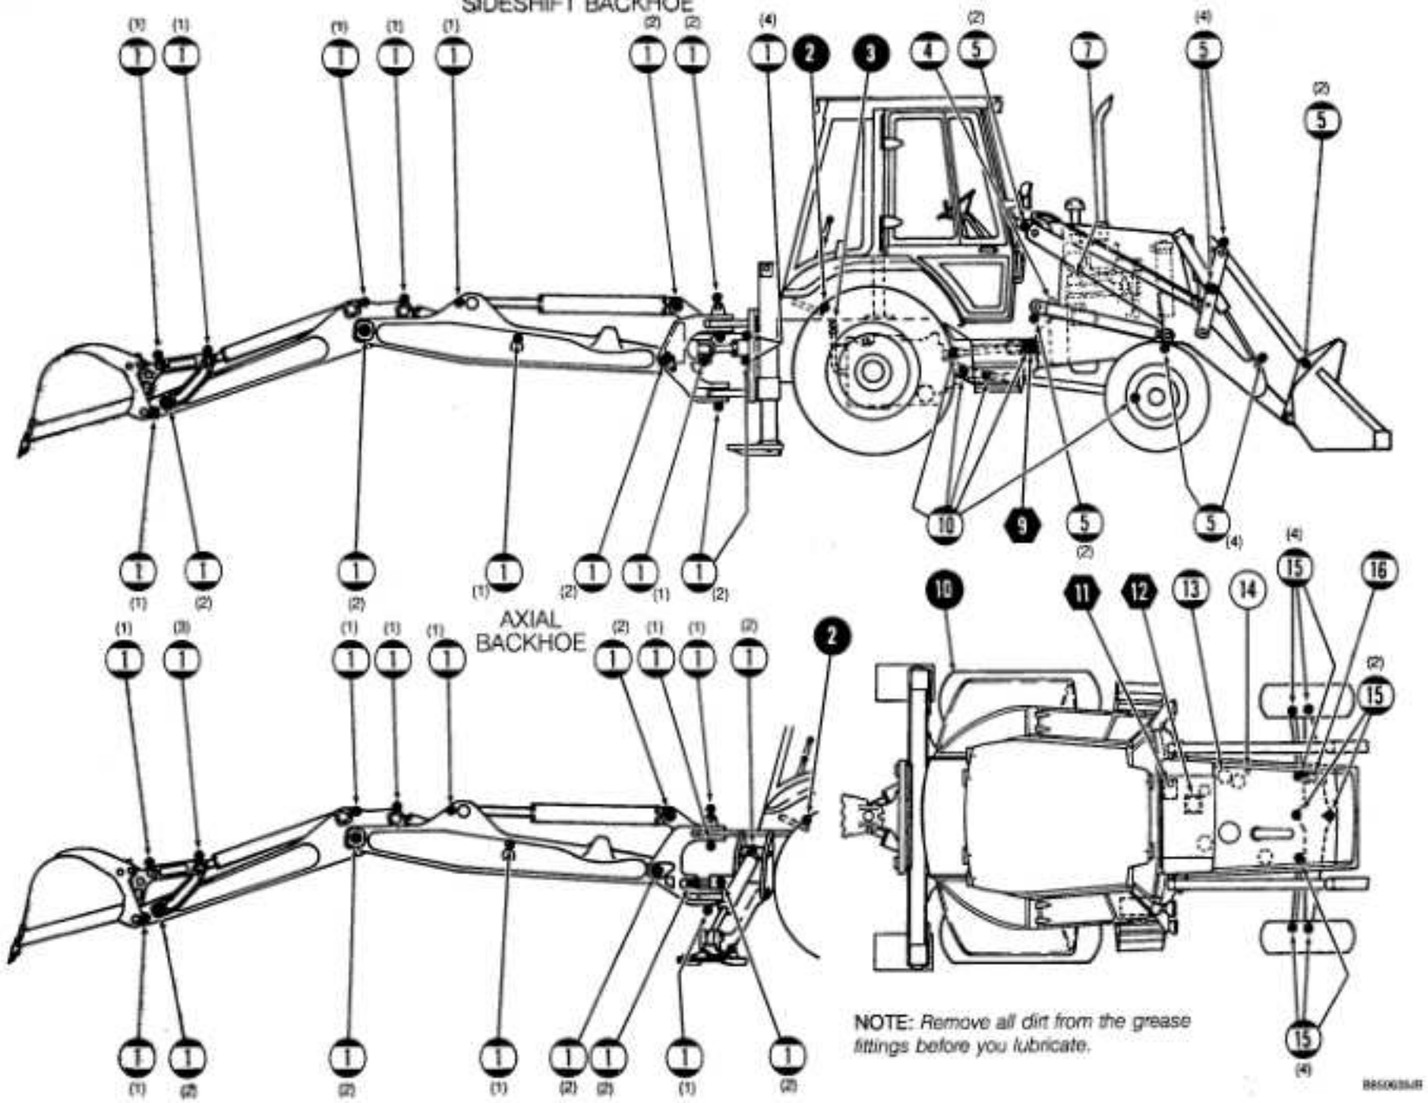

AXIAL BACKHOE

NOTE: *Remove all dirt from the grease fittings before you lubricate.*

MidWestTech | Case 580K Prestige Loader Backhoe Operator's Manual | Publication 9-13142

Order the manual at mid-west-tech.com >