580K
Loader Backhoe

Operators Manual

9-15981

Reprinted

CASE
CONSTRUCTION

MidWestTech | Case 580K Loader Backhoe Operator's Manual | Publication 9-15981

Order the manual at mid-west-tech.com >


SECTION INDEX

Backhoe Auxiliary Attachment Controls 66
Backhoe Controls 62
Auxiliary Attachment 66
Controls with Foot Swing 62
Controls with Hand Swing 63
Tilting Backhoe Control 65
Controls with Hand Swing 63
Cab Controls 75
AC Temperature Control 76
Air Louvers 77
Blower Switch 75
Dome Lamp Switch 76
Door Latch 78
Front Wiper Switch 76
Heater Control 76
Heater Shutoff Valve 76
Rear Wiper Switch 75
Window Retainer 78
Extendahoe Controls 64
Controls with Foot Swing 64
Controls with Hand Swing 65
Instrument Cluster - Standard 45
Instrument Control Center - Optional 47
Loader Controls 60
Clam Control (4-In-1) 61
Clutch Cutout Button 61
Lift Arm and Bucket Control 60
Machine Controls 50
Alarm - Optional 56
Brake Pedal Lock 53
Brake Pedals 52
Clutch Cutout Button 51
Differential Lock Pedal 52
Direction Control Lever 50
Ether Starting Aid Button 55
Flood Lamp Switch 56
Foot Pedals 52
Foot Throttle 52
Front Drive Axle Control Lever 58
Hand Throttle 55
Horn 53
Key Switch 55
Lamps 54,56
Light Switches 54
Parking Brake 57
Rotating Beacon Switch 56
Steering Column Tilt Control 59
Telescopic Steering Column 59
Transaxle Shift Lever 51
Turn Signal Control 53
PTO Control 69
Seat 70
Standard Seat 70
Suspension Seat 71
Seat Belts 73
Three Point Hitch Controls 68
Tilting Backhoe Controls 67


MidWestTech | Case 580K Loader Backhoe Operator's Manual | Publication 9-15981 Order the manual at mid-west-tech.com >

BACKHOE GREASE FITTINGS
Use Case Moly-Disulfide Grease


Lubricate the backhoe pivot points as shown. If you operate in severe conditions, lubricate more frequently. Clean the fittings before lubricating.

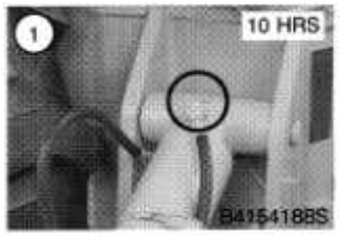


Stabilizer Cylinder Closed End..... 2

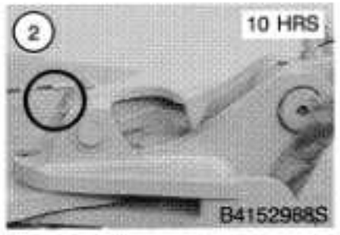


Boom Release..... 1

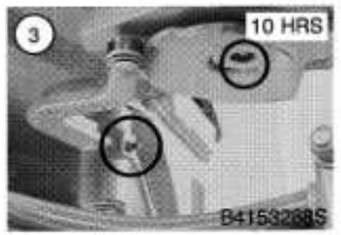


Upper Swing Pivot..... 1
Swing Sequence Pivot..... 1

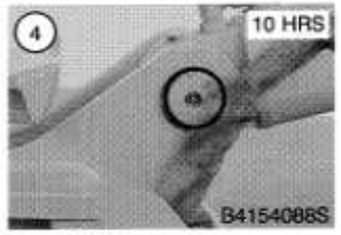


Boom Cylinder Closed End..... 2

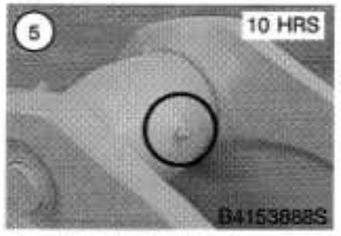


Boom Cylinder Rod End..... 1

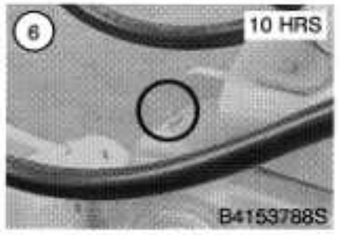


Dipper Cylinder Rod End..... 1

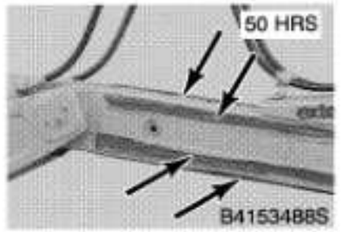


Extendable Dipper
Extend Dipper and Coat Slide With Grease

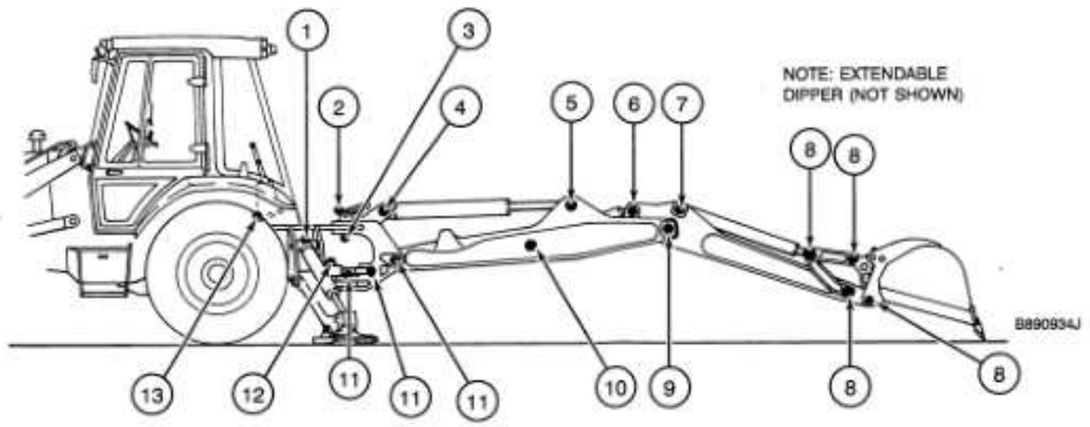


NOTE: EXTENDABLE DIPPER (NOT SHOWN)

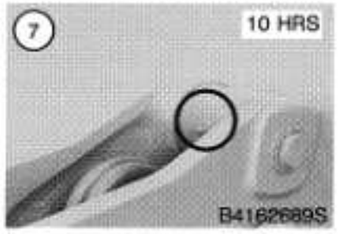


Bucket Cylinder Closed End..... 1

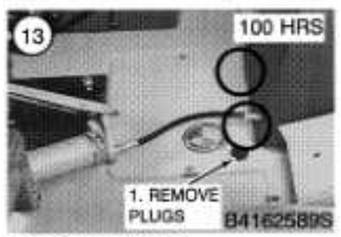


Foot Swing Pedals (If Equipped)..... 2

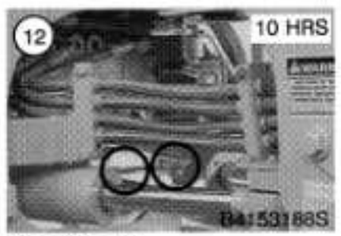


Swing Cylinder Closed End..... 2

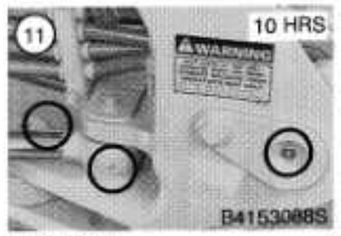


Boom Pivot..... 2
Swing Cylinder Rod End..... 2
Lower Swing Pivot..... 1

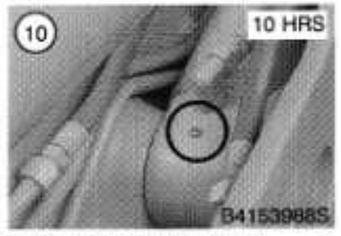

Dipper Cylinder Closed End..... 1

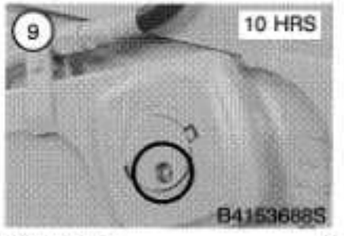

Dipper Pivot..... 2

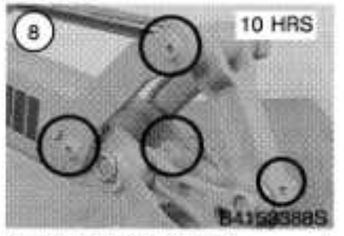

Bucket Cylinder Rod End..... 1
Bucket Links..... 5
Bucket Pivot..... 1

MidWestTech | Case 580K Loader Backhoe Operator's Manual | Publication 9-15981
Order the manual at mid-west-tech.com >