ORIGINAL INSTRUCTIONS

OPERATOR'S MANUAL

T5.80
T5.90
T5.100
T5.110
T5.120
Tractor

Part number 91747819
2nd edition English
February 2022
Replaces part number 90353520

MidWestTech | New Holland T5.80, T5.90, T5.100, T5.110, T5.120 Tractor Operator's Manual | Publication 91747819
Order the manual at mid-west-tech.com >

Contents

1 GENERAL INFORMATION

Note to the Owner 1-1
Intended use 1-3
Electro-Magnetic Compatibility (EMC) 1-5
Metric and imperial units abbreviations 1-6
Identification plates 1-8
Approval data plate 1-18
Operator's manual storage 1-19
Machine orientation 1-20
Health and safety related standards applied to your tractor 1-21
Selective Catalytic Reduction (SCR) exhaust treatment - Overview 1-22

2 SAFETY INFORMATION

Safety aspects in accordance with Regulation (EU) 1322/2014 - Annex XXII and subsequent amendments and modifications 2-1
Safety rules and signal word definitions 2-9
Safety rules 2-10
Safety rules - Fire extinguisher 2-16
Safety rules - Front end loader 2-16
Ecology and the environment 2-17
Noise level 2-18
Vibration levels 2-19
Towing the tractor for recovery 2-20
Tractor jacking points 2-21
Burn prevention 2-22
Emergency escape from cab 2-23
Wheel chocks 2-24
Safety signs 2-25

3 CONTROLS AND INSTRUMENTS

Access to operator's platform

Getting in and out of the machine 3-1
Getting to know the internal parts of the cab 3-2
External rear view mirrors 3-5

Operator's seat

Mechanical suspension seat 3-6
Air seat 3-7
Air suspension seat deluxe 3-8
Safety belt 3-10

Instructional seat

Instructional seat - Localization overview 3-11

MidWestTech | New Holland T5.80, T5.90, T5.100, T5.110, T5.120 Tractor Operator's... Order the manual at mid-west-tech.com >

Forward controls

Instrument cluster 3-11
Front controls 3-19

Left-hand side controls

Left side console 3-26
Left side post controls 3-27
Handbrake 3-29

Right-hand side controls

Right-hand console 3-30
Pillar trim plate - Localization overview 3-38
Multicontroller 3-40
Hand throttle 3-40
Park lock 3-42
Heating, ventilation or air-conditioning control 3-43

Display

Performance windows 3-45
Programming tractor functions 3-49
Adjusting the dashboard/display brightness 3-49
Calibrating speed 3-52
Calibrating tool width 3-54
Programming maintenance work 3-55
Activating/deactivating buzzer 3-57
Setting units of measurement 3-58
Regenerating the diesel particulate filter (DPF) automatically/manually 3-59
Resetting the oil change counter 3-64
Reduction in fast speeds engagement time (Hi) 3-65
Viewing error codes 3-67

Warning and advisory symbols

Display warnings overview 3-68

4 OPERATING INSTRUCTIONS

Commissioning the unit

Basic operating safety rules 4-1
Refueling 4-2
Filling the Diesel Exhaust Fluid (DEF)/AdBlue® tank 4-3

Starting the unit

Starting engine 4-4

Stopping the unit

Stopping the engine 4-7

MidWestTech | New Holland T5.80, T5.90, T5.100, T5.110, T5.120 Tractor Operator's... Order the manual at mid-west-tech.com >

Electronic battery isolator - Operating 4-8

Moving the unit

Machine movement start-up 4-9
Operating in cold temperatures 4-10
Low idle speed management 4-11

5 TRANSPORT OPERATIONS

Road transport

Transporting the machine 5-1

Recovery transport

Recovery and towing 5-2
Towing the tractor 5-3

6 WORKING OPERATIONS

General information

Constant engine speed 6-1
Four-wheel drive 6-4
Mechanical differential lock 6-6
Electrohydraulic differential lock 6-7
Roll Over Protection Structure (ROPS) removable 6-8

Drive

Transmission operation 6-10

Rear remote control valves

Remote control valves - Safety rules 6-18
Rear remote control valves 6-19
Single/double action hydraulic valves 6-22
Hydraulic oil level when using remote hydraulic equipment 6-23

Mid-mount control valve

Joystick 6-24

Rear Power Take-Off (PTO)

Safety rules 6-26
General 6-28
Changing the Power Take-Off (PTO) shaft 6-28
Attaching Power Take-Off (PTO) driven equipment 6-30
Indipendent Power Take-Off mechanically driven 6-31
Indipendent Power Take-Off with electrohydraulic control 6-36
Ground speed Power Take-Off manual 6-40
Ground speed Power Take-Off with electrohydraulic control 6-44
Power take-off speeds 6-48

MidWestTech | New Holland T5.80, T5.90, T5.100, T5.110, T5.120 Tractor Operator's... Order the manual at mid-west-tech.com >

Left side post controls

(1) Electronic battery cut-off switch.

(2) Reactivity selection switch for the electrohydraulic Powershuttle.


(3) Front washer-wiper switch.

(4) Rear window washer switch.

(5) Front lift main switch.

(6) Front lifter mode warning LED.

(7) Trailer brake test switch.

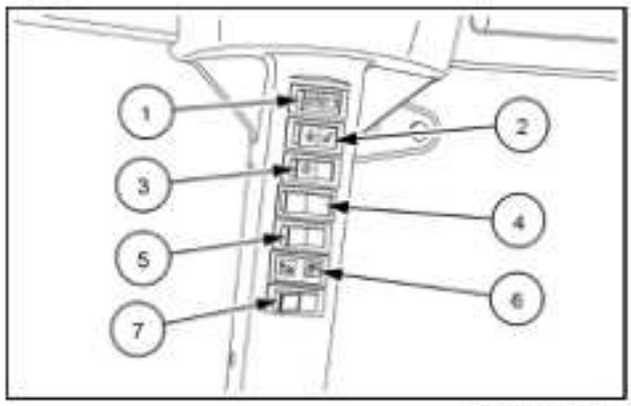


MOIL16TR02452AA 1

Electronic battery cut-off switch

With the ignition key in the "OFF" position, press the switch on one of the two positions and release it.

(1) Battery disconnected.

(2) Battery connected.

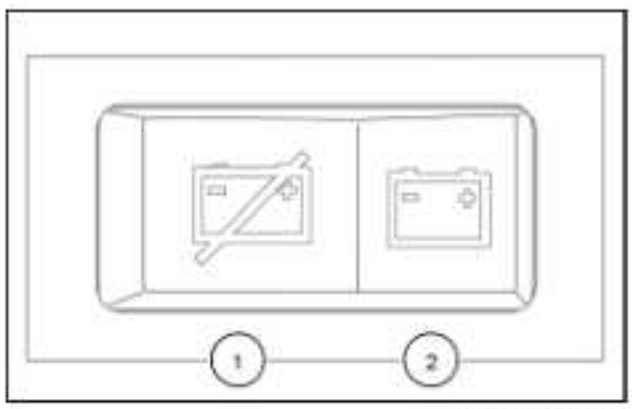

MOIL16TR02414AC 2


Reactivity selection switch for the electrohydraulic Powershuttle

Press the switch in one of the three positions.

(1) Low reactivity.

(2) Standard reactivity.

(3) High reactivity.

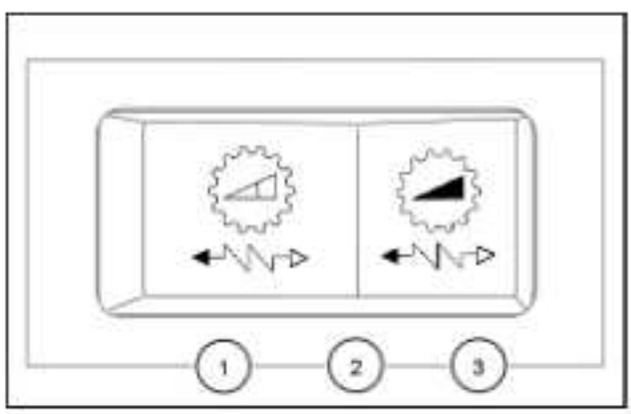

MOIL16TR02418AB 3


Front windshield washer-wiper switch

Press the switch in one of the three positions.

(1) Front windshield washer on, when released it automatically returns to the central rest position.

(2) Rest position.

(3) Front windshield wiper on.

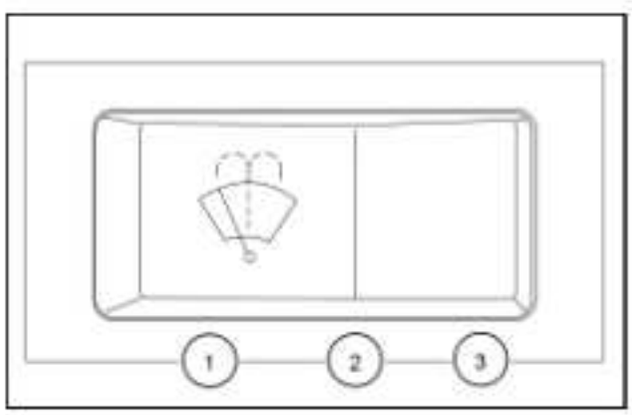


MOIL10TR02183AA 4

MidWestTech | New Holland T5.80, T5.90, T5.100, T5.110, T5.120 Tractor Operator's... Order the manual at mid-west-tech.com >


Rear hitch - Grease – Mechanical lift

Using a grease gun, pump **MULTI-PURPOSE GREASE EP / AW / NLGI 2** grease into the grease fitting **(1)**.

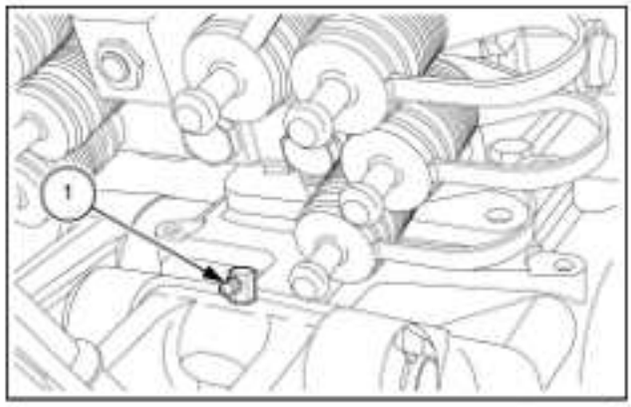


Front hitch - Grease

1. Using a grease gun, pump grease **MULTI-PURPOSE GREASE EP / AW / NLGI 2** into the grease fittings shown (three on each side).

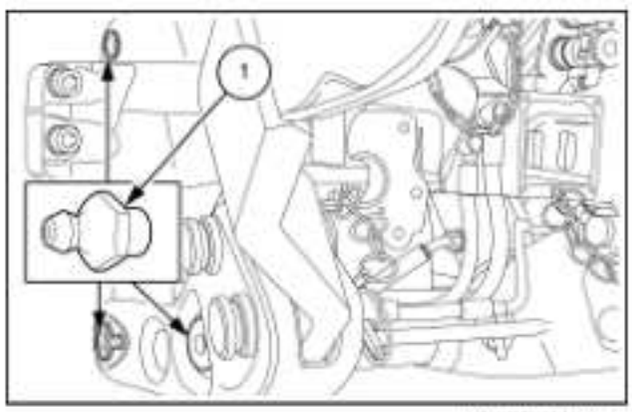

Front hitch - Grease - Coupling mounted on the axle

1. Using a grease gun, pump **MULTI-PURPOSE GREASE EP / AW / NLGI 2** grease into the grease fittings shown (two on each side).

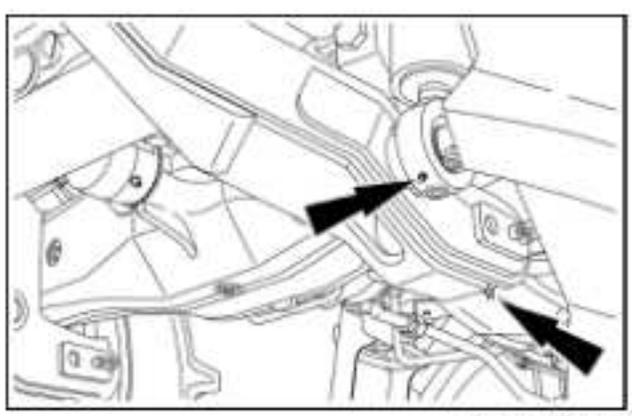

MidWestTech | New Holland T5.80, T5.90, T5.100, T5.110, T5.120 Tractor Operator's... Order the manual at mid-west-tech.com >

Maximum permitted loads on front and rear axle

⚠ WARNING

Overturning hazard!
The operator must know the correct OPERATING LOAD capacity of the machine before attempting to operate the machine. Always follow the recommended load limits.
Failure to comply could result in death or serious injury.

W8216A

NOTICE: *The total weight of the tractor, including the ballast and the weight of the implements carried, must not exceed the limits given in the tables below. The values refer to the axle capacity.*

Maximum axle load for speeds above 8.0 km/h (5.0 mph)

Axle type	Front axle	Rear Axle	Total maximum load
2WD	2000 kg (4409 lb)	3700 kg (8157 lb)	5300 kg (11684 lb)
4WD	2500 kg (5512 lb)	3700 kg (8157 lb)	6000 kg (13228 lb)
SuperSteer™	2500 kg (5512 lb)	3700 kg (8157 lb)	6000 kg (13228 lb)
4WD Heavy Duty	2900 kg (6393 lb)	3700 kg (8157 lb)	6200 kg (13669 lb)
4WD 1.5	2900 kg (6614 lb)	3700 kg (8157 lb)	6500 kg (14330 lb)

Maximum axle load for speeds less than or equal to 8.0 km/h (5.0 mph)

Axle type	Front axle	Rear Axle	Total maximum load
2WD	3100 kg (6834 lb) *	4600 kg (10141 lb)	5300 kg (11684 lb)
4WD	4300 kg (9480 lb) **	4600 kg (10141 lb)	6000 kg (13228 lb)
SuperSteer™	4300 kg (9480 lb) **	4600 kg (10141 lb)	6000 kg (13228 lb)
4WD Heavy Duty	4700 kg (10362 lb) **	5200 kg (11464 lb)	6200 kg (13669 lb)
4WD 1.5	5200 kg (6614.0 lb)	5200 kg (11464 lb)	6500 kg (14330 lb)

* Maximum track **1560 mm** (**61.42 in**)

** Maximum track **1515 – 1930 mm** (**59.65 – 75.98 in**)

NOTICE: *Braking regulations in some countries may impose lower weight limits for road transport than the figures quoted in the above tables.*

NOTICE: *If the value of the maximum load of the pair of tires is less than the maximum axle load it is necessary to refer, for the maximum load, to the value of the pair of tires. Otherwise it is necessary to take the axle load as the maximum load.*

MidWestTech | New Holland T5.80, T5.90, T5.100, T5.110, T5.120 Tractor Operator's... Order the manual at mid-west-tech.com >