Articulated Truck
325

Service Manual

9-35401

CASE CONSTRUCTION

Order the manual at mid-west-tech.com >

CONTENTS

SECTION 00 - MAINTENANCE

Chapter 1 - General Instructions

Introduction 1
General instructions 2
Type, serial number and year of manufacture 12
Position of identification data on main component groups 13
Identification of the main components of the machine 16
Safety rules 17
Prevention of fires 18
Instructions for use 19
Maintenance instructions 22

SECTION 00 - MAINTENANCE

Chapter 2 - Specifications

Main groups 2
Dimensions 2
Weights 3
Horizontal center of gravity (during transport with unladen vehicle) (mm/ft) 3
Performance 4
Performance alignment chart 5
Main group characteristics 6
Capacities 9
Units of measure (international system) 10
Standard tightening torques 11

SECTION 00 - GENERAL INSTRUCTION

Chapter 3 - Tooling

Tooling and equipment 1

MidWestTech | Case 325 Articulated Truck Service Manual | Publication 9-35401 Order the manual at mid-west-tech.com >

SECTION 00 - GENERAL INSTRUCTION

Chapter 4 - Numerical value conversion table

Numerical value conversion table 1
Unit conversion rate 1
Lenght 2
Area 4
Volume 5
Mass 7
Pressure 8
Torque 9
Temperature 11

SECTION 00 - GENERAL INSTRUCTION

Chapter 5 - Safety instructions

Introduction 3
Safety information and symbols 3
General instructions 4
Preventing fires 5
Use 7
Cab 7
Starting and stopping 8
Driving the vehicule 9
Working the vehicle 9
Towing the vehicle 11
Replacing a wheel 11
Maintenance instructions 12
Introduction 12
Preventing injuries 13
Preventing intoxication and contamination 15
Preventing burns and electrocution 16

MidWestTech | Case 325 Articulated Truck Service Manual | Publication 9-35401 Order the manual at mid-west-tech.com >


SECTION 10 - ENGINE

Chapter 1 - Engine overhaul

External view of engine ... 3
Engine air intake system ... 6
Engine fuel supply system ... 7
Engine cooling system ... 8
Thermostat operation and system layouts ... 8
Coolant circulation inside the engine ... 9
Specifications and data ... 10
Diagnostic ... 11
Tichtening torques ... 20
Special tools ... 20
Engine removal - refit ... 21
Removal ... 21
Refit ... 25
Checks and inspections ... 25
Radiator removal - refit ... 26
Removal ... 26
Refit and circuit refill ... 28
Anti-freeze percentage check ... 28
Water - Lubricant exchanger removal - refit on automatic transmission ... 29
Removal ... 29
Refit ... 29
Engine - Periodical replacement ... 30
Engine oil replacement ... 30
Engine oil filter replacement ... 31
Engine - Adjustments and checks ... 32
Peliminary operations ... 32
Valves clerance ... 32
Belts ... 35
Climate control compressor drive belt ... 36
Intake manifold pressure check ... 37
Intake manifold temperature check ... 37
Engine - Partial removal - Refit ... 38
Preliminary operations ... 38
Water pump ... 38
Removal ... 37
Refit ... 38
Coolant thermostat ... 39
Tightener ... 40
Fuel feed pump ... 41
Injectors ... 41
Injection pump ... 42
Intake manifold cover and gasket ... 46
Aftercooler and gasket ... 46
Turbocharger ... 47


Order the manual at mid-west-tech.com >

OIL CIRCUIT DIAGRAM

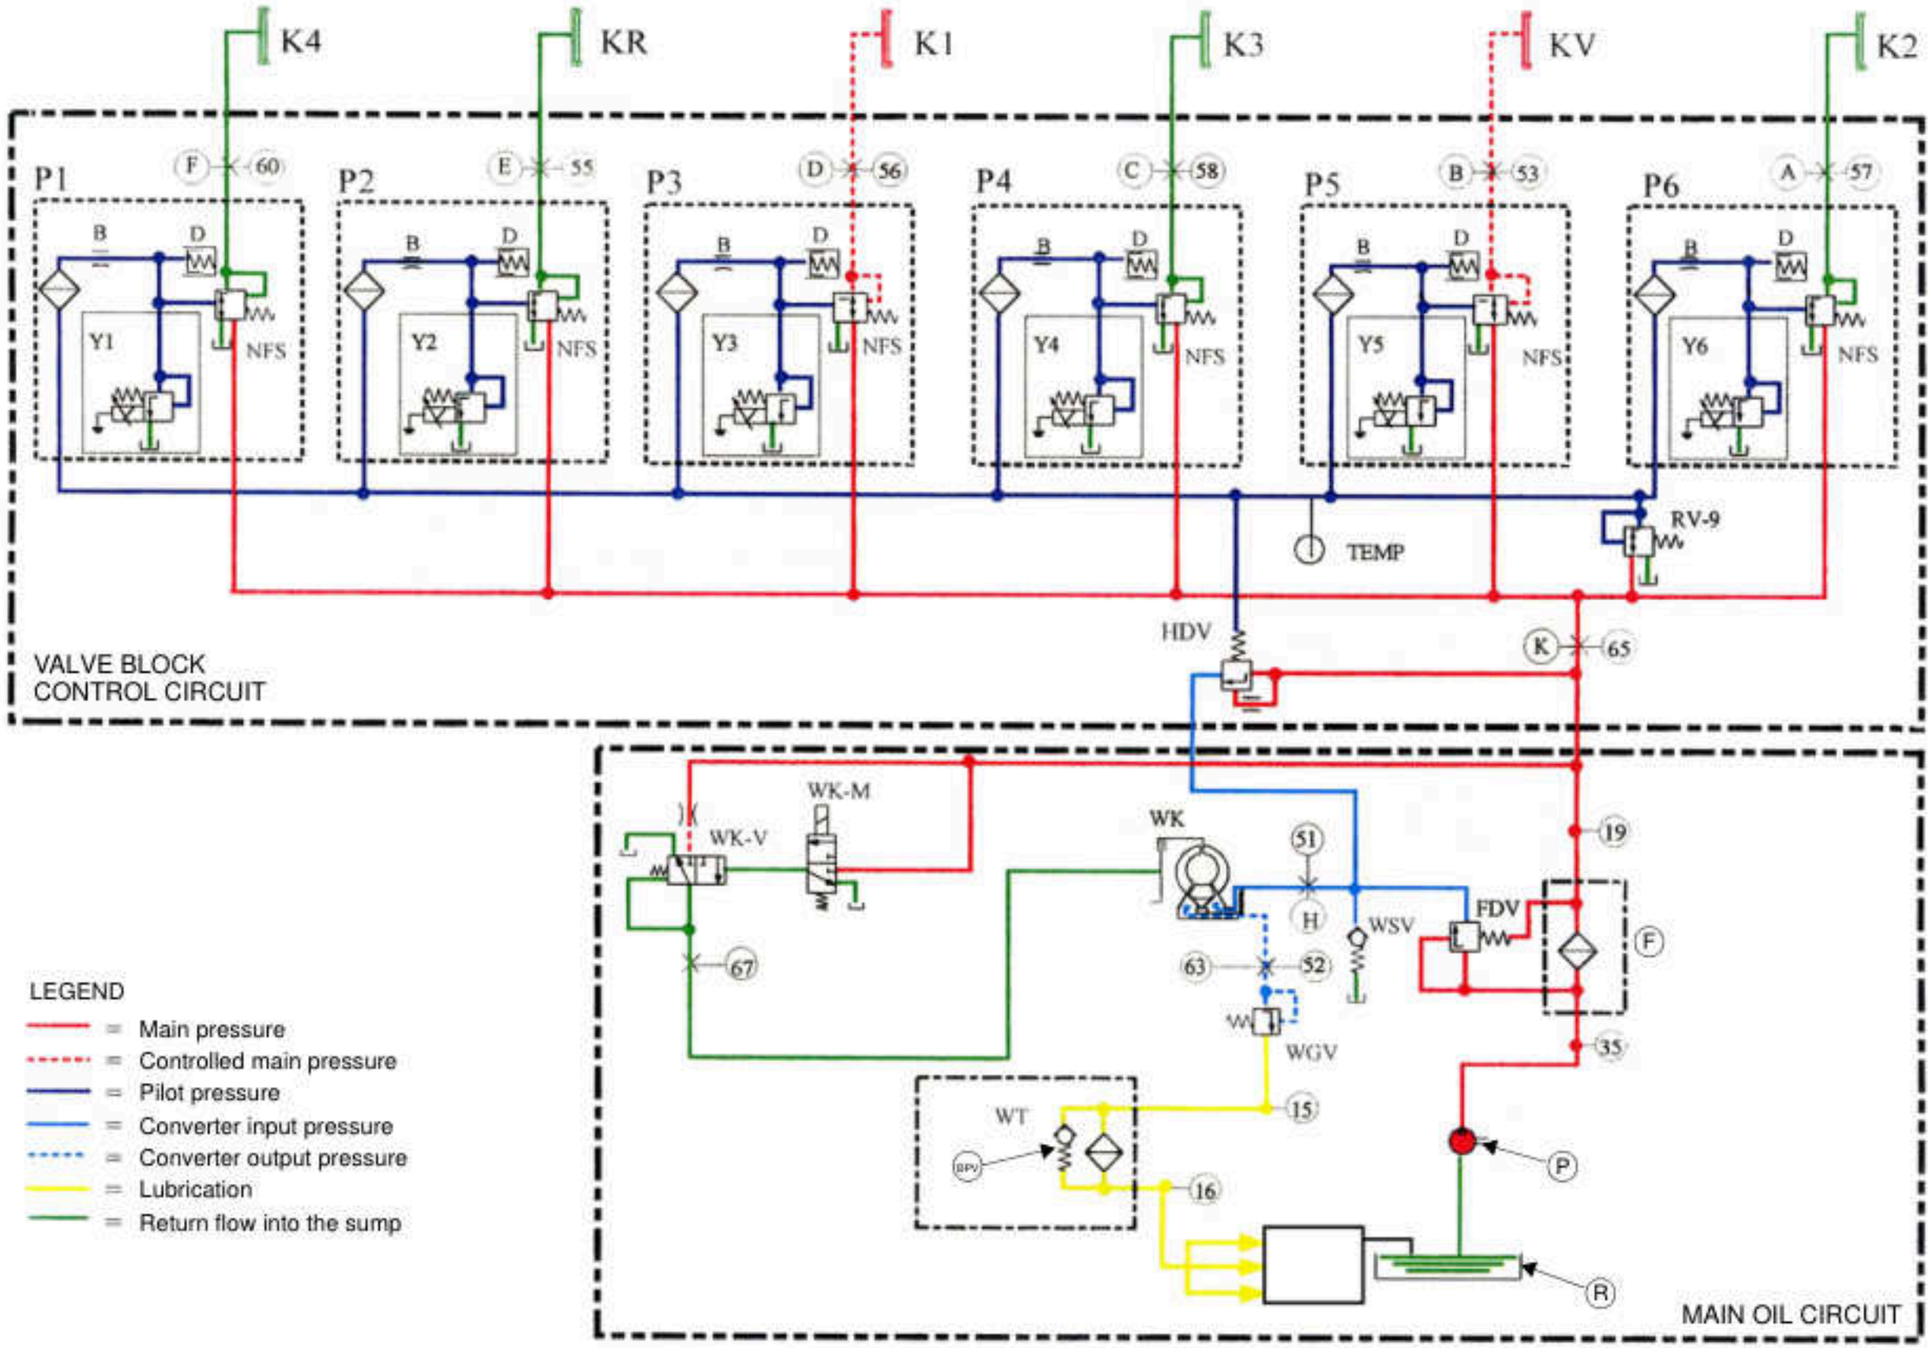

CS01H532

MidWestTech | Case 325 Articulated Truck Service Manual | Publication 9-35401 Order the manual at mid-west-tech.com >

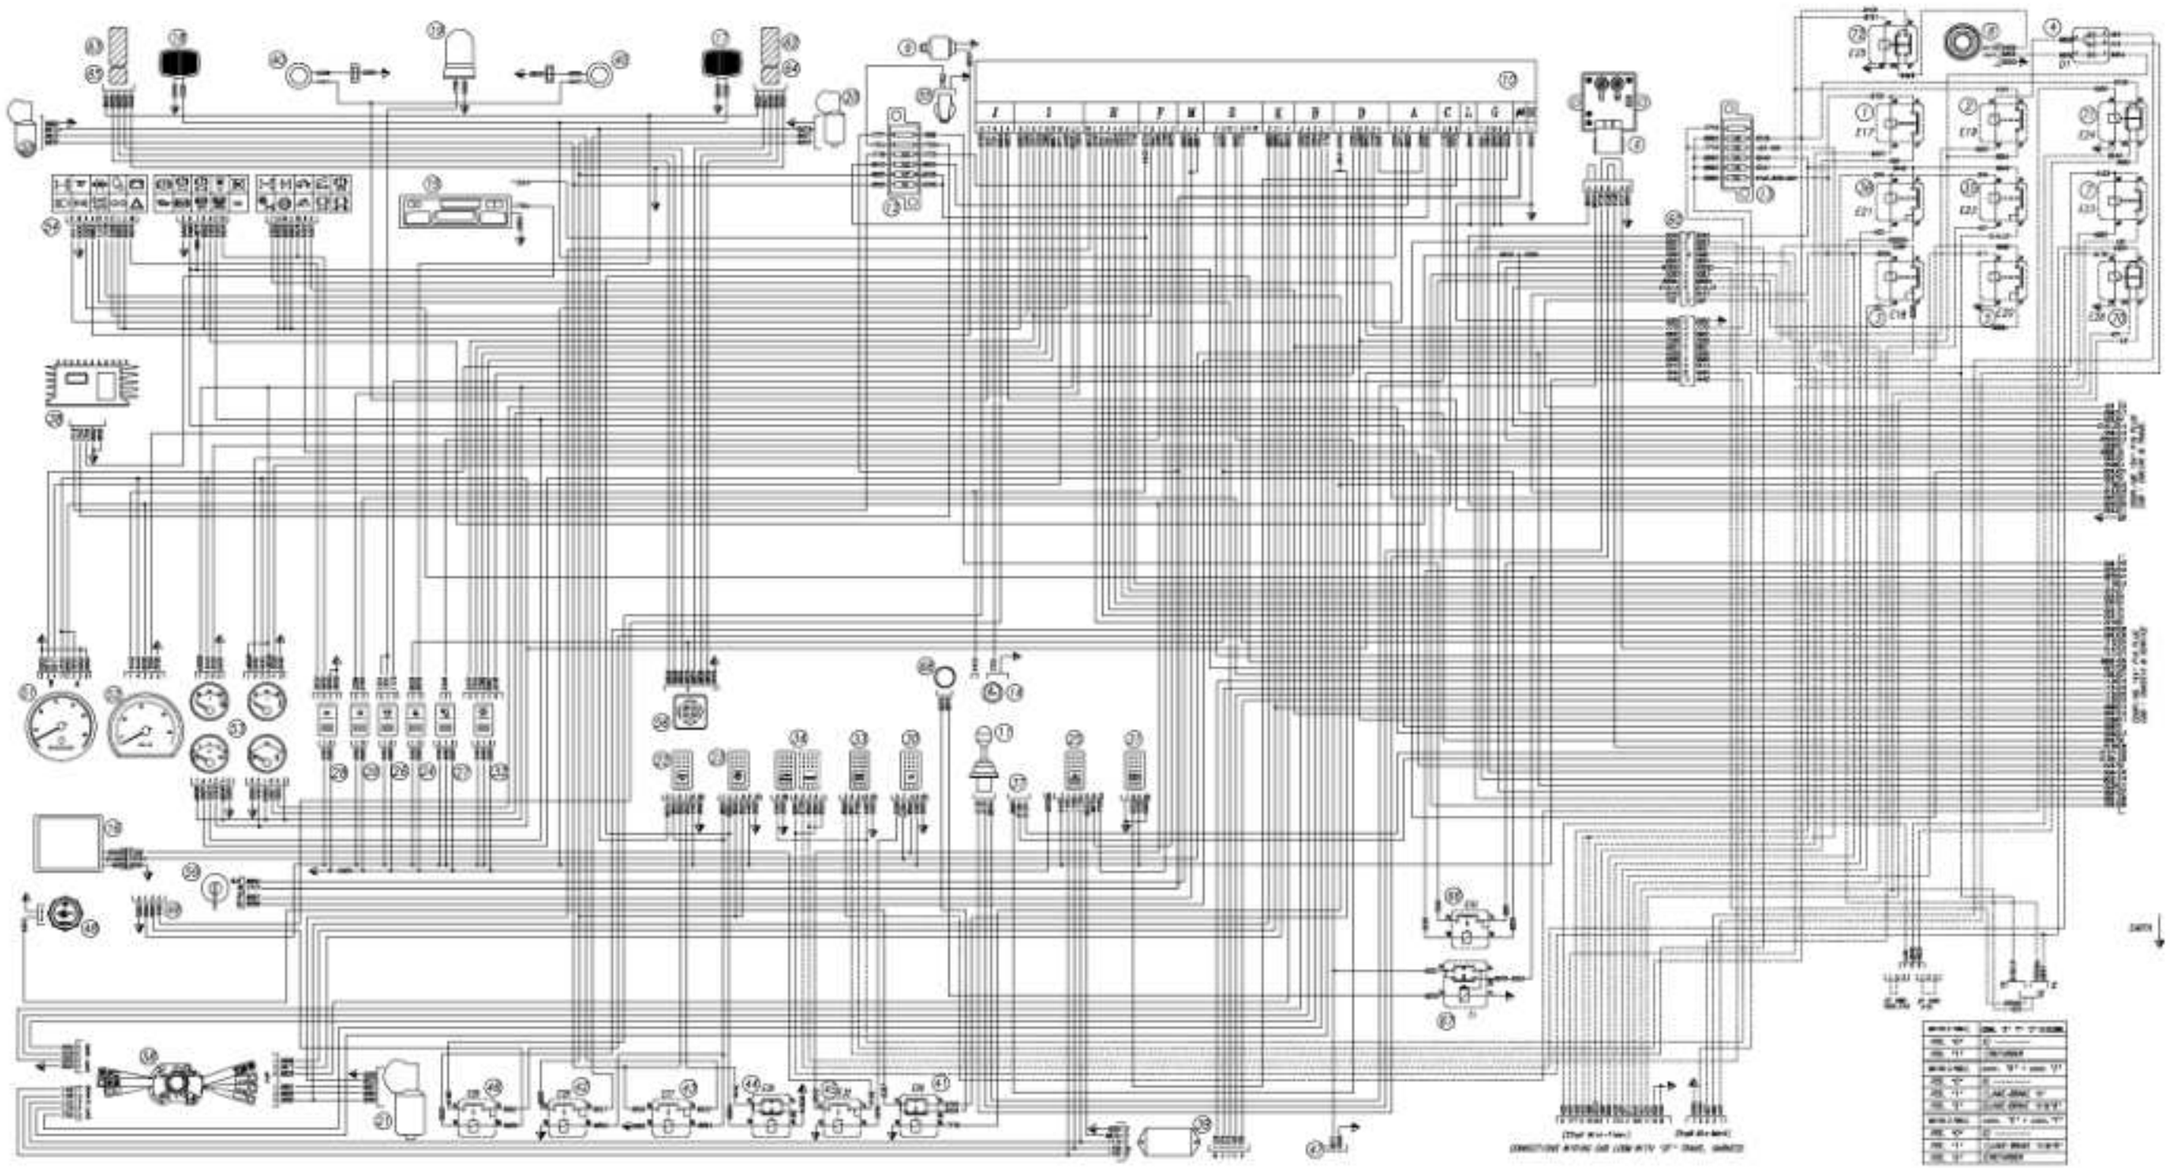

MidWestTech | Case 325 Articulated Truck Service Manual | Publication 9-35401 Order the manual at mid-west-tech.com >