Articulated Truck
330

Service Manual

Cre 9-35471

MidWestTech | Case 330 Articulated Truck Service Manual | Publication 9-35471

Order the manual at mid-west-tech.com >

CONTENTS

SECTION 00 - MAINTENANCE

Chapter 1 - General Instructions

Description	Page
Introduction	1
General instructions	2
Type, serial number and year of manufacture	12
Position of identification data on main component groups	13
Identification of the main components of the machine	16
Safety rules	17
Prevention of fires	18
Instructions for use	19
Maintenance instructions	22

SECTION 00 - MAINTENANCE

Chapter 2 - Specifications

Description	Page
Main groups	1
Dimensions	2
Weights	3
Horizontal center of gravity (during transport with unladen vehicle) (mm/ft)	3
Performance	4
Performance alignment chart	5
Main group characteristics	6
Capacities	9
Units of measure (international system)	10
Standard tightening torques	11

SECTION 00 - MAINTENANCE

Chapter 3 - Tooling

Description	Page
Tooling and equipment	1

MidWestTech | Case 330 Articulated Truck Service Manual | Publication 9-35471 Order the manual at mid-west-tech.com >

SECTION 00 - MAINTENANCE

Chapter 4 - Convers

Description	Page
Numerical value conversion table	1
Unit conversion rate	1
Lenght	2
Area	4
Volume	5
Mass	7
Pressure	8
Torque	9
Temperature	11

SECTION 00 - MAINTENANCE

Chapter 5 - Safety instruction

Description	Page
Introduction	3
Safety information and symbols	3
General instructions	4
Preventing fires	5
Overturning accidents	7
Prevention	7
In the event of overturning	7
Introductions for use	8
Cab	8
Starting and stopping	9
Driving the vehicle	10
Working the vehicle	10
Towing the vehicle	12
Replacing a wheel	12
Maintenance instructions	13
Introduction	13
Preventing injuries	14
Preventing intoxication and contamination	16
Preventing bruns and electrocution	17

MidWestTech | Case 330 Articulated Truck Service Manual | Publication 9-35471 Order the manual at mid-west-tech.com >


SECTION 10 - ENGINE

Chapter 1 - Engine overhaul

Description	Page
External view of engine	3
Engine lubrication circuit	3
Engine air intake system	6
Engine exhaust system	7
Engine fuel feed system	8
Engine cooling system	9
Thermostat adjustment and system diagram	9
Coolant circulation inside the engine	10
Specifications and data	11
Diagnostic	12
Tightening torques	22
Special tools	22
Engine removal - Refit	23
Removal	23
Refit	27
Instecting and checking	27
Radiator removal - Refit	28
Removal	28
Refit and circuit refill	31
Checking antifreese concentration	31
Water - Lubricant exchanger removal - Refit on automatic transmission	32
Removal	32
Refit	33
Engine - Periodical replacement	34
Engine oil replacement	34
Engine oil filter replacement	35
Engine - Adjustments	36
Preliminary operation	36
Valves, injectors-pump and engine brake clearance	36
Belts	41
Climate control compressor drive belt	43
Engine - Partial removals - refits	44
Preliminary operation	44
Coolant thermostat	44
Water pump	46
Fan pulley support	48
Turbocharger	49
Refit	50
Injectors	51
Fuel pump	54


MidWestTech | Case 330 Articulated Truck Service Manual | Publication 9-35471 Order the manual at mid-west-tech.com >

OIL CIRCUIT DIAGRAM

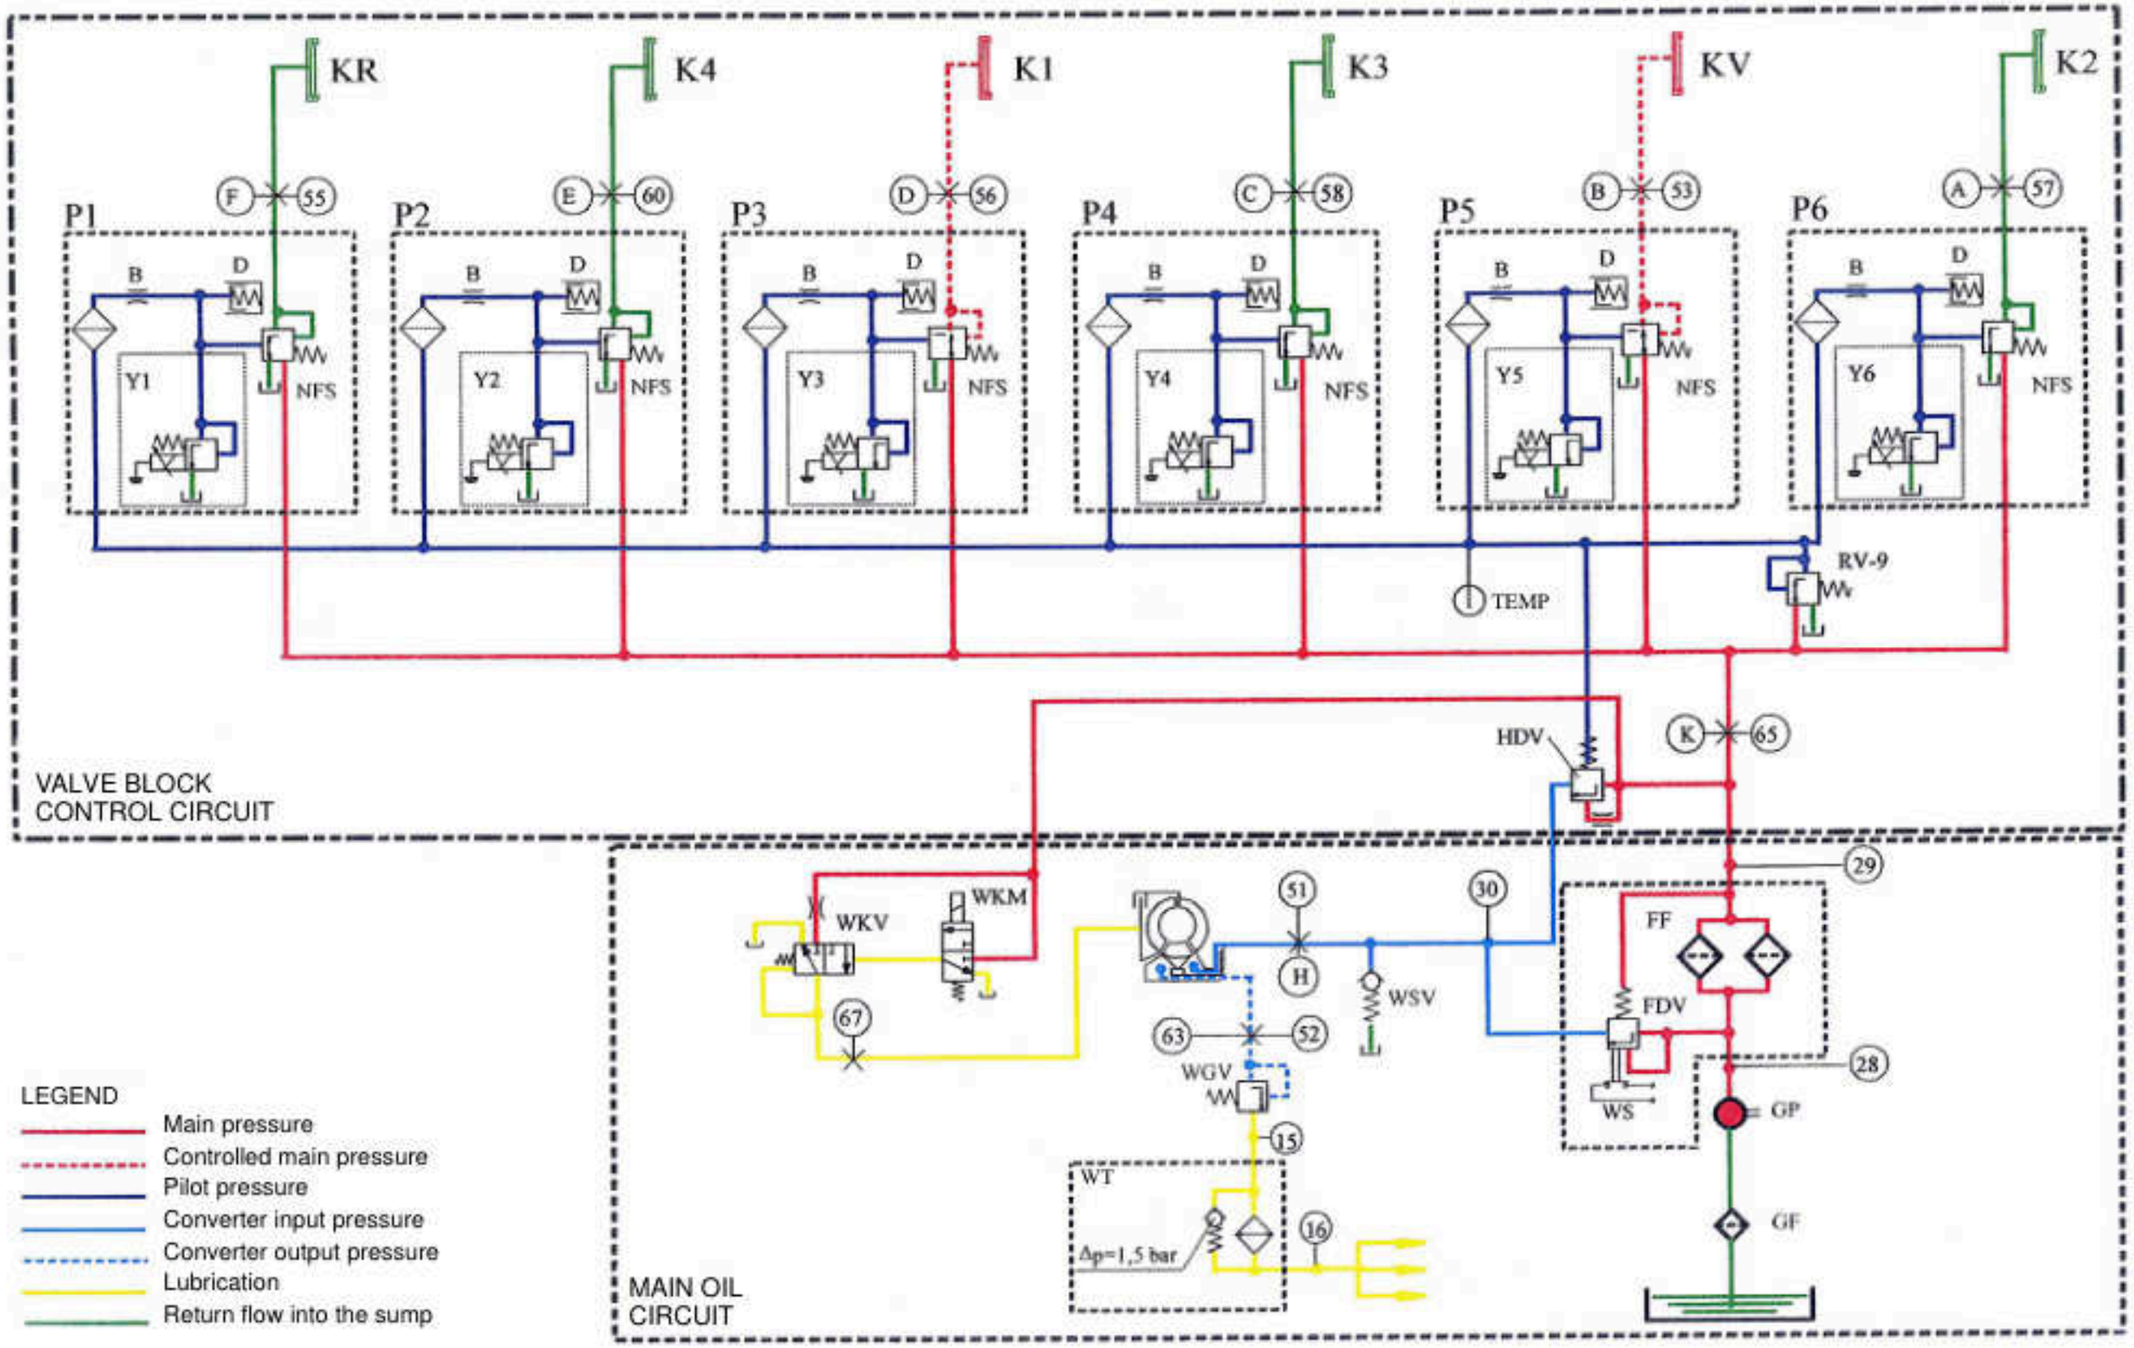

CS01J515

MidWestTech | Case 330 Articulated Truck Service Manual | Publication 9-35471 Order the manual at mid-west-tech.com >

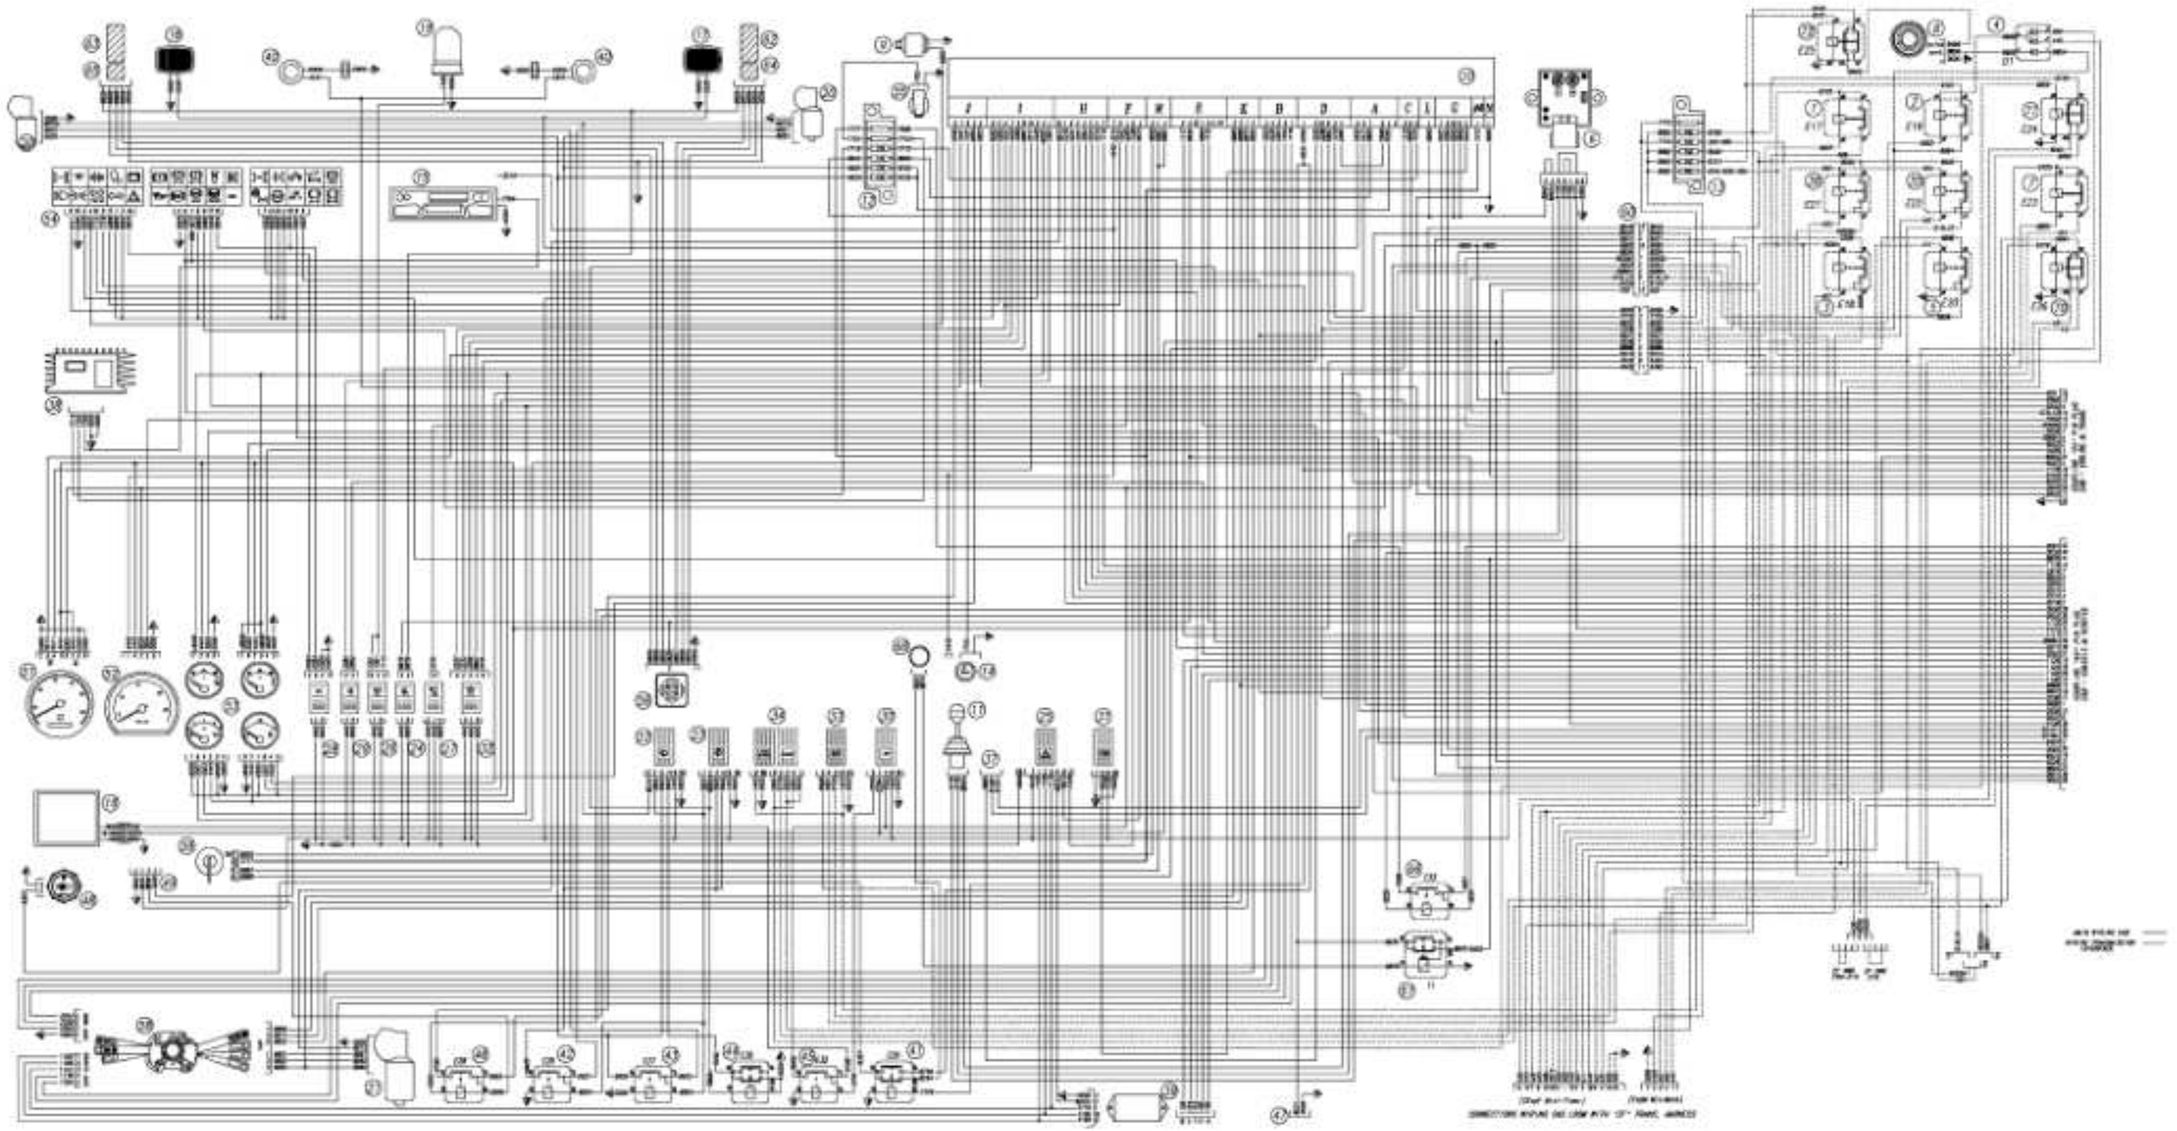

MidWestTech | Case 330 Articulated Truck Service Manual | Publication 9-35471 Order the manual at mid-west-tech.com >