CASE

REPAIR MANUAL

Crawler Excavator

CX180

9-36400

MidWestTech | Case CX180 Crawler Excavator Service Manual | Publication 9-36400

Order the manual at mid-west-tech.com >

CX180 Crawler Excavators
Table of Contents

DIVISION/SECTION		SECTION N°	REFERENCE N°
1	**GENERAL INFORMATION**		
	Safety, general information and standard torque data	1001	7-27690GB
	General specifications and special torque setting	1002	7-27714GB
2	**ENGINE**		
	Removal and installation of the engine	2000	7-28220GB
	Radiator and oil-cooler	2001	7-28040GB
	Engine specifications	*	
	Disassembly and assembly of the engine	*	
3	**FUEL SYSTEM**		
	Fuel tank	3001	7-27970GB
	Fuel engine system	*	
4	**ELECTRICAL SYSTEM**		
	Electrical system, electrical and electronic troubleshooting	4001	7-27723GB
	Inspection and maintenance of batteries and connecting a booster battery	4002	7-27921GB
	Main and engine electronic control boxes	4003	7-27932GB
5	**UNDERCARRIAGE**		
	Removal and installation of tracks	5001	7-27750GB
	Rollers	5003	7-27771GB
	Sprocket	5004	7-27781GB
	Idler wheel and tension shock absorber	5005	7-27802GB
6	**DRIVE TRAIN**		
	Drive motor and final drive transmission removal and installation	6001	7-27841GB
	Drive motor and final drive transmission disassembly and assembly	6002	7-28090GB
	Swing reduction gear, removal and installation	6003	7-29900GB
	Swing reduction gear, disassembly and assembly	6004	7-28370GB
7	**UNDERCARRIAGE HYDRAULICS**		
8	**UPPERSTRUCTURE HYDRAULICS**		
	Depressurising and decontaminating the hydraulic system, use of the vacuum pump and bleeding the components	8000	7-27952GB
	Specifications, troubleshooting, checks and hydraulic pressure settings	8001	7-27703GB
	Hydraulic reservoir removal and installation	8002	7-27990GB
	Main and pilot pumps, removal and installation	8003	7-27871GB
	Main hydraulic control valve, removal and installation	8004	7-27880GB
	Attachment cylinders, removal and installation	8005	7-27791GB
	Hydraulic swivel, removal and installation	8006	7-27811GB
	Pilot blocs, removal and installation	8007	7-28130GB
	Swing motor, removal and installation	8008	7-29890GB
	Main hydraulic pump, disassembly and assembly	8010	9-35490FR
	Main hydraulic control valve, disassembly and assembly	8011	7-28200FR
	Attachment cylinders, disassembly and assembly	8012	7-27901GB
	Hand control levers, disassembly and assembly	8013	7-28110GB
	Foot control levers, disassembly and assembly	8014	7-28300FR
	Six-solenoid valves, disassembly and assembly	8015	7-27911GB
	Caution valve, disassembly and assembly	8016	7-27942GB
	Safety vave	8017	7-29631GB
	Hydraulic swivel, disassembly and assembly	8018	7-28080GB
	Swing motor, disassembly and assembly	8019	7-28010GB
	Hydraulic functions	8020	7-28481GB

CNH

Cre 9-36400GB

Copyright © 2003 CNH France SA

Printed in France
April 2003

MidWestTech | Case CX180 Crawler Excavator Service Manual | Publication 9-36400 Order the manual at mid-west-tech.com >

DIVISION/SECTION	SECTION N°	REFERENCE N°
9 UPPERSTRUCTURE		
Upperstructure, turntable and counterweight	9002	7-27982GB
Boom, dipper and bucket	9003	7-27962GB
Seat and seat belt	9004	7-28120GB
Cab and cab equipment	9005	7-28022GB
Air conditioning troubleshooting	9006	[redacted]
Air conditioning unit disassembly and assembly	9007	[redacted]
Air conditioning servicing	9008	[redacted]
Air conditioning components	9009	[redacted]
Large format electrical schematics	Pocket	9-88430
Large format hydraulic schematics	Pocket	9-88380

* *Consult the Engine Service Manual*


[redacted] *Sections to be distributed at a later date*

NOTE: CNH Company reserves the right to make changes in the specification and design of the machine without prior notice and without incurring any obligation to modify units previously sold.

The description of the models shown in this manual has been made in accordance with the technical specifications known as of the date of design of this document.


MidWestTech | Case CX180 Crawler Excavator Service Manual | Publication 9-36400 Order the manual at mid-west-tech.com >

DIMENSIONS AND LIMIT OF WEAR AND TEAR OF THE MOBILE JOINTS OF THE ATTACHMENT

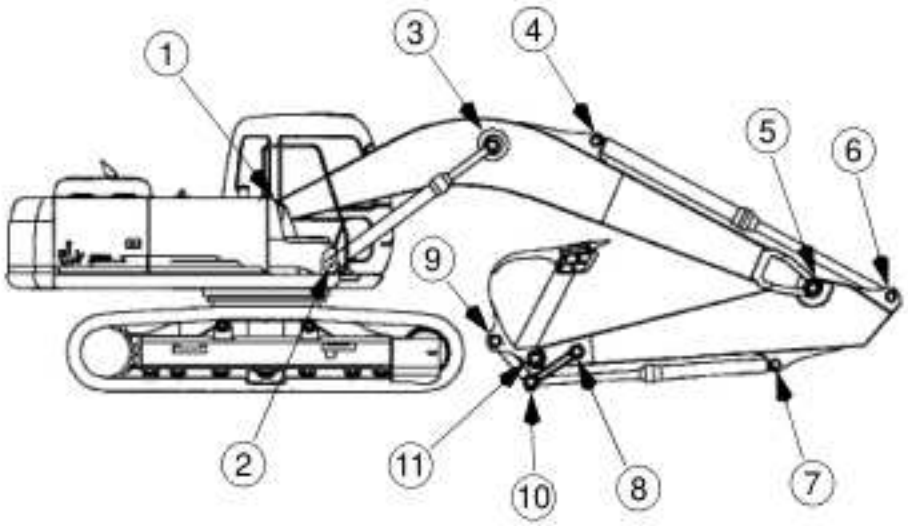

C501B521

1. Boom foot/Undercarriage

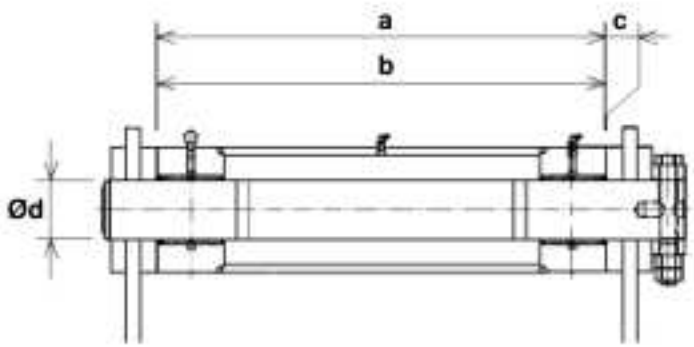

C501B522


Marking		Dimension (mm)	
		CX130	CX160 CX180
a	Standard	569	632
	Limit	579	642
b	Standard	568.5	631
	Limit	566.5	629
c (a - b)	Standard	0.5 to 3	0.5 à 3
	Limit	Shims	Shims
Ø d (pin)	Standard	75	80
	Limit	76.5	79
Ø d (ring)	Standard	75	80
	Limit	74	81.5

MidWestTech | Case CX180 Crawler Excavator Service Manual | Publication 9-36400 Order the manual at mid-west-tech.com >

Add coolant solution

Description of problem No. 2

- The message is still displayed even after adding coolant solution.

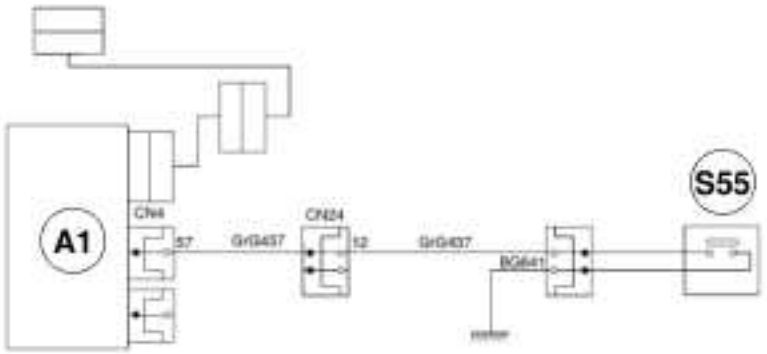

CM00F002

A1 Computer

S55 Minimum coolant solution level switch


Troubleshooting	Cause	Action
Key switch ON		
Disconnect the minimum coolant solution level switch connector (S55) to see if the message disappears. YES →	Defective minimum coolant solution level switch (S55)	Replace the minimum coolant solution level switch (S55)
NO → Disconnect connector CN24 to see if the message disappears. YES →	Short-circuit on wire GrG between the minimum coolant solution level switch (S55) and CN24	Repair wire GrG
NO → Disconnect connector CN4 to see if the message disappears. YES →	Short-circuit on wire GrG between CN24 and CN4	Repair wire GrG
NO →	Defective computer (A1)	Replace the computer (A1)

MidWestTech | Case CX180 Crawler Excavator Service Manual | Publication 9-36400 Order the manual at mid-west-tech.com >


Assembly

NOTE: *The numbers in brackets in the following steps refer to boom cylinder, dipper cylinder and bucket cylinder schematics in this section on pages 6, 8 and 10.*

STEP 1

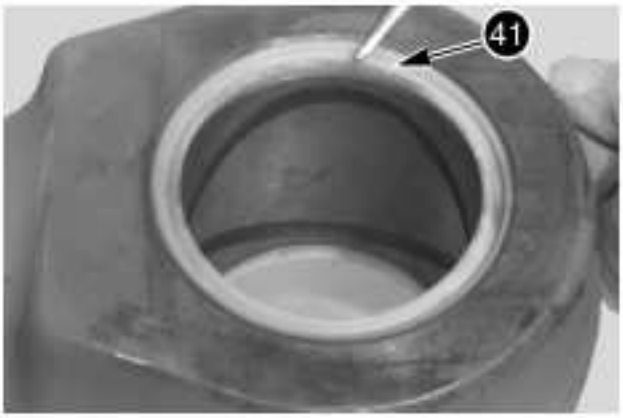

JD00655A

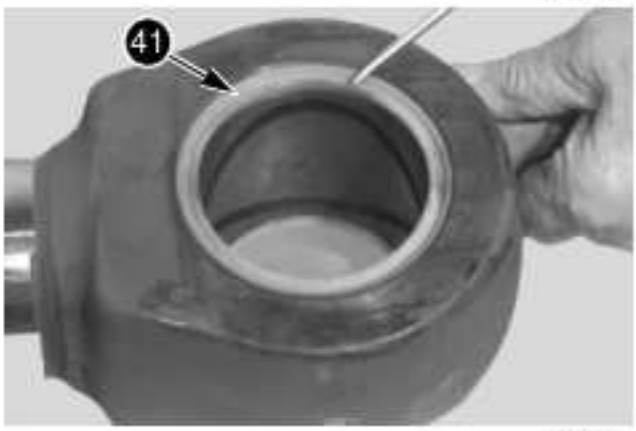

JD00654A


Using a suitable press and driver, install the two bushings (42). Install the four new wipers (41) with the lip side of the wipers facing out.

STEP 2

NOTE: *The bucket cylinder does not incorporate a seal in the cushion ring.*

Install the cushion bushing (40) on the cylinder rod (43). Install a new seal (39) in the cushion bushing.


STEP 3

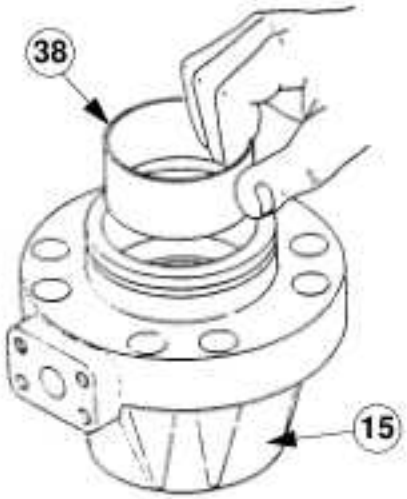

JS00659A

Using a suitable press and driver, install the bushing (38) in the bore of the bearing (15).


STEP 4

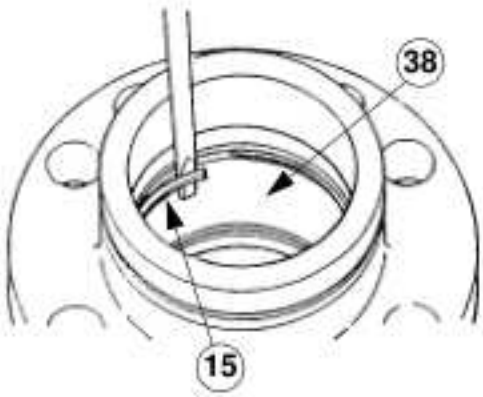

JS00653A

Install the stop ring (37) in the bearing groove (15).

MidWestTech | Case CX180 Crawler Excavator Service Manual | Publication 9-36400 Order the manual at mid-west-tech.com >

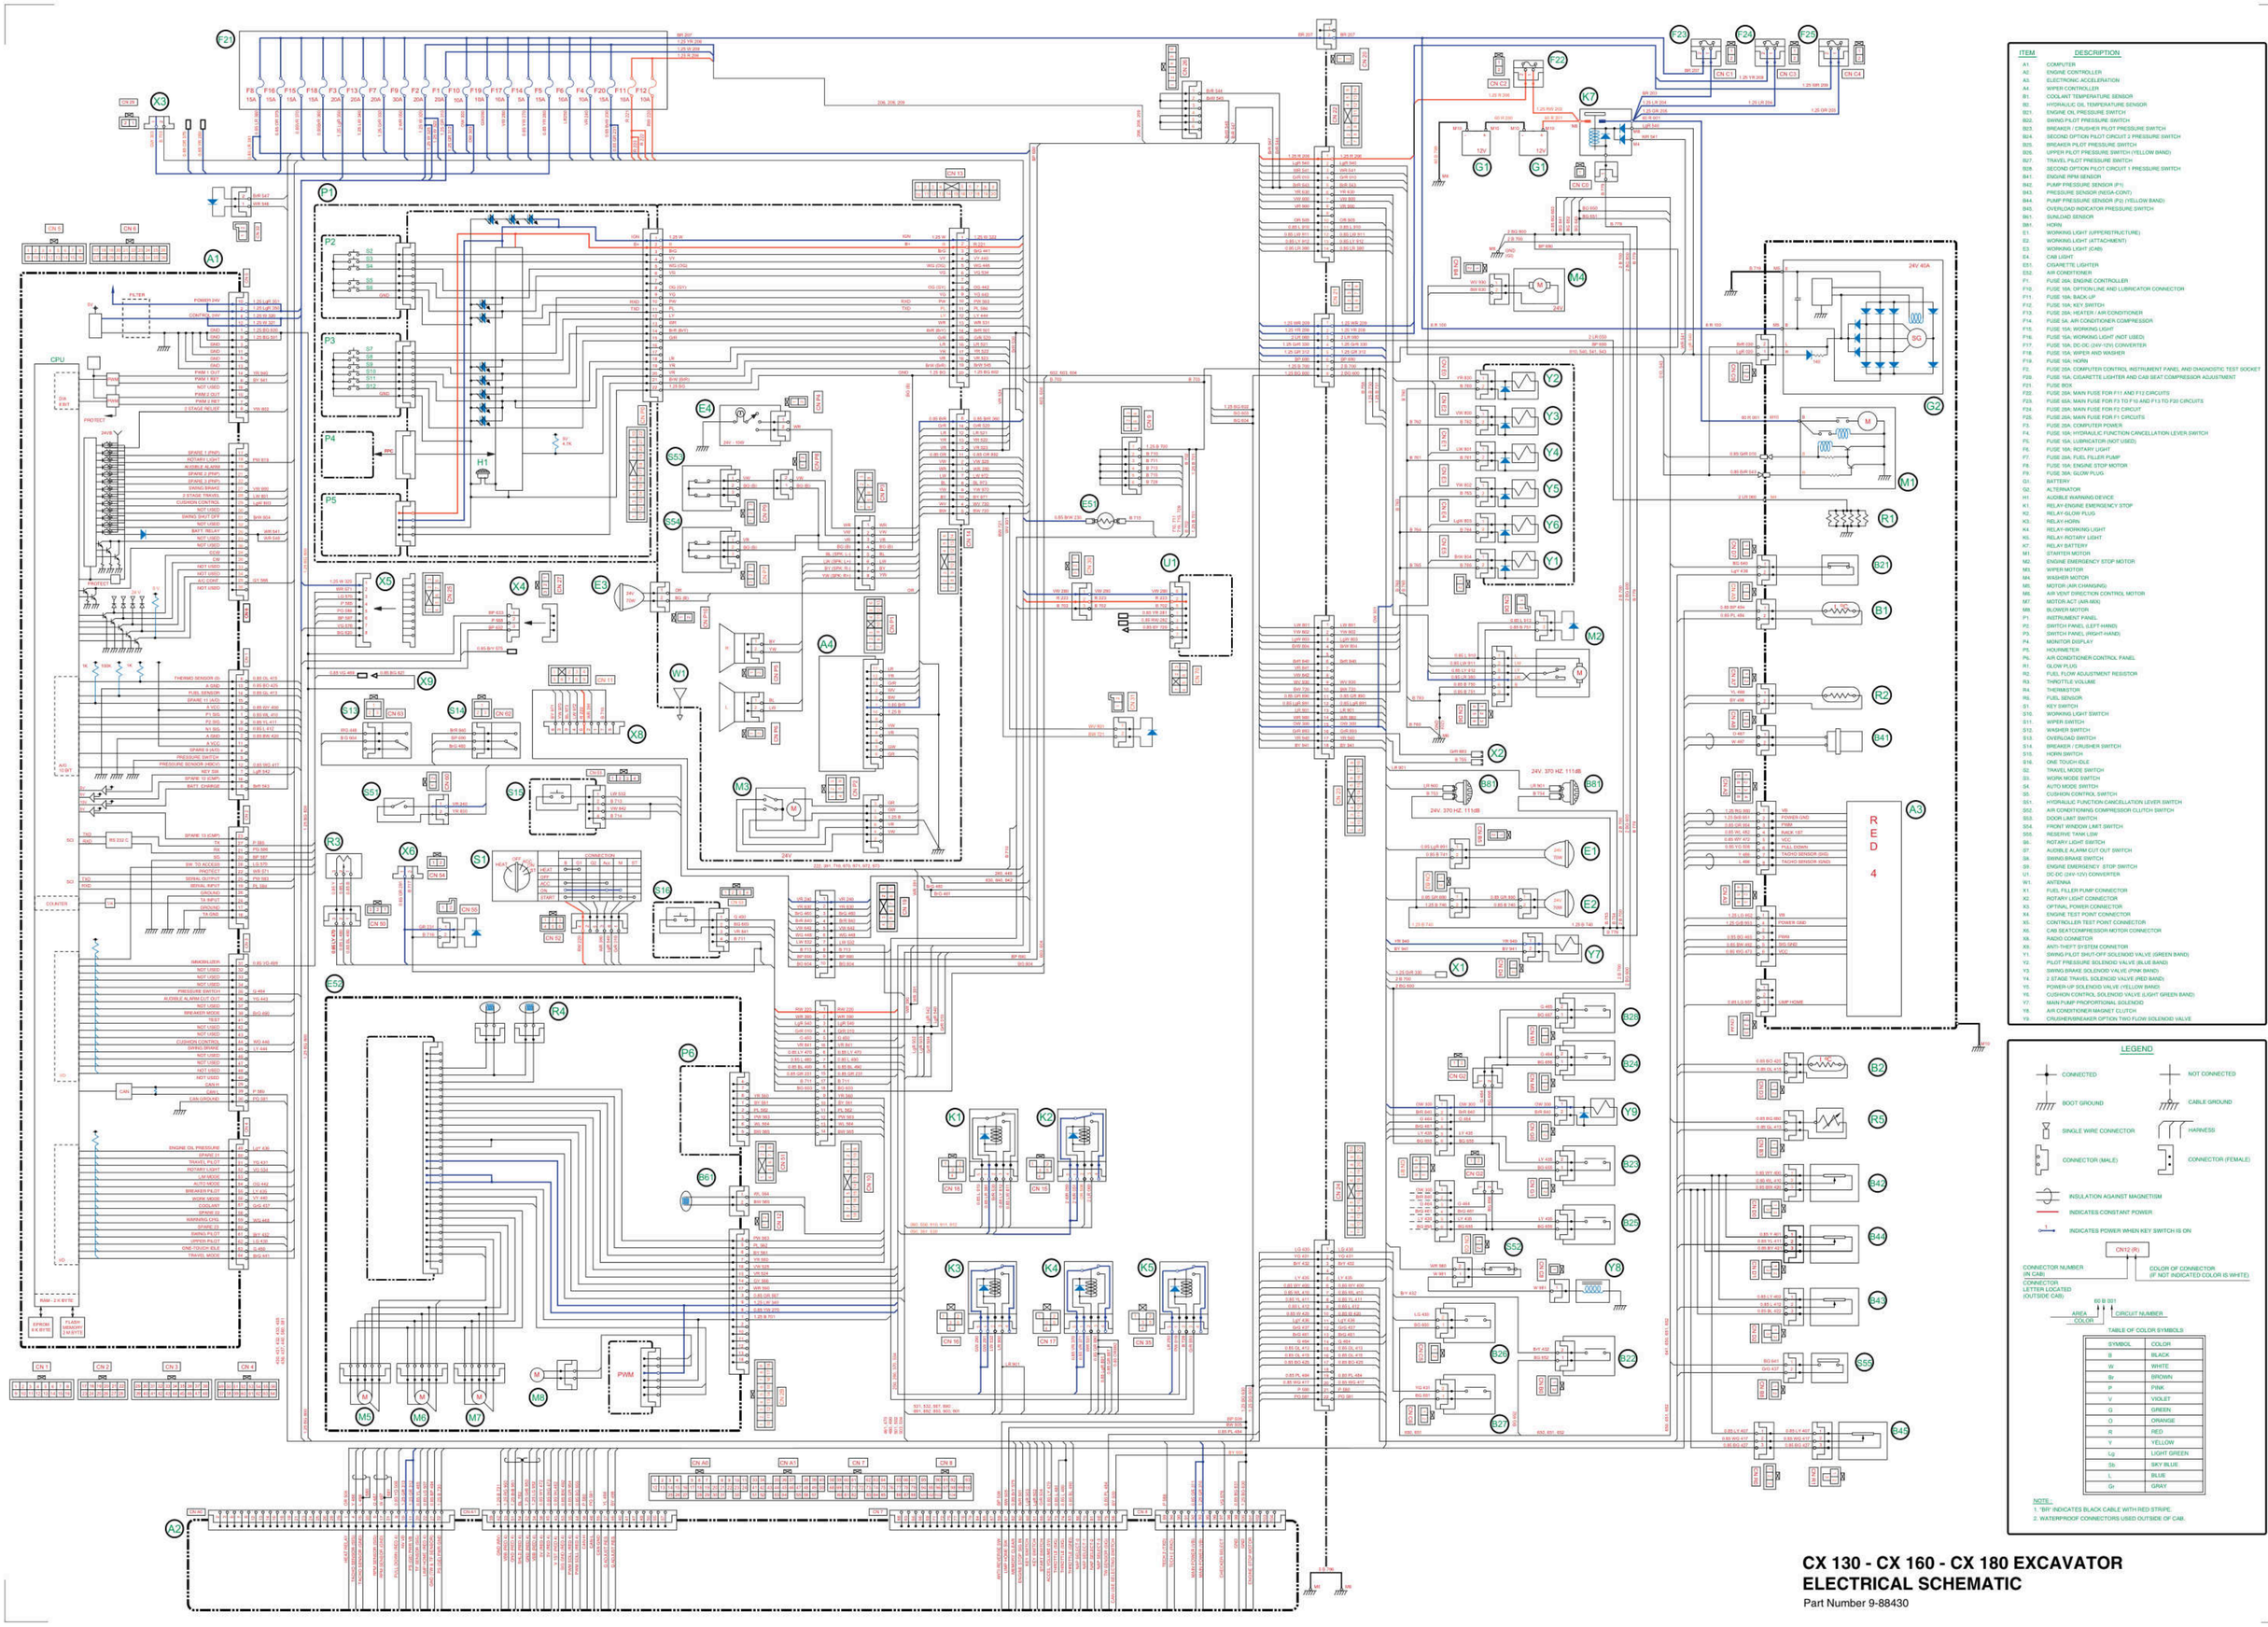

ITEM	DESCRIPTION
A1.	COMPUTER
A2.	ENGINE CONTROLLER
A3.	ELECTRONIC ACCELERATOR
A4.	WIPER CONTROLLER
B1.	COOLANT TEMPERATURE SENSOR
B2.	HYDRAULIC OIL TEMPERATURE SENSOR
B21.	ENGINE OIL PRESSURE SWITCH
B22.	SWING PILOT PRESSURE SWITCH
B23.	BREAKER / CRUSHER PILOT PRESSURE SWITCH
B24.	SECOND OPTION PILOT CIRCUIT 2 PRESSURE SWITCH
B25.	BREAKER PILOT PRESSURE SWITCH
B26.	UPPER PILOT PRESSURE SWITCH (YELLOW BAND)
B27.	TRAVEL PILOT PRESSURE SWITCH
B28.	SECOND OPTION PILOT CIRCUIT 1 PRESSURE SWITCH
B41.	ENGINE RPM SENSOR
B42.	PUMP PRESSURE SENSOR (P1)
B43.	PRESSURE SENSOR (NEGA-CONT)
B44.	PUMP PRESSURE SENSOR (P2) (YELLOW BAND)
B45.	OVERLOAD INDICATOR PRESSURE SWITCH
B61.	SUNLOAD SENSOR
B81.	HORN
E1.	WORKING LIGHT (UPPERSTRUCTURE)
E2.	WORKING LIGHT (ATTACHMENT)
E3.	WORKING LIGHT (CAB)
E4.	CAB LIGHT
E51.	CIGARETTE LIGHTER
E52.	AIR CONDITIONER
F1.	FUSE 20A: ENGINE CONTROLLER
F10.	FUSE 10A: OPTION LINE AND LUBRICATOR CONNECTOR
F11.	FUSE 10A: BACK-UP
F12.	FUSE 15A: KEY SWITCH
F13.	FUSE 20A: HEATER / AIR CONDITIONER
F14.	FUSE 5A: AIR CONDITIONER COMPRESSOR
F15.	FUSE 15A: WORKING LIGHT
F16.	FUSE 15A: WORKING LIGHT (NOT USED)
F17.	FUSE 10A: DC-DC (24V-12V) CONVERTER
F18.	FUSE 15A: WIPER AND WASHER
F19.	FUSE 10A: HORN
F2.	FUSE 20A: COMPUTER CONTROL INSTRUMENT PANEL AND DIAGNOSTIC TEST SOCKET
F20.	FUSE 10A: CIGARETTE LIGHTER AND CAB SEAT COMPRESSOR ADJUSTMENT
F21.	FUSE BOX
F22.	FUSE 20A: MAIN FUSE FOR F11 AND F12 CIRCUITS
F23.	FUSE 40A: MAIN FUSE FOR F3 TO F10 AND F13 TO F20 CIRCUITS
F24.	FUSE 20A: MAIN FUSE FOR F2 CIRCUIT
F25.	FUSE 20A: MAIN FUSE FOR F1 CIRCUITS
F3.	FUSE 20A: COMPUTER POWER
F4.	FUSE 10A: HYDRAULIC FUNCTION CANCELLATION LEVER SWITCH
F5.	FUSE 15A: LUBRICATOR (NOT USED)
F6.	FUSE 10A: ROTARY LIGHT
F7.	FUSE 20A: FUEL FILLER PUMP
F8.	FUSE 15A: ENGINE STOP MOTOR
F9.	FUSE 30A: GLOW PLUG
G1.	BATTERY
G2.	ALTERNATOR
H1.	AUDIBLE WARNING DEVICE
K1.	RELAY-ENGINE EMERGENCY STOP
K2.	RELAY-GLOW PLUG
K3.	RELAY-HORN
K4.	RELAY-WORKING LIGHT
K5.	RELAY-ROTARY LIGHT
K7.	RELAY BATTERY
M1.	STARTER MOTOR
M2.	ENGINE EMERGENCY STOP MOTOR
M3.	WIPER MOTOR
M4.	WASHER MOTOR
M5.	MOTOR (AIR CHANGING)
M6.	AIR VENT DIRECTION CONTROL MOTOR
M7.	MOTOR ACT (AIR-MIX)
M8.	BLOWER MOTOR
P1.	INSTRUMENT PANEL
P2.	SWITCH PANEL (LEFT-HAND)
P3.	SWITCH PANEL (RIGHT-HAND)
P4.	MONITOR DISPLAY
P5.	HOURMETER
P6.	AIR CONDITIONER CONTROL PANEL
R1.	GLOW PLUG
R2.	FUEL FLOW ADJUSTMENT RESISTOR
R3.	THROTTLE VOLUME
R4.	THERMISTOR
R5.	FUEL SENSOR
S1.	KEY SWITCH
S10.	WORKING LIGHT SWITCH
S11.	WIPER SWITCH
S12.	WASHER SWITCH
S13.	OVERLOAD SWITCH
S14.	BREAKER / CRUSHER SWITCH
S15.	HORN SWITCH
S16.	ONE TOUCH IDLE
S2.	TRAVEL MODE SWITCH
S3.	WORK MODE SWITCH
S4.	AUTO MODE SWITCH
S5.	CUSHION CONTROL SWITCH
S51.	HYDRAULIC FUNCTION CANCELLATION LEVER SWITCH
S52.	AIR CONDITIONING COMPRESSOR CLUTCH SWITCH
S53.	DOOR LIMIT SWITCH
S54.	FRONT WINDOW LIMIT SWITCH
S55.	RESERVE TANK LSW
S6.	ROTARY LIGHT SWITCH
S7.	AUDIBLE ALARM CUT OUT SWITCH
S8.	SWING BRAKE SWITCH
S9.	ENGINE EMERGENCY STOP SWITCH
U1.	DC-DC (24V-12V) CONVERTER
W1.	ANTENNA
X1.	FUEL FILLER PUMP CONNECTOR
X2.	ROTARY LIGHT CONNECTOR
X3.	OPTINAL POWER CONNECTOR
X4.	ENGINE TEST POINT CONNECTOR
X5.	CONTROLLER TEST POINT CONNECTOR
X6.	CAB SEATCOMPRESSOR MOTOR CONNECTOR
X8.	RADIO CONNETOR
X9.	ANTI-THEFT SYSTEM CONNECTOR
Y1.	SWING PILOT SHUT-OFF SOLENOID VALVE (GREEN BAND)
Y2.	PILOT PRESSURE SOLENOID VALVE (BLUE BAND)
Y3.	SWING BRAKE SOLENOID VALVE (PINK BAND)
Y4.	2 STAGE TRAVEL SOLENOID VALVE (RED BAND)
Y5.	POWER-UP SOLENOID VALVE (YELLOW BAND)
Y6.	CUSHION CONTROL SOLENOID VALVE (LIGHT GREEN BAND)
Y7.	MAIN PUMP PROPORTIONAL SOLENOID
Y8.	AIR CONDITIONER MAGNET CLUTCH
Y9.	CRUSHER/BREAKER OPTION TWO FLOW SOLENOID VALVE

CX 130 - CX 160 - CX 180 EXCAVATOR ELECTRICAL SCHEMATIC

Part Number 9-88430

Order the manual at mid-west-tech.com >