1070 Tractor Operator's Manual Starting with SN 8736001

9-4692

Reprinted

CASE IH AGRICULTURE


MidWestTech | Case 1070 Tractor Operator's Manual | Publication 9-4692

Order the manual at mid-west-tech.com >

OPERATOR'S CAB (Continued)
Seat Belts

If your tractor is equipped with a Case ROPS Cab or a 4 Post ROPS, it will be equipped with seat belts for maximum safety and comfort. **IMPORTANT:** Always use the seat belts. The ROPS devices are most effective during an up-set when the operator must be held to the seat within the confines of the ROPS.

After the seat has been adjusted to the satisfaction of the operator, sit erect and well back in the seat, grasp the buckle end and the flat metal "eye" end of the belt assembly and position the belt across the lap as LOW ON THE HIPS AS POSSIBLE. Insert the metal eye into the open end of the buckle until an audible snap is heard. Make sure the connection is secure and, to reduce the risk of sliding under the belt, adjust it to a snug fit by pulling on the end of the belt extending from the buckle.

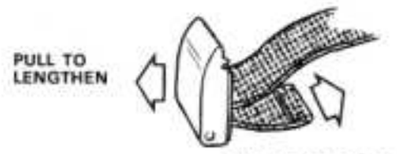



The snug and low positions are essential in order that the force exerted by the seat belt in an accident will be spread over the strong hip bone structure and not across the soft abdominal area which could result in serious injury.

To lengthen the seat belt, place the buckle at a right angle to the belt webbing. The belt will then slide easily through the buckle. To unfasten the seat belt, simply raise the rear portion of the buckle.

Rear View Mirror

A rear view Parabolic mirror is available for your Case cab through you Authorized Case Dealer. The mirror gives the operator a clear two way rear view for distance and an immediate rear view for close behind work for monitoring working implements.



OPERATOR'S CAB (Continued)
Operator's Seat

A selection of three types of operator's seats may be obtained. The three types are the Agri-King Deluxe, Figure 21, with back rest and arm rests, Agri-King (standard) Deluxe, Figure 21, without back rest and arm rests, and the Deluxe Seat, Figure 22, with back rest.



AGRI-KING SEAT
Figure 21



DELUXE SEAT
Figure 22

Seat Adjustment

FORWARD AND REARWARD ADJUSTMENT - Pull the slide adjustment lever rearward and slide seat to position desired and release to lock for all three seat types, Figure 23.

BACKREST ADJUSTMENT - The back rest adjustment for the Agri-King Deluxe and Deluxe Seats, Figure 21 and 22, turn knob counter-clockwise to loosen. Position backrest up or down to desired height and turn knob clockwise to tighten.

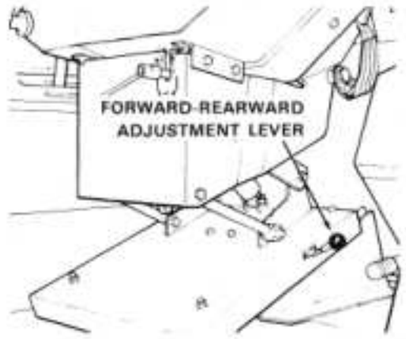


Figure 23

Seat Tension Adjustment

Turning the tension lever clockwise, decreases the seat tension for the light operator. Turning the tension lever counter-clockwise, Figure 24, increases the seat tension and prevents the seat lowering too far with a heavy operator.

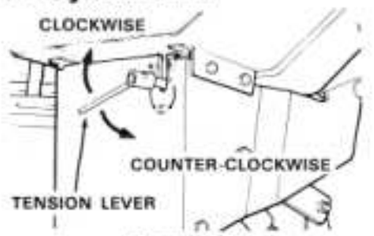


Figure 24

MidWestTech | Case 1070 Tractor Operator's Manual | Publication 9-4692
Order the manual at mid-west-tech.com >