380 Loader

Service Manual

9-67012

CASE CONSTRUCTION

MidWestTech | Case 380 Loader Service Manual | Publication 9-67012

Order the manual at mid-west-tech.com >

SECTION	SECTION NO.	FORM NO.
HYDRAULICS		
Hydraulic Diagrams and Trouble Shooting	8002	9-67011
Hydraulic Pump and Pump Drive Coupling	8005	9-67011
Loader Control Valve	8007	9-67011
Selectamatic Hydraulic System	8034	9-67011
Loader and Backhoe Cylinders	8090	9-67011
MOUNTED EQUIPMENT		
Loader	9010	9-67011
Three Point Hitch	9033	9-67011
ROPS Canopy	9061	9-67011

Service Manual Introduction

Safety Rules

This Safety Alert Symbol Indicates Important Safety Messages In This Manual. When You See This Symbol, Carefully Read The Message That Follows and Be Alert To the Possibility Of Personal Injury Or Death. 1-1

WARNING: *Before starting engine, study operator's manual safety messages. Read all safety signs on machine. Clear the area of other persons. Learn and practice safe use of controls before operating.*

It is your responsibility to understand and follow manufacturer's instructions on machine operation, service, and to observe pertinent laws and regulations. Operator's and service manuals may be obtained from your J I Case dealer. 45-2

WARNING: *Read operator's manual to familiarize yourself with control lever functions.* 46-27

WARNING: *Operate controls from the operator's seat only.* 35-7

WARNING: *This is a one man machine, no riders allowed.* 35-8

WARNING: *When working in the area of the fan belt with the engine running, avoid loose clothing if possible, and use extreme caution.* 35-4

WARNING: *When performing checks and tests on the equipment hydraulic system or steering system, DO NOT deviate from the written procedure.* 40-13

WARNING: *After installing tire on rim (wheel), place wheel in a safety cage before inflating tires. If proper equipment is not available, have a tire repair shop do the work.* 40-5

WARNING: *Locate the machine on level ground and block the wheels securely before working under the machine. Failure to follow the above procedure can result in personal injury.* 46-77

WARNING: *Never pass your hand under the three point hitch lift rod and ramshaft arm to release the lift latch. Serious injury will occur if the links fall.* 47-1

CAUTION: *When removing hardened pins such as a pivot pin, or a hardened shaft, use a soft head (brass or bronze) hammer or use a driver made from brass or bronze and a steel head hammer.* 46-17

MidWestTech | Case 380 Loader Service Manual | Publication 9-67012 Order the manual at mid-west-tech.com >

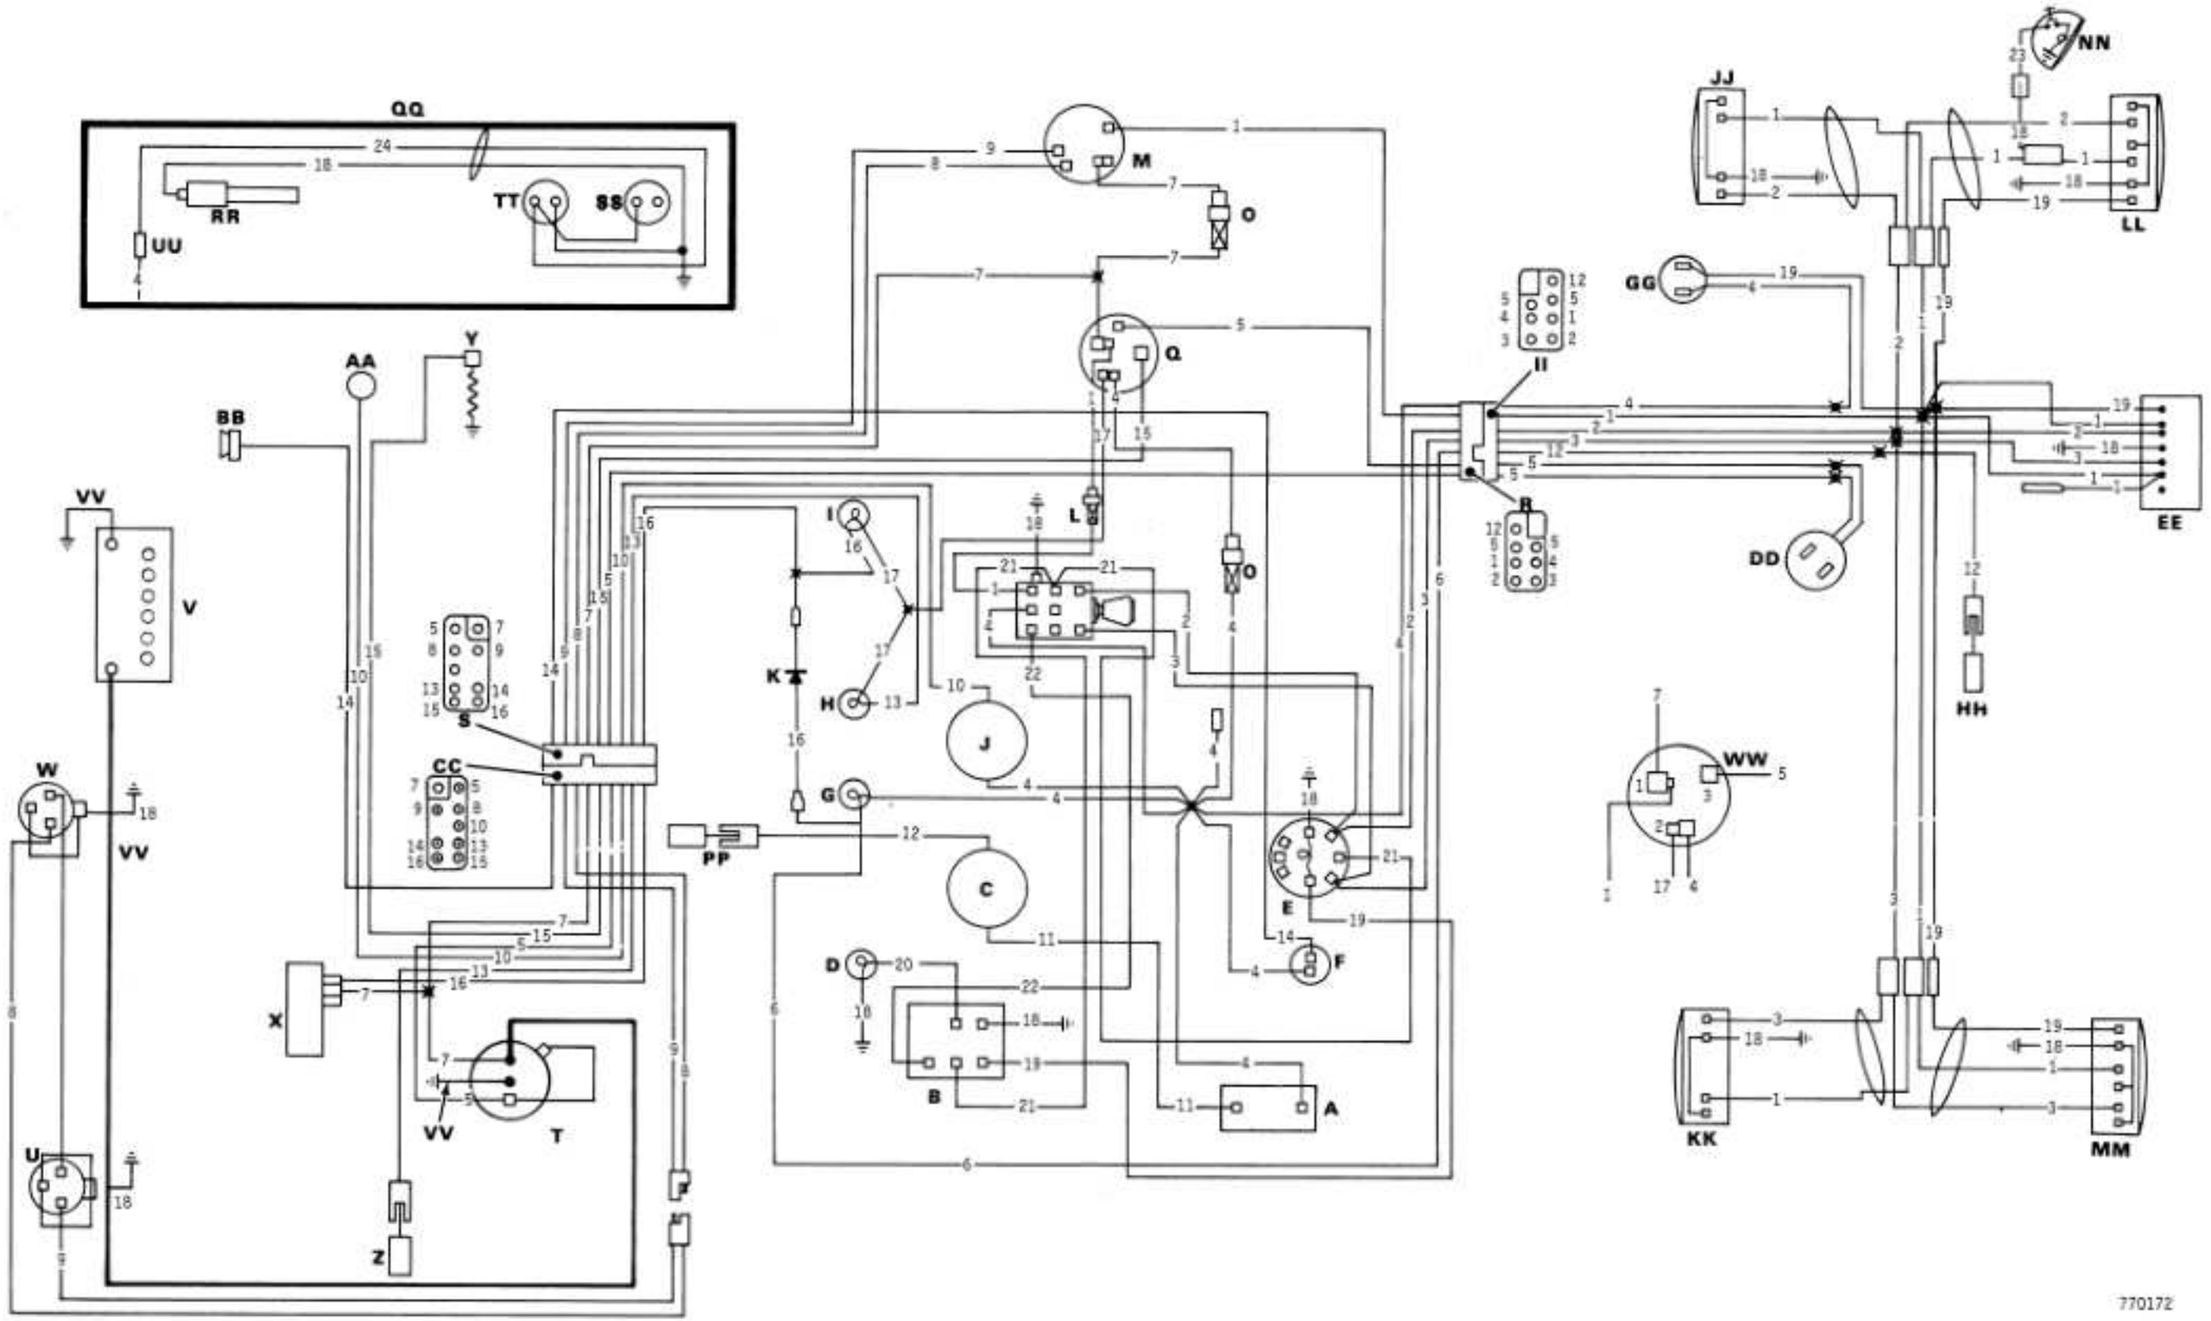


Figure 1

MidWestTech | Case 380 Loader Service Manual | Publication 9-67012

Order the manual at mid-west-tech.com >