4490 Tractor

Operators Manual

9-6795

Reprinted

CASE IH AGRICULTURE

MidWestTech | Case 4490 Tractor Operator's Manual | Publication 9-6795

Order the manual at mid-west-tech.com >

TABLE OF CONTENTS

TO THE OWNER III

SAFETY ..... IV-XVI
- Safety Rules IV
- Before Starting ..... IV-V
- Operation ..... VI-XIII
- Service ..... XIV-XVI

HAND SIGNALS ..... XVII-XVIII

DECALS ..... XIX-XXIII

SERIAL NUMBERS 1

DIESEL ENGINE SPECIFICATIONS ... 2,3

GENERAL SPECIFICATIONS 4-7

APPROXIMATE TRACTOR SPEEDS .. 8,9

APPROXIMATE OVER ALL MEASUREMENTS 10

APPROXIMATE TRANSPORT WEIGHT . 10

OPERATOR'S CAB 10

TIRE AND WHEEL EQUIPMENT 11

WHEEL TREAD POSITIONS 12-16

TIRE PRESSURE 16

DUAL WHEELS 17

FUEL SPECIFICATIONS 18,19

LUBRICATION 20-33
- Engine Hourmeter 20
- Diesel Engine 21
- Lubrication Chart 22,23
- Engine Oil Change 24,25
- Engine Oil Filters 25
- Rear Steering Valve Filter 26,27
- Rear Steering Hydraulic Oil Filter 28
- Transmission Oil Level Check & Change 29
- Hydraulic Oil Filters 29,30
- Planetary Oil Level Check & Change . 31
- Differential Oil Level Check & Change . 32
- Tractor Brakes 33

ALTERNATOR CHARGING SYSTEM .. 34

OPERATING INSTRUCTIONS 34-127
- Run-In Procedure 34,35
- Before Starting the Engine 36
- Towing 37
- Operating Instruments 38-43
- Operating Controls 44-61
- Steering Console 44-51
- Steering Column Tilt 52
- Moving the Telescopic Steering Column 52
- Operator's Console 53-63
- Hand Brake Control 64
- Heater Stop Valve 65
- Fuel Tank Water Traps 65
- Cab Headliner Controls 66,67
- Cab Air Flow Control 68
- Cab Defroster Control 68
- Cab Air Flow Arrangements 69-71
- Air Conditioner Operation 72
- Cab Door Lock 72
- Ash Tray 72
- Rear View Mirrors 73
- Cab Window Lever 73
- Operator's Seat 74-76
- Seat Belts 77
- Amber Warning Lamps, Direction Turn Signals & SMV 78,79
- Implement Warning Lamps & SMV Symbol 80
- Auxiliary Outlet Socket 81

Starting Procedure 82-84
Stopping The Engine 84,85
Cold Temperature Operation 85

Preparing Tractor For Operating in Cold Temperatures 86
Cold Temperature Starting 87-90
- Coolant Heater 87
- Operating Cold Start Assist 88,89
- Starting Fluid Container Replacement 90

Power Shift Transmission 91,92
Power Takeoff 93-95
- Operating PTO 93
- Guards 94
- PTO Operating Safety 95

Drawbar 96
Three Point Hitch System 97
Hitch System Adjustments 98-100

MidWestTech | Case 4490 Tractor Operator's Manual | Publication 9-6795 Order the manual at mid-west-tech.com >

TABLE OF CONTENTS

OPERATING INSTRUCTIONS
- Hitch Operation 101-105
  - Hitch Control Lever 101
  - Electronic Hitch System 102,103
  - Controlling Maximum Depth 104
  - Stationary Depth Operation 104
  - Hydraulic Float Control 105
  - Anti-Sway Chain 105

- Hitch Coupler - Category III 106
- Remote Hydraulic Control 107-113
  - Remote Control Levers 107,108
  - Variable Flow Control 109,110
  - Operating the Remote System 111
  - Hydraulic Hose Couplers 112
  - Hydraulic Hose Coupling 113
- Remote Cylinder 114
- Hydraulic Cylinder Jack Pads 115
- Wheel Rim Adjustment & Mounting . 116
- Wheel Spacing and Clamp Adjustment 117
- Power Adjustable Wheel Mounting 118,119
- Dual Wheel Mounting 120
- Tire Mounting 121
- Loads Matched to Tractor 121
- Tractor Ballast 122-126
  - Measuring Slip 122
  - Tractor and Equipment Weight ... 123
  - Front End Weights 124
  - Wheel Weights 125
  - Tire Liquid Weight 126
- Hood and Side Panels 127

PREVENTIVE MAINTENANCE ... 128-181
- Cooling System 129-137
  - Pressure Cooling System 129
  - Coolant Solutions 130
  - Radiator Cleaning 130
  - Cooling System Service 131
  - Thermostat Check 132
  - Thermostat Replacement 132-134
  - Fan Belt Adjustment 135
  - Fan Belt Replacement 136
  - Water Filter and Conditioner 137

- Fuel System 138-143
  - Service Intervals 138
  - Fuel Filter Replacement 139,140
  - Primary Fuel Filter 141,142
  - Air Removal 142,143

- Air Induction System 144-153
  - Air Filter Service Interval 145
  - Final Air Filter Service 146-149
  - Aspirated Strata Tube Service . 150-152
  - Tubes and Hoses 153

- Neutral Start Switch Adjustment . 154,155

- Parking Brake Adjustment 156

- Electrical System 157-161
  - Head Lamps 157
  - Flood Lamps 157
  - Flashing Amber Warning Lamps .. 158
  - Rear Flood and Tail Lamp 158
  - Instrument Cluster Lamps 159
  - Fuse Panel 160
  - Head Lamp Adjustment 161


- Storage Battery 162-164
  - When Batteries Are Not in Use ... 162
  - Battery Cables and Terminals 162
  - Battery Water 163
  - Vent Caps 163
  - Removal & Installation of Batteries . 163
  - Auxiliary Battery Connections 164

- Roll Over Protective Structure (ROPS) 165,166
  - Tractor Roll Over 166
  - Safety Rules 166
  - Maintenance and Inspection 166

- Operator's Cab 167-181
  - Preventive Maintenance 167,168
  - Air Filter Removal 169
  - Air Filter Service 170,171
  - Seat Belt Inspection and Maintenance 171
  - Operator's Seat 172,173
  - Compressor Belt Adjustment 174
  - Compressor Belt Replacement ... 175
  - Compressor Belt Alignment 176
  - Refrigerant Check 177,178
  - Dome Lamp 179,180
  - Console Lamp 181

CASE TECHNICAL MANUALS 183

MidWestTech | Case 4490 Tractor Operator's Manual | Publication 9-6795 Order the manual at mid-west-tech.com >

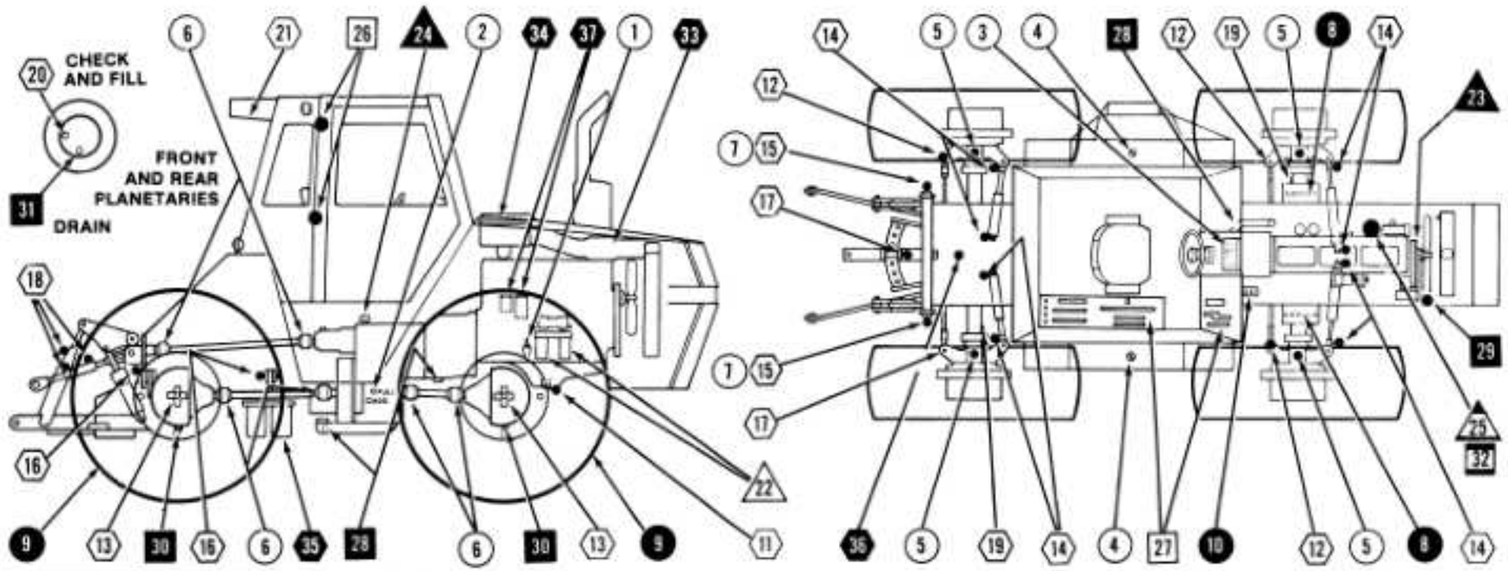

LUBRICATION POINTS	APPROXIMATE CAPACITIES			AMBIENT AIR TEMPERATURE RANGES		
	U.S. MEASURE	METRIC MEASURE	IMPERIAL MEASURE	32°F (0°C) and Above	10°F (-12°C) to 50°F (10°C)	Use Only Below 40°F (4°C)
Engine Crankcase No Filter	24 Qts.	23 Litres	20 Qts.	SAE30	SAE 20W	SAE 10W
Engine Crankcase With Filter	28 Qts.	27 Litres	23 Qts.	CASE HDM		
Transmission Hydraulic System Refill (No PTO and Hitch)	30 Qts.	28.4 Litres	25 Qts.	USE CASE TFD FLUID, U.S. B17445 (5 Gal.) OR B17445 (55 Gal.) CANADA B17440 (5 Gal.) OR B17441 (55 Gal.).		
Transmission Hydraulic System Refill (With PTO and Hitch)	32 Qts.	30.3 Litres	27 Qts.			
Fuel Tanks (Each Tank)	64 Gals.	242.3 Litres	54 Gals.	Use A Good Grade Number 2 Diesel Fuel		
Cooling System	44 Qts.	41.6 Litres	33.3 Qts.	Use a Good "High Boiling Point" Type Ethylene Glycol At All Times of the Year.		
Differential Housing (Each - Front & Rear)	19 Qts.	18 Litres	15.8 Qts.	AMBIENT AIR TEMPERATURE RANGES		
Planetary Housings (Each - Front & Rear)	11 Qts.	10.4 Litres	9.2 Qts.	Above 90°F (32.2°C)	90°F (32.2°C) to 0°F (-17.8°C)	Below 0°F (-17.8°C)
				SAE 140 EP	SAE 90EP	SAE 80EP
Hydraulic Brake Cylinder	1/2 Inch (12.7 mm) Below Opening			IMPORTANT: Use Only Case TFD Fluid.		
All Pressure Fittings	As Many Strokes As Needed Use a good No. 1 or No. 2 EP grease with Lithium or Moly Base.			AMBIENT AIR TEMPERATURE RANGES		
				32°F (0°C) and Above	Below 32°F (0°C)	
				Use a Good No. 2 EP Gun Grease	Use a Good No. 1 EP Gun Grease	

MidWestTech | Case 4490 Tractor Operator's Manual | Publication 9-6795
Order the manual at mid-west-tech.com >