W26B
Loader

Service Manual


9-71017

CASE CONSTRUCTION


MidWestTech | Case W26B Loader Service Manual | Publication 9-71017

Order the manual at mid-west-tech.com >


1 - Converter pump cover
2 - Flex drive disk
3 - Converter turbine
4 - Converter stator
5 - Converter pump
6 - Converter pump cover
7 - Converter shaft
8 - Freewheel roller race
9 - Input drive teeth
10 - Converter turbine
11 - Converter stator
12 - Converter pump
13 - Oil cooler
14 - Reverse clutch
15 - Reverse planetary
16 - Forward clutch
17 - Forward planetary
18 - Intermediate-range clutch
19 - High-range clutch
20 - High-range planetary
21 - Low-range clutch
22 - Low-range planetary
23 - Transmission main shaft
24 - Output transfer gear housing
25 - Output transfer drive gear
26 - Speedometer drive
27 - Output transfer idler gear
28 - Idler gear spindle
29 - Output transfer-driven gear
30 - Parking brake
31 - Transmission main shaft
32 - Output transfer gear housing
33 - Output transfer drive gear
34 - Output transfer idler gear
35 - Idler gear spindle
36 - Output transfer driven gear
37 - Parking brake
38 - Rear output flange
39 - One-piece output shaft
40 - Front output flange
41 - Rear output shaft
42 - Disconnect coupling
43 - Front output shaft
44 - Front output flange
45 - Disconnect shaft
46 - Oil pump drive idler gear
47 - Accessory drive spline
48 - Oil pump
49 - Converter pump
50 - Converter stator
51 - Converter turbine
52 - Input drive flange
53 - Converter pump cover
54 - Transmission front cover
55 - Oil pump
56 - Adapter

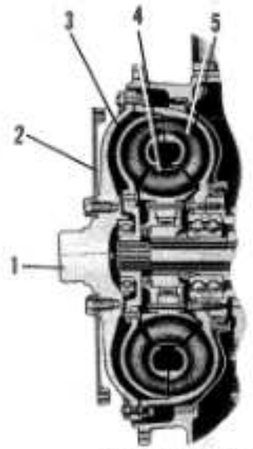


ENGINE MOUNTED
(FLEX DISK DRIVE)

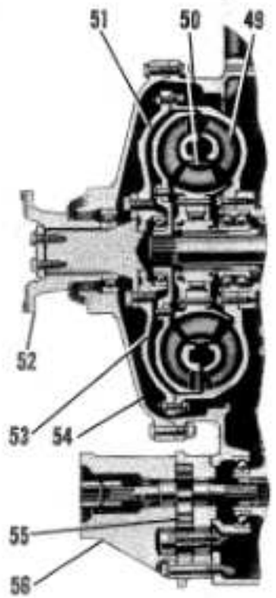

REMOTE MOUNTED
(FLANGE DRIVE)

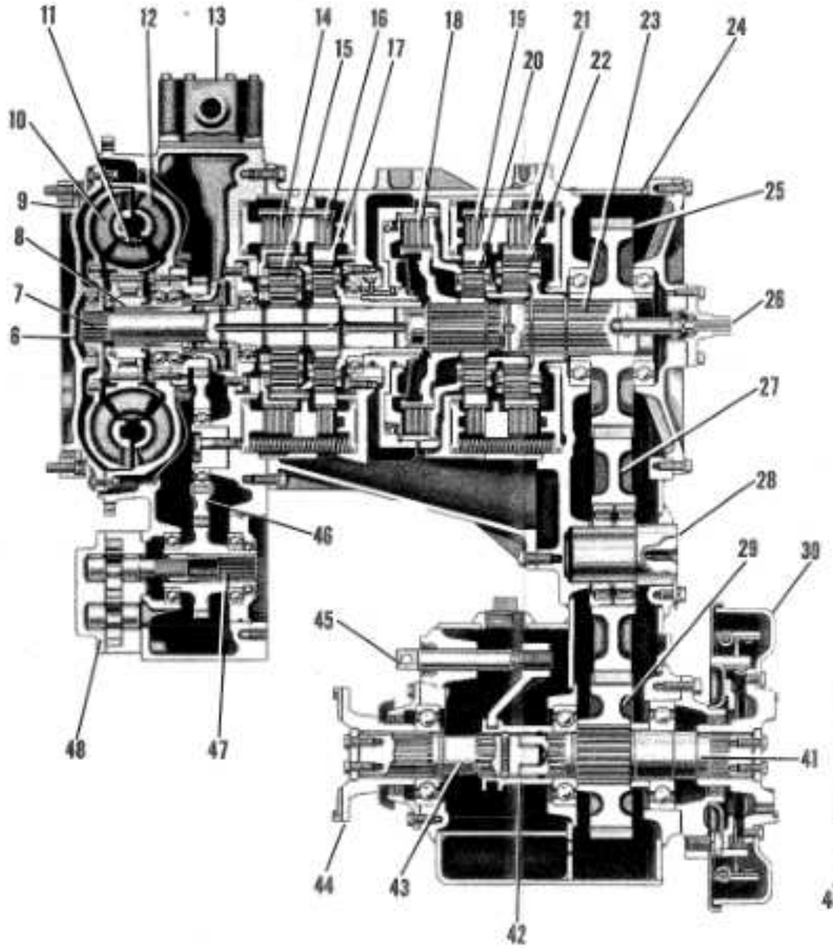

TRANSMISSION ENGINE MOUNTED
(GEAR DRIVE AND FRONT OUTPUT DISCONNECT)

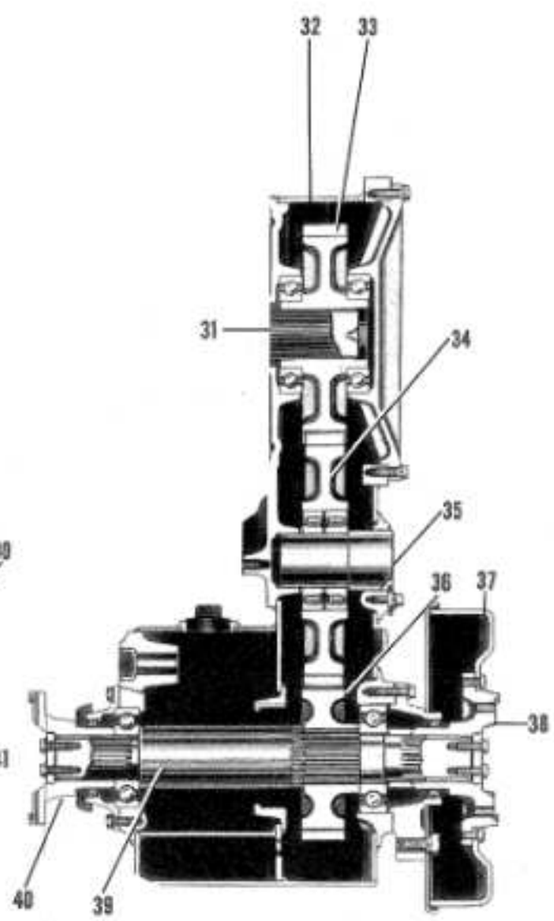

TRANSFER GEAR SECTION
(WITHOUT DISCONNECT)

Foldout 1. CRT 3531-1 transmission—cross-section view

© 1979 General Motors Corp.

Order the manual at mid-west-tech.com >