W24B
Loader


Service Manual

9-72398

MidWestTech | Case W24B Loader Service Manual | Publication 9-72398

Order the manual at mid-west-tech.com >

1 - Flex disk drive
2 - Torque converter cover
3 - Torque converter housing
4 - Second turbine
5 - First turbine
6 - Diaphragm
7 - Accessory driven gear
8 - Oil suction tube
9 - Transmission housing
10 - Oil pump drive gear
11 - Adapter coupling
12 - Accessory mounting pad
13 - First-turbine drive gear
14 - Second-turbine drive gear
15 - Reverse planetary carrier
16 - Adapter
17 - Forward clutch piston
18 - Low-range clutch drum
19 - Low-range clutch
20 - High-range clutch anchor
21 - High-range clutch
22 - High-range clutch piston
23 - Output shaft
24 - Parking brake
25 - Output flange
26 - Rear housing
27 - High-range sun gear
28 - High-range ring gear
29 - High-range planetary carrier
30 - Low-range clutch hub
31 - Low-range clutch piston
32 - Forward planetary carrier
33 - Forward-and-reverse sun gear
34 - Forward clutch
35 - Forward ring gear
36 - Forward-and-reverse clutch anchor
37 - Reverse clutch
38 - Reverse clutch hub
39 - Reverse clutch piston
40 - First-turbine driven gear
41 - Second-turbine driven gear
42 - Freewheel clutch
43 - Accessory drive gear
44 - Torque converter pump
45 - Torque converter stator

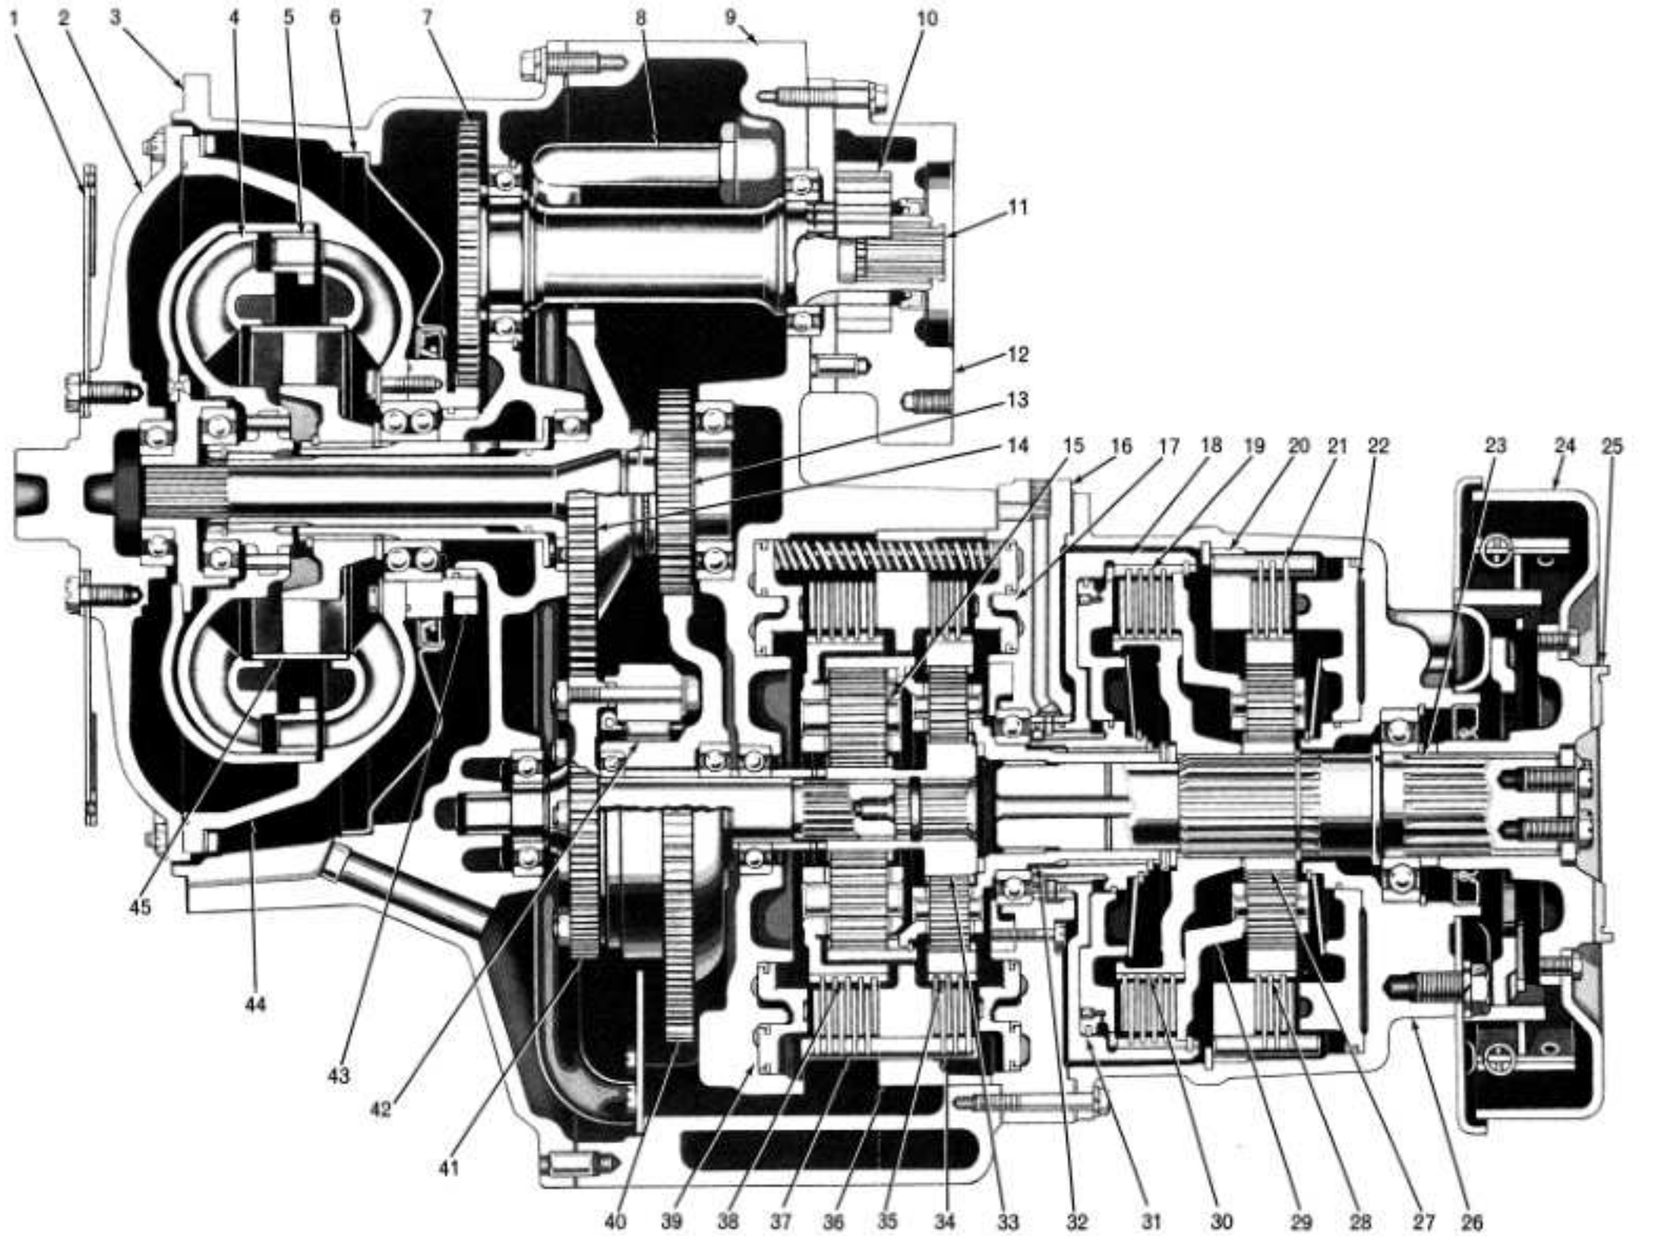

Copyright 1984 General Motors Corp.

Order the manual at mid-west-tech.com >