300SK
400SK
Log Skidders

Service Manual

9-73832

CASE CONSTRUCTION

Order the manual at mid-west-tech.com >

CONTENTS OF SECTIONS

Section or Subsection Title	Section No.
Specifications and Engine Maintenance, 300	I
Specifications and Engine Maintenance, 400	I
Hydraulic System	II
Electrical System	III
Brake System	IV
Torque Converter, 300	V
14-Inch Traction Clutch, 300	V
Transmission, 300	V
Transfer Case, 300	V
Drive Shafts and Universal Joints, 300 and 400	V
Transmission Removal, Filter, Controls, 400	V
Transmission, 400	Allison Service Manual TT 2229 and Supplement SA 1225.
Planetary Axles and Differentials	VI
Frames	VII
Winch, Gearmatic Model 19	VIII

INDEX

	Section	Page	Subsection
A			
Adjustment, belt tension	I	10	300 Spec.
	I	10	400 Spec.
	III	26	
Adjustment, brake relief valve	IV	13	
Adjustment, clutch free travel	V	10	Clutch
Adjustment, clutch levers	V	5	Clutch
Adjustment, differential bearings	VI	20	
Adjustment, differential pinion	VI	15	
Adjustment, differential pinion-ring gear backlash	VI	21	
Adjustment, engine shutoff, 300	I	13	300 Spec.
	III	36	
Adjustment, engine shutoff, 400	I	14	400 Spec.
	III	40	
Adjustment, field relay	III	31	
Adjustment, oscillation tube, 300	VII	10	
Adjustment, oscillation tube, 400	VII	14	
Adjustment, parking brake, 300	IV	16	
Adjustment, parking brake, 400	IV	16	
Adjustment, remote relief valve	II	32	
Adjustment, transfer case bearings	V	15	T. Case
Adjustment, voltage regulator	III	17,29	
Adjustment, wheel bearing	VI	33	
Adjustment, winch brake	VIII	15	
Adjustment, winch clutch bearing	VIII	19	
Adjustment, winch drum shaft bearing	VIII	12	
Adjustment, winch pinion bearing	VIII	21	
Adjustment, winch ring gear and pinion	VIII	23	
Air cleaner, 300	I	9	300 Spec.
Air cleaner, 400	I	9	400 Spec.
Alternator output check	III	24-25	
Alternator, trouble shooting	III	11-17	
Axle installation	VI	34	
Axles	See Planetary Axles		
B			
Batteries	III	18-23	
Batteries, trouble shooting	III	11-17	
Belt tension adjustment	III	26	
Bleeding brakes	IV	15	
Bleeding, hydraulics	II	6	
Bleeding, winch hydraulics	VIII	6	
Brake head	IV	10-12	
Brake lock	IV	8-9	
Brake system, 400	Also see Allison service manual supplied with this manual		
Brake system diagram, 300	IV	3	
Brake system, exp. view, 300	IV	4	
Brake system, exp. view, 400	IV	5	
C			
Cable, winch	VIII	6	
Canopy and exhaust, 300	VII	16-17	
Canopy and exhaust, 400	VII	18-19	
Capacities, fluid, 300	I	4	300 Spec.
Capacities, fluid, 400	I	5	400 Spec.
Charging circuit, trouble shooting	III	16	
Clutch, description	V	3	Clutch
Clutch, exp. view	V	4	Clutch
Clutch lever setting	V	5	Clutch
Clutch linkage	V	10	Clutch
Clutch release	See Transmission, 300		
Clutch, servicing	V	3-11	Clutch
Clutch, specifications	V	3	Clutch
Controls, transmission, 400	V	4	400 Trans.
Control valve	See Flow Control Valve		
Control valve, dozer	II	49	
Cooling system, 300	I	10	300 Spec.
Cooling system, 400	I	10	400 Spec.
Cooling system, flushing	I	10	300 Spec.
Coupling, pump-to-engine	II	22,26	
Cylinders	II	35-39	
Cylinders, trouble shooting	II	10	
D			
Differential, exp. view	VI	6	
Differential, servicing	VI	6-24	
Differential, trouble shooting	VI	4	
Dozer control valve	See Control Valve, dozer		
Dozer hydraulics, 300 exp. view	II	10	
Dozer hydraulics, 400 exp. view	II	21	
Drive line, 300, rear	V	4-5	D. Shafts
	VII	6-7	
Drive line, 400, rear	V	4-5	D. Shafts
	VII	11-12	
Drive shafts, servicing	V	4-7	D. Shafts
Drive shafts, trouble shooting	V	3	D. Shafts
Dry clutch	See Clutch		
E			
Electrical system, exp. view, 300	III	6	
Electrical system, exp. view, 400	III	10	
Electrical trouble shooting	III	11-17	
Engine installation, 300	I	9	300 Spec.
Engine installation, 400	I	7	400 Spec.
Engine removal, 300	I	8	300 Spec.
Engine removal, 400	I	7	400 Spec.
Engine shutoff controls, 300	I	13,15	300 Spec.
	III	35	

MidWestTech | Case 300SK, 400SK Log Skidders Service Manual | Publication 9-73832 Order the manual at mid-west-tech.com >

	Section	Page	Subsection
Engine shutoff controls, 400	I	12,14	400 Spec.
	III	40,42	
Exhaust system	See Canopy and Exhaust		
Exploded view, brake head	IV	10	
Exploded view, brake lock	IV	7	
Exploded view, brake system	IV	4-5	
Exploded view, canopy and exhaust	VII	16,19	
Exploded view, clutch	V	4	Clutch
Exploded view, clutch linkage, 300	V	11	Clutch
Exploded view, control valve	II	46	
Exploded view, cooling system, 400	I	31	400 Spec.
Exploded view, cylinder	II	37	
Exploded view, differential	VI	6	
Exploded view, electrical, 300	III	8	
Exploded view, electrical, 400	III	10	
Exploded view, filter, return	II	43	
Exploded view, flow control valve	II	47	
Exploded view, fuel system, 300	I	14	300 Spec.
Exploded view, fuel system, 400	I	18	400 Spec.
Exploded view, fuel tank, 300	II	49	
Exploded view, hydraulics, 300	II	14-17	
Exploded view, hydraulics, 400	II	18-21	
Exploded view, hydraulics, transmission 300	V	2	300 Trans.
Exploded view, instrument panel, 300	III	36-37	
Exploded view, instrument panel, 400	III	41	
Exploded view, master cylinder	IV	7	
Exploded view, parking brake, 300	IV	17	
Exploded view, parking brake, 400	IV	20	
Exploded view, planetary wheel end	VI	26-27	
Exploded view, pump, gear type	II	27	
Exploded view, pump, manual steering	II	31	
Exploded view, pump-to-engine coupling	II	22,26	
Exploded view, pump, vane type	II	28	
Exploded view, radiator-hood, 300	I	12	300 Spec.
Exploded view, rear drive line, 300	VII	7	
Exploded view, rear drive line, 400	VII	12	
Exploded view, rear frame, 300	VII	8-9	
Exploded view, rear frame, 400	VII	13	
Exploded view, relief valve, brake	II	14	
Exploded view, remote relief valve	II	43	
Exploded view, reservoir, 300	II	49	
Exploded view, reservoir, 400	II	53	
Exploded view, throttle controls, 300	I	16	300 Spec.
Exploded view, throttle control, 400	I	15	400 Spec.
Exploded view, torque converter, 300	V	16	T. Conv.
Exploded view, transfer case	V	6-7	T. Case
Exploded view, transmission 300	V	7-10, 35-36	300 Trans.
Exploded view, transmission controls, 400	V	4	400 Trans.
Exploded views, winch, Model 19	VIII	11-16, 35-36	27-29,31-32

F

Fairlead bearings	VII	15	
Fan belt tension adjustment	See Adjustment, belt tension		
Filter condition indicator	II	45	
Filter, engine oil, 300	I	10	300 Spec.
Filter, engine oil, 400	I	10	400 Spec.
Filter, fuel, 300	I	13	300 Spec.
Filter, return line	II	44	
Filter, suction, hydraulic	See Magnetic Separator		
Filter, transmission pressure line	V	4	400 Trans.
Flow Control Valve	II	46	
Flowmeter	II	22	
Foot pedal	See Throttle Control		
Frame, rear, 300	VII	6,10	
Frame, rear, 300, exp. view	VII	8-9	
Frame, rear, 400	VII	11	
Frame, rear, 400, exp. view	VII	13	
Frames, separating front and rear	VII	3	
Fuel system, 300	I	13	300 Spec.
Fuel system, 400	I	12	400 Spec.
Fuel tank, 300	II	48	
Fuel tank removal, 400	I	14	400 Spec.

H

High traction differential	See Differential		
Hinge tube	See Oscillation Tube		
Hydraulic diagram, 300	II	4	
Hydraulic diagram, 400	II	5	
Hydraulic reservoir, oil level	II	6	
Hydraulics, transmission, 300, exp. view	V	3	300 Trans.
Hydraulic system, 300, exp. views	II	14-17	
Hydraulic system, 400, exp. views	II	18-21	

I

Instrument panel, 300	III	35-39	
Instrument panel, 400	III	40-42	

L

Left hand, definition of	I	3	300 Spec.
Lights, 300	III	8	
Lights, 400	III	10	
Lubrication, differentials	VI	24	
Lubrication, drive shafts	V	4	U. Shaft
Lubrication, oscillation tube, 300	VII	10	
Lubrication, oscillation tube, 400	VII	14	
Lubrication, planetary axle shaft end	VI	34	
Lubrication, torque converter, 300	V	7	T. Conv.
Lubrication, transfer case	V	1	T. Case
Lubrication, transmission, 300	V	4	300 Trans.
Lubrication, winch, Model 19	VIII	5-8	

M

Magnetic separator	II	46	
Master cylinder	IV	6-7	
Micro serial loch, brake	IV	8-9	

N

No-spin differential	See Differentials		

O

Orbital pump	See pump, Manual Steering		
Oscillation tube, description	VII	4	


P

Parking brake	IV	16-20	
Parking brake, 400	Also see Allison service manuals supplied with this manual		
Planetary axles, description	VI	3	
Planetary axle shaft ends, exp. view	VI	26-27	
Planetary axle shaft ends, servicing	VI	28-31	
Planetary axle shaft ends, trouble shooting	VI	32	
Power train, parts identification, 300	V	6	300 Trans.
	V	3	T. Case
Pressure check, brake system	IV	13	
Pressure check, hydraulic system	II	41	
Pressure check, torque converter, 300	V	9	T. Conv.
Pump, gear type	II	26	
Pump hydraulics, 300, exp. view	II	14-15	
Pump hydraulics, 400, exp. view	II	18-19	
Pump, manual steering	II	30-33	
Pump, testing with flowmeter	II	12	
Pump, trouble shooting	II	7	
Pump, vane type	II	22	


Order the manual at mid-west-tech.com >


	Section	Page	Subsection
R			
Radiator removal, 300	I	11	300 Spec.
Radiator removal, 400	I	10	400 Spec.
Regulator, checks and adjustments	III	27-31	
Regulator, voltage, trouble shooting	III	11-17	
Relief valve, brake system	IV	13-14	
Relief valve, remote (hydraulic)	II	41	
Reservoir, hydraulic oil, 300	II	48	
Reservoir, hydraulic oil, 400	II	52	
Reservoir oil level	II	6	
Right hand, definition of	I	3	400 Spec.
S			
Shift lever, bending, 300	V	45	Trans.
Solenoid, starter	III	34	
Specifications, 300	I	4	300 Spec.
Specifications, 400	I	4	400 Spec.
Specifications, alternator	III	24	
Specifications, articulation, 300	I	4	300 Spec.
Specifications, articulation, 400	I	4	400 Spec.
Specifications, battery	III	19	
Specifications, clutch	V	3	Clutch
Specifications, cooling, 300	I	6	300 Spec.
Specifications, cooling, 400	I	6	400 Spec.
Specifications, electrical test	III	14	
Specifications, engine, 300	I	3	300 Spec.
Specifications, engine, 400	I	5	400 Spec.
Specifications, fast charging	III	21	
Specifications, fluid capacities, 300	I	1	300 Spec.
Specifications, fluid capacities, 400	I	3	400 Spec.
Specifications, general, 300	I	4	300 Spec.
Specifications, general, 400	I	4	400 Spec.
Specifications, hydraulic	II	3	
Specifications, regulator	III	27	
Specifications, specific gravity	III	21	
Specifications, starter	III	33	
Specifications, starter solenoid	III	34	
Specifications, steering, 300	I	4	300 Spec.
Specifications, steering, 400	I	4	400 Spec.
Specifications, steering power hydraulics	II	3	
Specifications, tires, 300	I	5	300 Spec.
Specifications, tires, 400	I	5	400 Spec.
Specifications, torque converter, 300	V	3	T. Conv.
Specifications, transmission, 300	V	3	300 Trans.
Specifications, transmission, 400	I	4	400 Spec.
Specifications, winch, 300	I	5	400 Spec.
Specifications, winch	VIII	4	
Starter check	III	32-33	
Starter solenoid check	III	34	
Starting Circuit, Trouble shooting	III	14	
Steering cylinders	See Cylinders, hydraulic		
Steering hydraulics, 300, exp. view	II	17	
Steering hydraulics, 400, exp. view	II	29	
Steering, trouble shooting	II	8	
T			
Throttle control linkage, 300	I	16	300 Spec.
	II	21	
Throttle control linkage, 400	I	15	400 Spec.
Torque converter, 300, exp. view	V	16	T. Conv.
Torque converter, 300, maintenance	V	7-8	T. Conv.
Torque converter, 300, operation	V	5-6	T. Conv.
Torque converter, 300, servicing	V	11-22	T. Conv.
Torque converter, 300, specifications	V	3	T. Conv.
Torque converter, 300, trouble shooting	V	9-11	T. Conv.
Torque converter, 400	Also see Allison service manuals supplied with this manual.		
Torques, bolt & nut, grade 5 & 8	I	7	300 Spec.
Torques, hydraulic fittings	II	6	
Torques, standard	I	7	300 Spec.
Torques, Torque converter, 300	V	4	T. Conv.
Torques, transfer case	V	4	T. Case
Torques, transmission, 300	V	3	300 Trans.
Torques, universal joints - drive shafts	V	6	D. Shafts
Traction clutch, 300	See clutch		
Transfer case, description	V	4	T. Case
Transfer case, exp. view	V	6-7	T. Case
Transfer case, lubrication	V	4	T. Case
	V	16	T. Case
Transfer case, servicing	V	3-17	T. Case
Transmission, 300, specifications	V	3	Trans.
Transmission, 300, S/N 5133-5247, exp. view	V	35-36	Trans.
Transmission, 300, S/N 5133-5247, servicing	V	34-45	Trans.
Transmission, 300, S/N 5235 up, exp. view	V	7-10	Trans.
Transmission, 300, S/N 5235 up, servicing	V	2-33	Trans.
Transmission, 400	V	3-4	400 Trans.
Transmission, 400	Also see Allison service manuals supplied with this manual.		
Trouble shooting, differential	VI	4	
Trouble shooting, drive shafts & universal joints	V	3	D. Shafts
Trouble shooting, electrical	III	11-17	
Trouble shooting, hydraulic	II	7	
Trouble shooting, planetaries	VI	25	
Trouble shooting, steering	II	7	
Trouble shooting, torque converter, 300	V	9-11	T. Conv.
Trouble shooting, winch	VIII	7-9	
Twist lock, brake	IV	5-6	
U			
U-joint kit	V	5	T. Case
Universal joints, servicing	V	4-6	D. Shafts
Universal joints, trouble shooting	V	3	D. Shafts
V			
Voltage Regulator	See Regulator, voltage		
W			
Winch, Model 19, description	VIII	3	
Winch, Model 19, exp. views	VIII	11-16,27-28,31-32	
Winch, Model 19, servicing	VIII	19-26	
Winch, Model 19, specifications	VIII	4	
Winch, Model 19, trouble shooting	VIII	7-9	
Wiring diagram, 300	III	4-5	
Wiring diagram, 400	III	8-9	

MidWestTech | Case 300SK, 400SK Log Skidders Service Manual | Publication 9-73832 Order the manual at mid-west-tech.com >

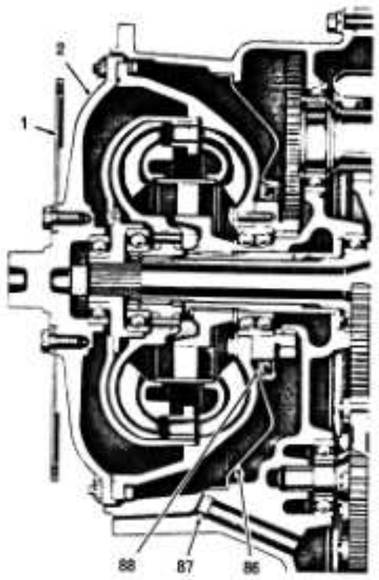


DIRECT MOUNT
(WITH DIAPHRAGM
FOR "DRY" HOUSING)

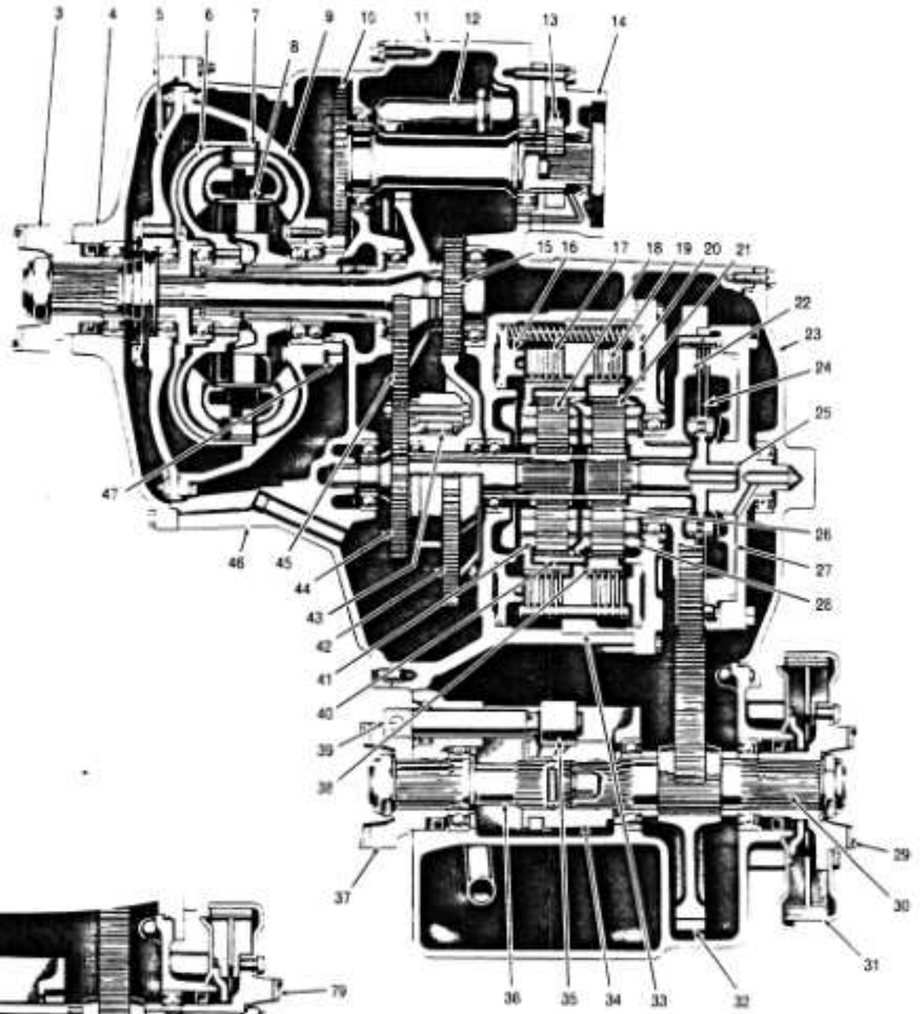


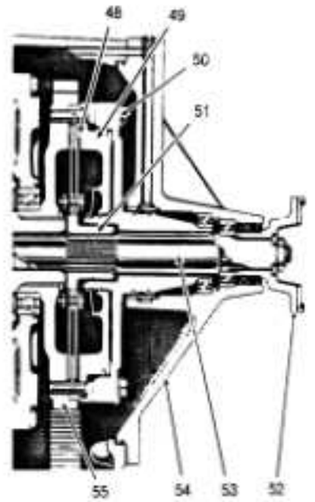


TT WITH PTO

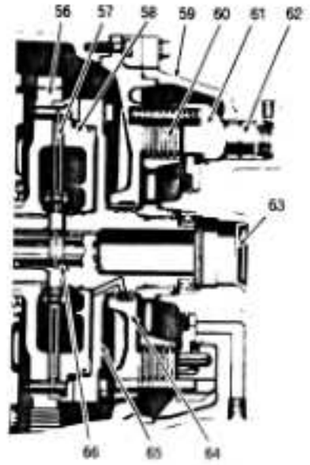

TTB WITHOUT PTO

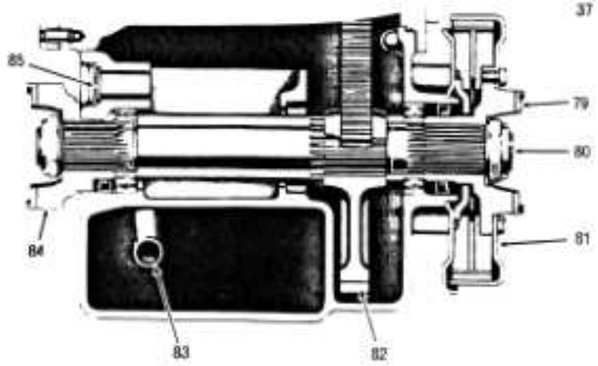

ONE-PIECE OUTPUT SHAFT

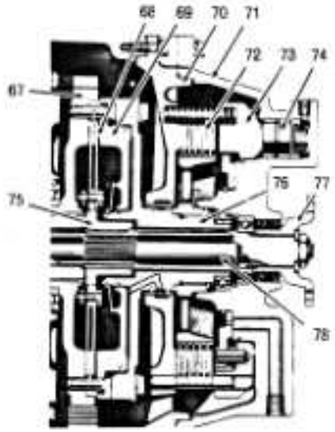

TTB WITH PTO

Foldout 1. TT 2000 and TTB 2000 transmissions—cross-section view

Order the manual at mid-west-tech.com >