930 Series Comfort King

Service Manual

9-74911

MidWestTech | Case 930 Comfort King Tractor Service Manual | Publication 9-74911

Order the manual at mid-west-tech.com >

TABLE OF CONTENTS - 930 SERIES COMFORT KING

Description	Group	Section	Page
Specifications, General (engine wear limits, torque specifications)	I	C	C-1 thru C-8
Specifications, Electrical (charging circuit, cranking circuit, ignition system, wiring diagrams)	I	F	F-1 thru F-30
Diesel Engine Cylinder Head Assembly (rocker arms, manifolds, valves)	II	K	K-1 thru K-16
LP Gas Engine Cylinder Head Assembly (rocker arms, manifolds, valves)	II	L	L-1 thru L-13
Assemblies in the Engine Block (oil pump, pistons, connecting rods, sleeves, rings, crankshaft, camshaft, lifters, injection pump drive)	II	M	M-1 thru M-48
Spark Ignition Governor	II	M & Supp. #1	M-50 thru M-59
Diesel Fuel Injectors	III	I	I-1 thru I-25
Case Diesel Powrcel	III	I	I-26 thru I-32
Diesel Fuel Injection Pump (adjustments, timing, linkage)	III	I	I-33 thru I-43
LP Gas Regulator and Carburetor	III	N	N-1 thru N-8
Hydraulic Cylinders	IV	A	A-1 thru A-8
Hydraulic Pump and Control Valve	IV	D	D-1 thru D-22
Power Steering System	V	O	O-1 thru O-27
Power Steering Pump (pressure check, pump relief valve)	V	P	P-1 thru P-23
Transmission (brake linings and drums)	VI	S	S-1 thru S-46
Traction Clutch (hand and foot)	VI	SS	SS-1 thru SS-15
PTO Clutch	VI	3S	3S-1 thru 3S-12

MidWestTech | Case 930 Comfort King Tractor Service Manual | Publication 9-74911 Order the manual at mid-west-tech.com >

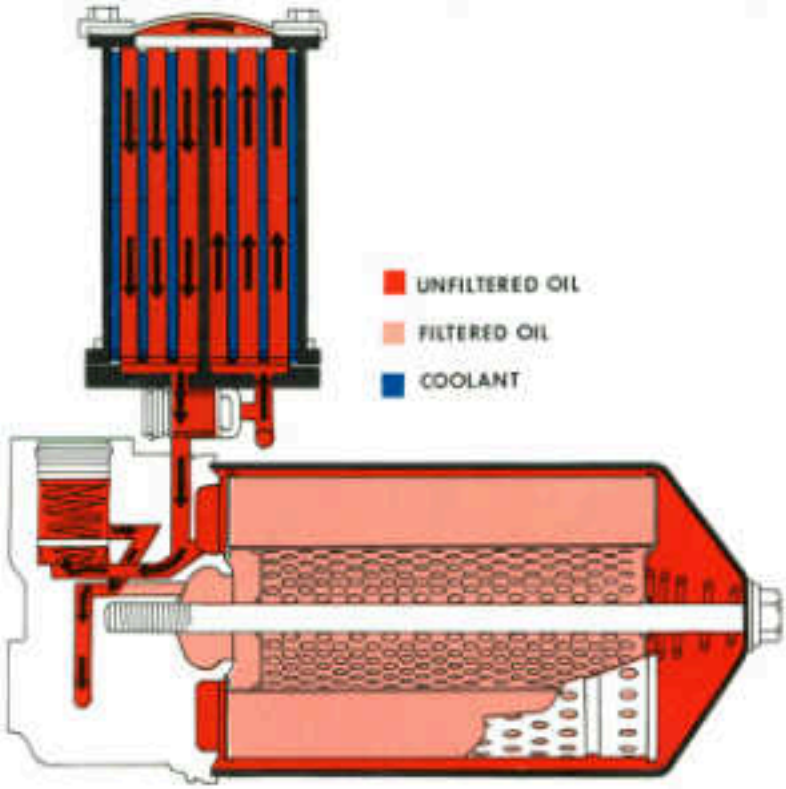


Figure M-9. Oil Flow With Plugged Filter Element

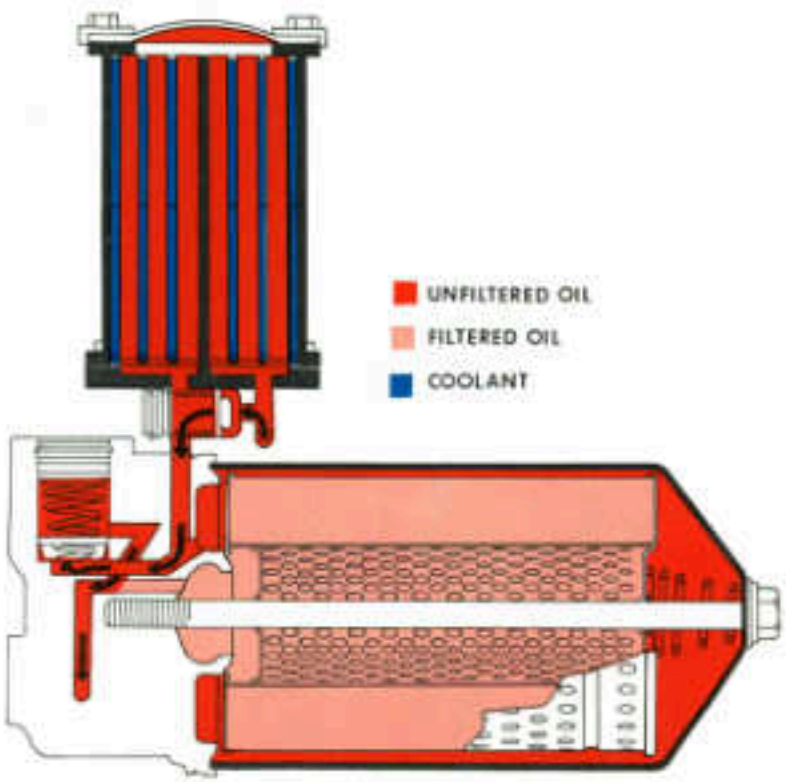


Figure M-10. Oil Flow With Plugged Oil Cooler and Oil Filter Element

MidWestTech | Case 930 Comfort King Tractor Service Manual | Publication 9-74911 Order the manual at mid-west-tech.com >