W26
Loader

Service Manual

9-78236


CASE CONSTRUCTION

MidWestTech | Case W26 Loader Service Manual | Publication 9-78236

Order the manual at mid-west-tech.com >

WIRING CODE

REF.	COLOR	FROM	TO
2	Brown	Cold Weather Start. Aid	Start Aid Switch
3	Lt. Green	Fuel Level Sender	Fuel Level Gauge
4	Gray	Conv. Temp. Sender	Conv. Temp. Gauge
5	Pink-Black	Eng. Temp. Sender	Eng. Coolant Temp. Gauge
6	White	Aux. Start "SOL"	Neutral Start Switch N.O.
8A	Orange	Circuit Breaker (Charging) 60 Amps	Key Switch "BAT"
8B	Orange	Circuit Breaker (Lights) 40 Amps	Key Switch "BAT"
8C	Orange	Stop Light Switch	Key Switch "BAT"
8D	Orange	Stop Light Switch	Circuit Breaker (Charging) 60 Amps
8E	Orange	Circuit Breaker (Charging)	Oil Press. Switch (Field Control)
8F	Orange	Circuit Breaker (Charging) 60 Amps	Alternator Output "+"
9	Dk. Green	Eng. Oil Press. Sender	Eng. Oil Press. Gauge
10A	Purple	Key Switch "IGN"	Hourmeter
10B	Purple	Key Switch "IGN"	Eng. Oil Press. Gauge Res.
10C	Purple	Eng. Oil Press. Gauge Res.	Indicator Lamp "IGN"
10D	Purple	Eng. Oil Press. Gauge Res.	Coolant Temp. Gauge Res.
10E	Purple	Coolant Temp. Gauge Res.	Fuel Level Gauge Resistor
10F	Purple	Key Switch "IGN"	Conv. Temp. Gauge Res.
10G	Purple	Conv. Temp. Gauge Res.	Air Press. Warning Switch
10H	Purple	Key Switch "IGN"	Lift Arm Diode
10J	Purple	Lift Arm Diode	Tilt Arm Diode
10K	Purple	Lift & Tilt Spool Connector	Tilt Arm Diode
10L	Purple	Fuel Level Gauge Res.	Starting Aid Switch
10M	Purple	Voltmeter "IGN"	Eng. Oil Press. Gauge Res.
11A	Yellow	Light Switch Resistor	Stop Light Switch
11B	Yellow	Stop Light Switch	Taillight
11C	Yellow	Left Taillight	Right Taillight
12A	Blue	Light Switch "RL"	Left Rear Flood
12B	Blue	Left Rear Flood	Right Rear Flood
13	White	Key Switch "SOL"	Neutral Start Switch "COM"
15	Red & Black	Light Switch "BAT"	Circuit Breaker (Lights)
16A	Black	Light Switch "INST"	Instr. Panel Lights, L.H.
16B	Black	Light Switch "INST"	Instr. Panel Lights, R.H.
17A	Pink	Light Switch "HL"	RH & LH Conn. (Head Lamp)
17B	Pink	RH & LH Connector	RH Head Lamp
17C	Pink	RH & LH Connector	LH Head Lamp
18A	Dk. Green	Light Switch "INST"	RH & LH Flood Lamp Conn.
18B		RH & LH Flood Lamp Conn.	RH Flood Lamp
18C		RH & LH Flood Lamp Conn.	LH Flood Lamp
22A	Black	Lift Lever Actuator Switch "COM"	Lift Arm Diode
22B	Black	Lift Lever Actuator Switch "N.O."	Lift Arm Position Control Box
22C	Black	Lift Spool Solenoid	Lift Arm Diode
23A	White	Tilt Lever Actuator Switch "COM"	Tilt Arm Diode
23B	White	Tilt Lever Actuator Switch "N.O."	Bucket Level Switch "N.O."
23C	White	Tilt Spool Solenoid	Tilt Arm Diode
24	Green	Regulator	Alternator F-1
25	Black	Regulator	Alternator F-2
26	Red	Regulator	Oil Press. Switch (Field Control)
30	Black	Bucket Level Switch "COM"	Ground (Buzzer)
31	White	Buzzer	Air Press. Warning Switch
32	Black	Buzzer	Ground
33	Black	Inst. Panel Lights	Three Way Connector
34	Black	Voltmeter	Circuit Breaker (Lights) Ground
35	Black	Ign. Indicator Lamp	Circuit Breaker (Lights) Ground
36	Black	Lift Arm Position Cont. Box Term.	Lift Arm Position Cont. Micro Switch "N.O."
37	Orange	Aux. Solenoid	Starter Solenoid "SOL"
38A	Red	Starter Solenoid "B"	Aux. Solenoid
38B	Red	Starter Solenoid "B"	60 Amp. Circuit Breaker
39	Black	Aux. Solenoid	Ground
39		Bucket Height Switch, "COM"	Ground

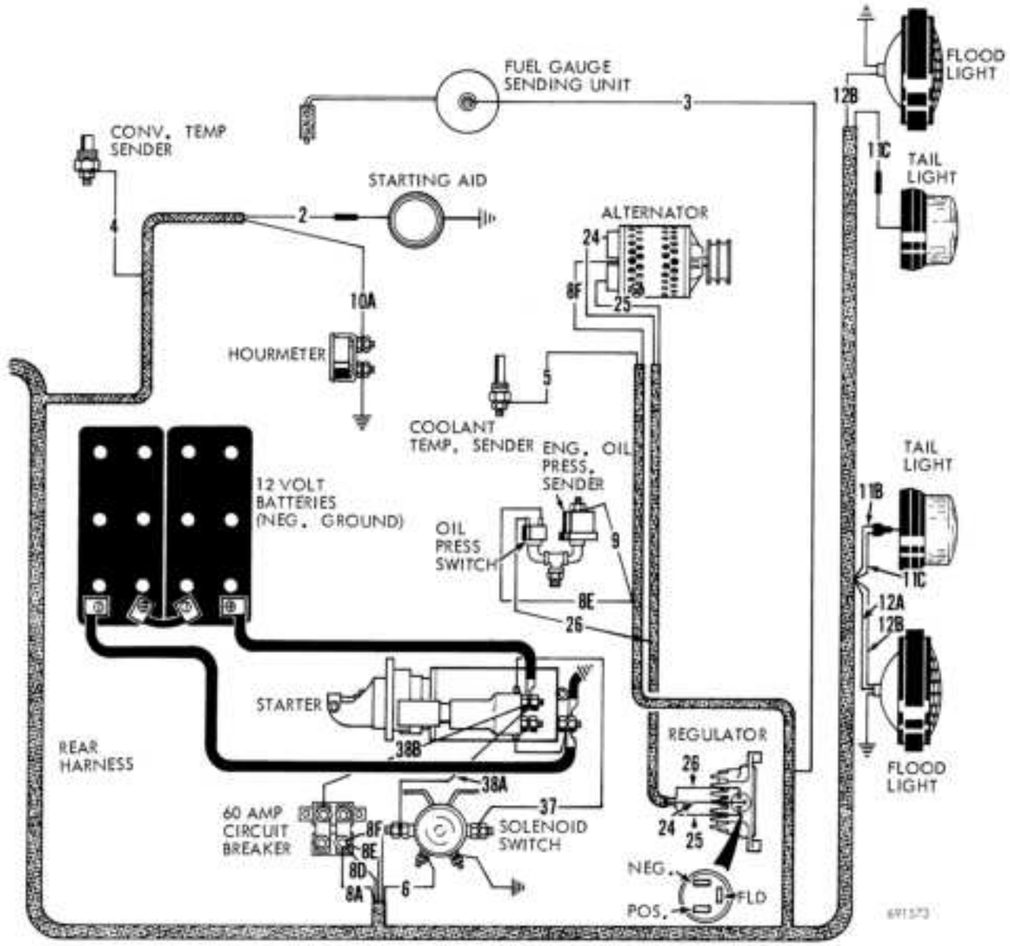

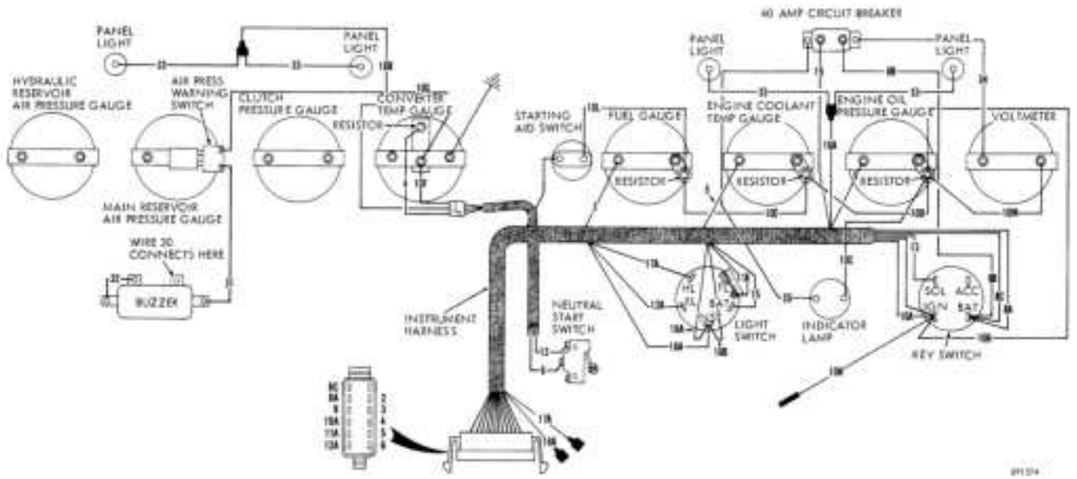


Figure 1a - Instrument Panel Wiring

MidWestTech | Case W26 Loader Service Manual | Publication 9-78236
Order the manual at mid-west-tech.com >