WSM

WORKSHOP MANUAL
TRACTOR

L3010,L3410,L3710,
L4310,L4610

Kubota

MidWestTech | Kubota L3010, L3410, L3710, L4310, L4610 Tractor Service Manual | Publication 97897-12191

Order the manual at mid-west-tech.com >

CONTENTS

[1] FEATURES G-1
[2] TRACTOR IDENTIFICATION G-2
[3] GENERAL PRECAUTIONS G-3
[4] HANDLING PRECAUTIONS FOR ELECTRICAL PARTS AND WIRING G-4
[5] LUBRICANTS, FUEL AND COOLING WATER G-8
[6] TIGHTENING TORQUES (GENERAL USE SCREWS, BOLTS AND NUTS) G-9
[7] MAINTENANCE CHECK LIST G-10
[8] CHECK AND MAINTENANCE G-11
(1) Daily Check G-11
(2) Check Points of Initial 50 Hours G-12
(3) Check Points of Every 50 Hours G-14
(4) Check Points of Every 100 Hours G-17
(5) Check Points of Every 200 Hours G-18
(6) Check Points of Every 400 Hours G-20
(7) Check Points of Every 800 Hours G-21
(8) Check Points of Every 1 Year G-22
(9) Check Points of Every 2 Years G-22
(10) Others G-24
[9] SPECIAL TOOLS G-25
[10] TIRES G-35
(1) Types of Tire G-35
(2) Tread Adjustment G-36
(2)-1 Front Wheels G-36
(2)-2 Rear Wheels G-37
(3) Wheel Hub G-38
(4) Tire Pressure G-39
(5) Tire Liquid Injection G-40
[11] SPECIFICATIONS OF IMPLEMENT LIMITATIONS G-43

MidWestTech | Kubota L3010, L3410, L3710, L4310, L4610 Tractor Service Manual | Publi... Order the manual at mid-west-tech.com >

[1] WIRING DIAGRAM

- Main Switch


Terminal / Key Position	B	AC	R	ST
OFF	●			
ON	●—●			
START	●—●	—●	—●	

- Combination Switch

Head Light Switch					Hazard Light Switch			
	B1	T	1	2		B2	R	L
OFF	●				OFF	●		
HIGH	●—●	—●	—●		ON	●—●	—●	
LOW	●—●	—●		—●				

- Color of Wiring

W ——— White	BW ——— White / Black
B ——— Red	WY ——— White / Yellow
L ——— Blue	RW ——— Red / White
Y ——— Yellow	RL ——— Red / Blue
G ——— Green	RY ——— Red / Yellow
Br ——— Brown	BR ——— Black / Red
Gr ——— Gray	BL ——— Black / Blue
O ——— Orange	GR ——— Green / Red
Lb ——— Sky Blue	LY ——— Blue / Yellow
YG ——— Yellow / Green	LG ——— Blue / Green
WB ——— White / Black	

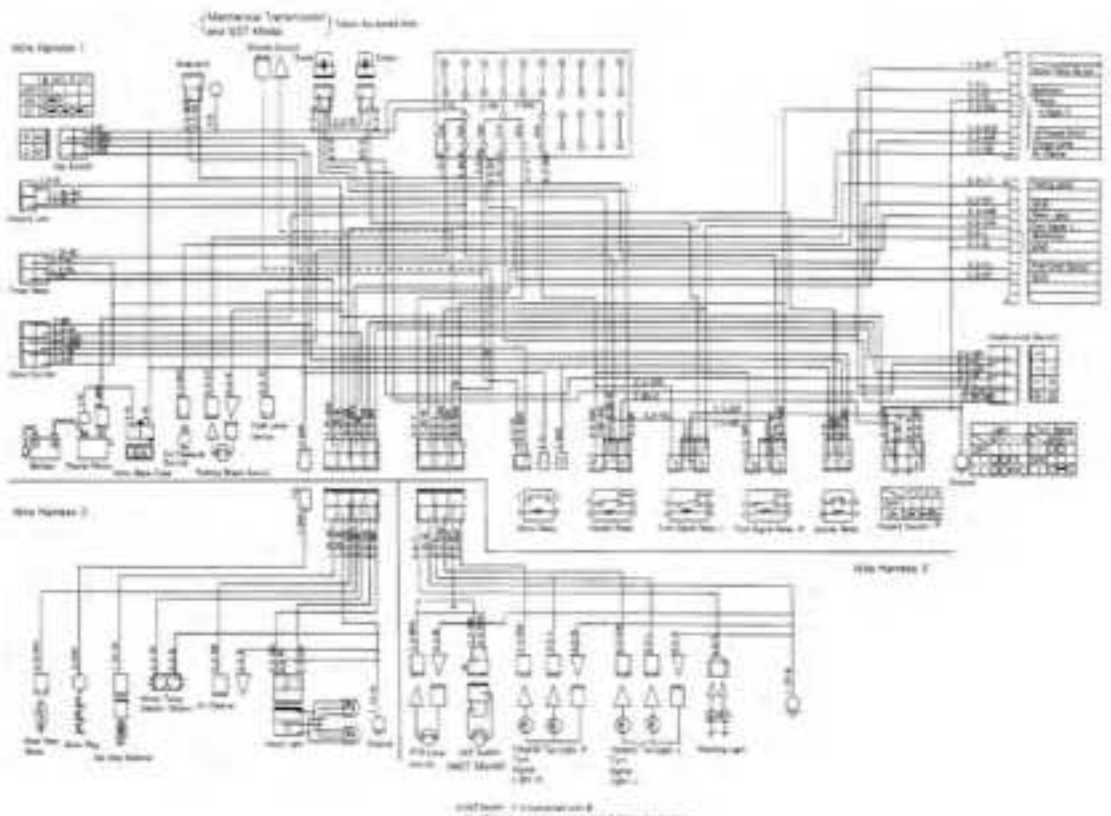

BAT

MidWestTech | Kubota L3010, L3410, L3710, L4310, L4610 Tractor Service Manual | Publication 97897-12191 Order the manual at mid-west-tech.com >