
EXCAVATOR LOADER

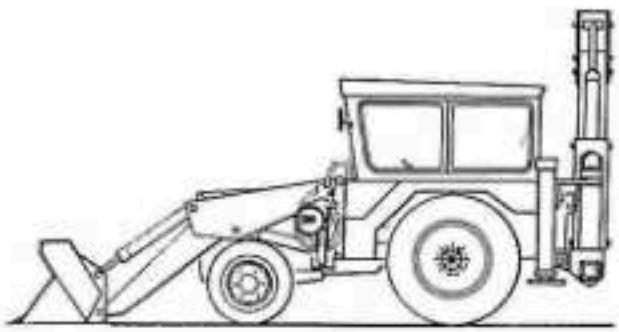

WORKSHOP MANUAL

Models: MK 2 and MK 3 Range

2D – 2DS – 3 – 3C – 3CS – 3D – 700

Manual Gearbox & Torque Converter
UK – USA – Austrian – German –


MidWestTech | JCB MK 2, 3 2D, 2DS, 3, 3C, 3CS, 3D, 700 Backhoe Loader Service Manual... Order the manual at mid-west-tech.com >

Contents

Attachments	**1-1**
Brakes	**1-1**
Capacities	**1-2**
Electrical System	**1-3**
Engine	**1-3**
Hydraulics	**1-4**
Steering	**1-4**
Transmission	**1-5**
Tyres	**1-7**
Torque Settings	**2-1**

Order the manual at mid-west-tech.com >

Leyland 38TD & 4/98 Engines Service Manual

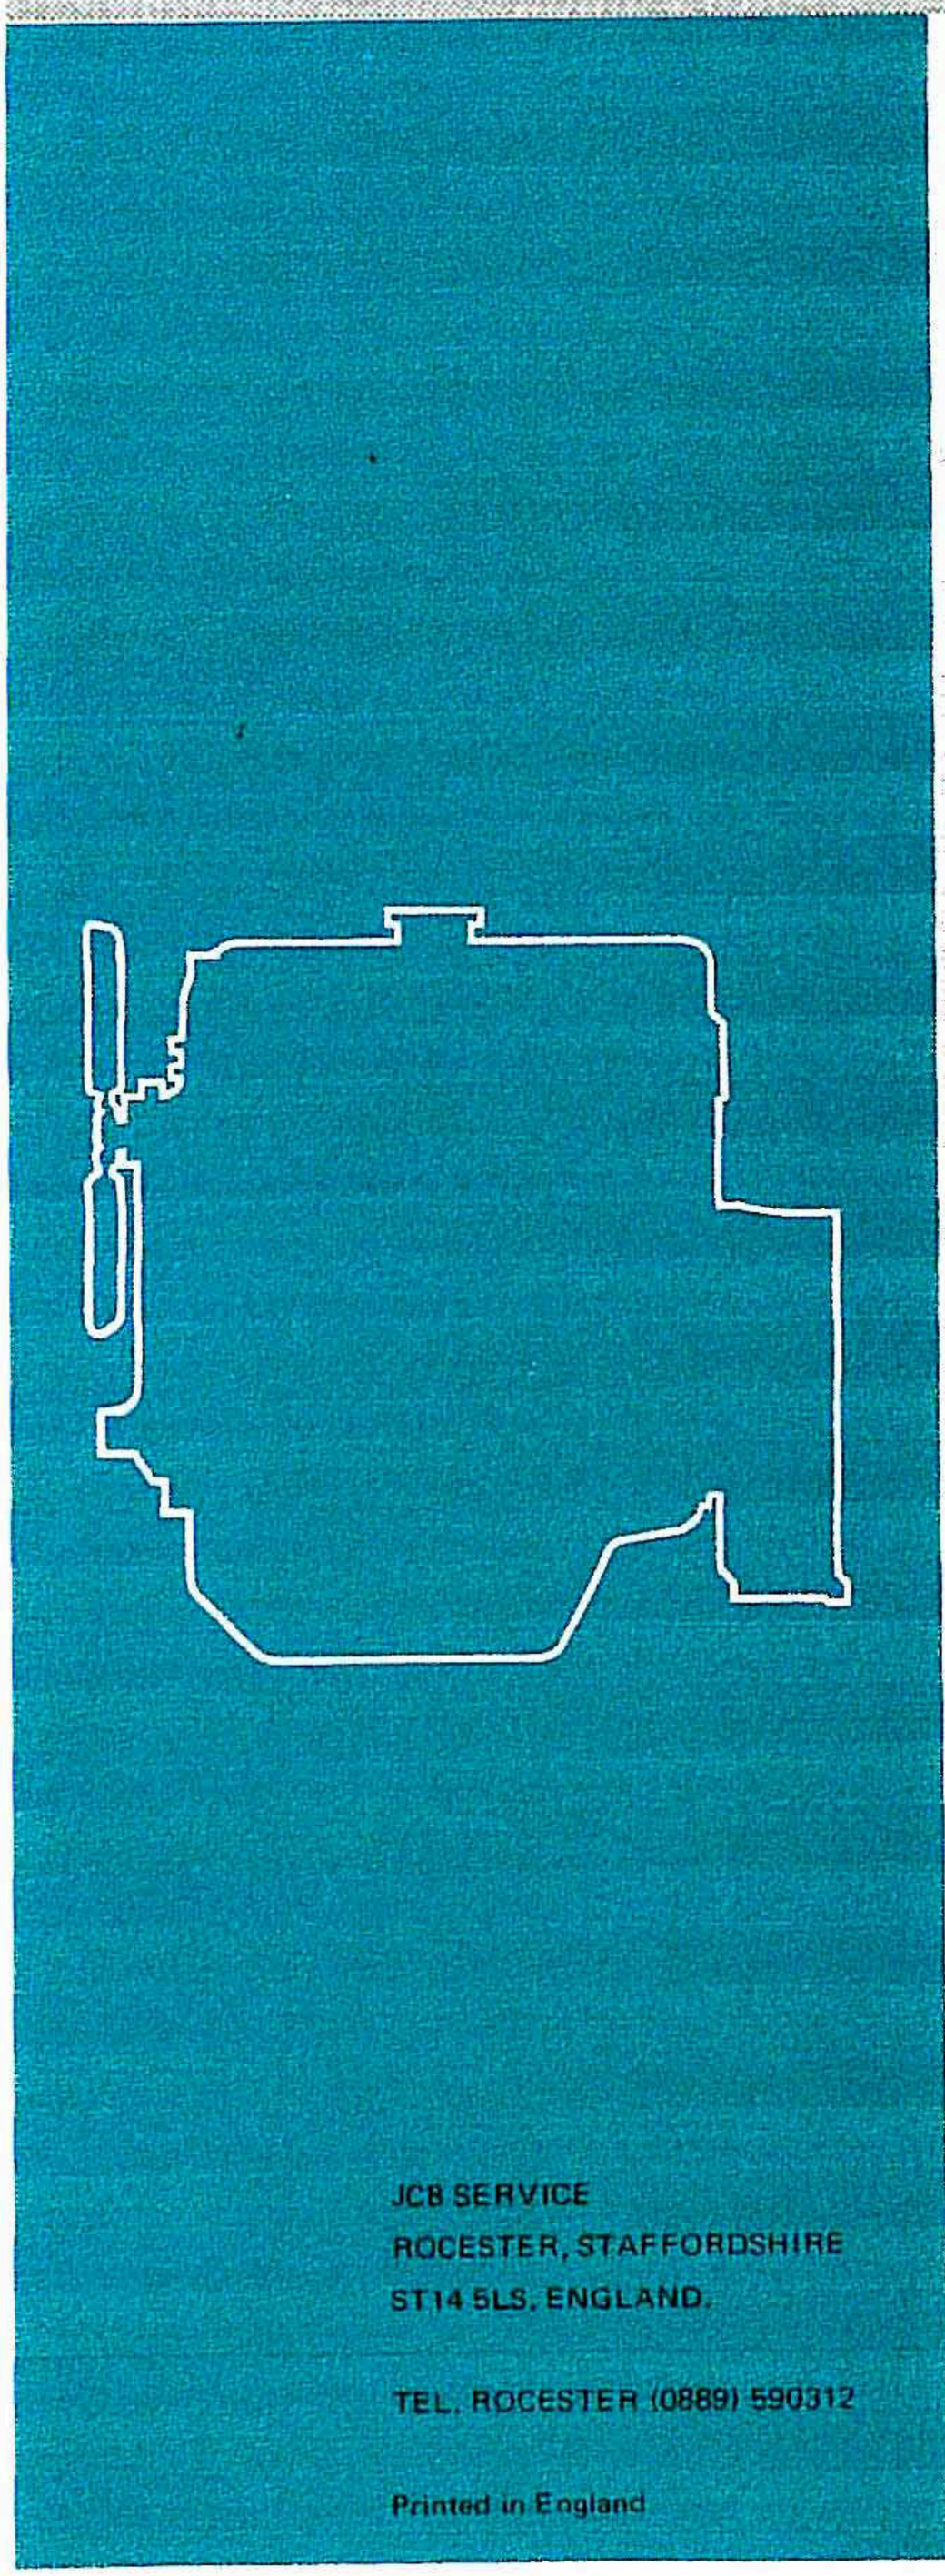

Routine Maintenance 1

Technical Data 2

Cylinder Head 3

Cylinder Block 4

Lubrication System 5

Cooling System 6

Fuel System 7

Auxiliaries 8

JCB SERVICE
ROCESTER, STAFFORDSHIRE
ST14 5LS, ENGLAND.

TEL. ROCESTER (0889) 590312

Printed in England

MidWestTech | JCB MK 2, 3 2D, 2DS, 3, 3C, 3CS, 3D, 700 Backhoe Loader Service Manual | Publication 9803-1200

Order the manual at mid-west-tech.com >