

TNV series

SERVICE MANUAL

3TNV82A
3TNV84 • 3TNV84T • 3TNV88
4TNV84 • 4TNV84T • 4TNV88
4TNV94L
4TNV98 • 4TNV98T
4TNV106 • 4TNV106T

P/N: 0BTNV0-G0000

YANMAR


INDUSTRIAL ENGINES

MidWestTech | JCB Yanmar 3TNV82A, 3TNV84, 3TNV84T, 3TNV88, 4TNV84, 4TNV84T, 4...
Order the manual at mid-west-tech.com >

MidWestTech | JCB Yanmar 3TNV82A, 3TNV84, 3TNV84T, 3TNV88, 4TNV84, 4TNV84...

Electrical Wiring

Note: The following wiring diagram is "representative" of a common installation using a Yanmar engine. The actual installation may be equipped with a variety of electrical components and wiring harnesses. Contact the machine manufacturer for specific information.

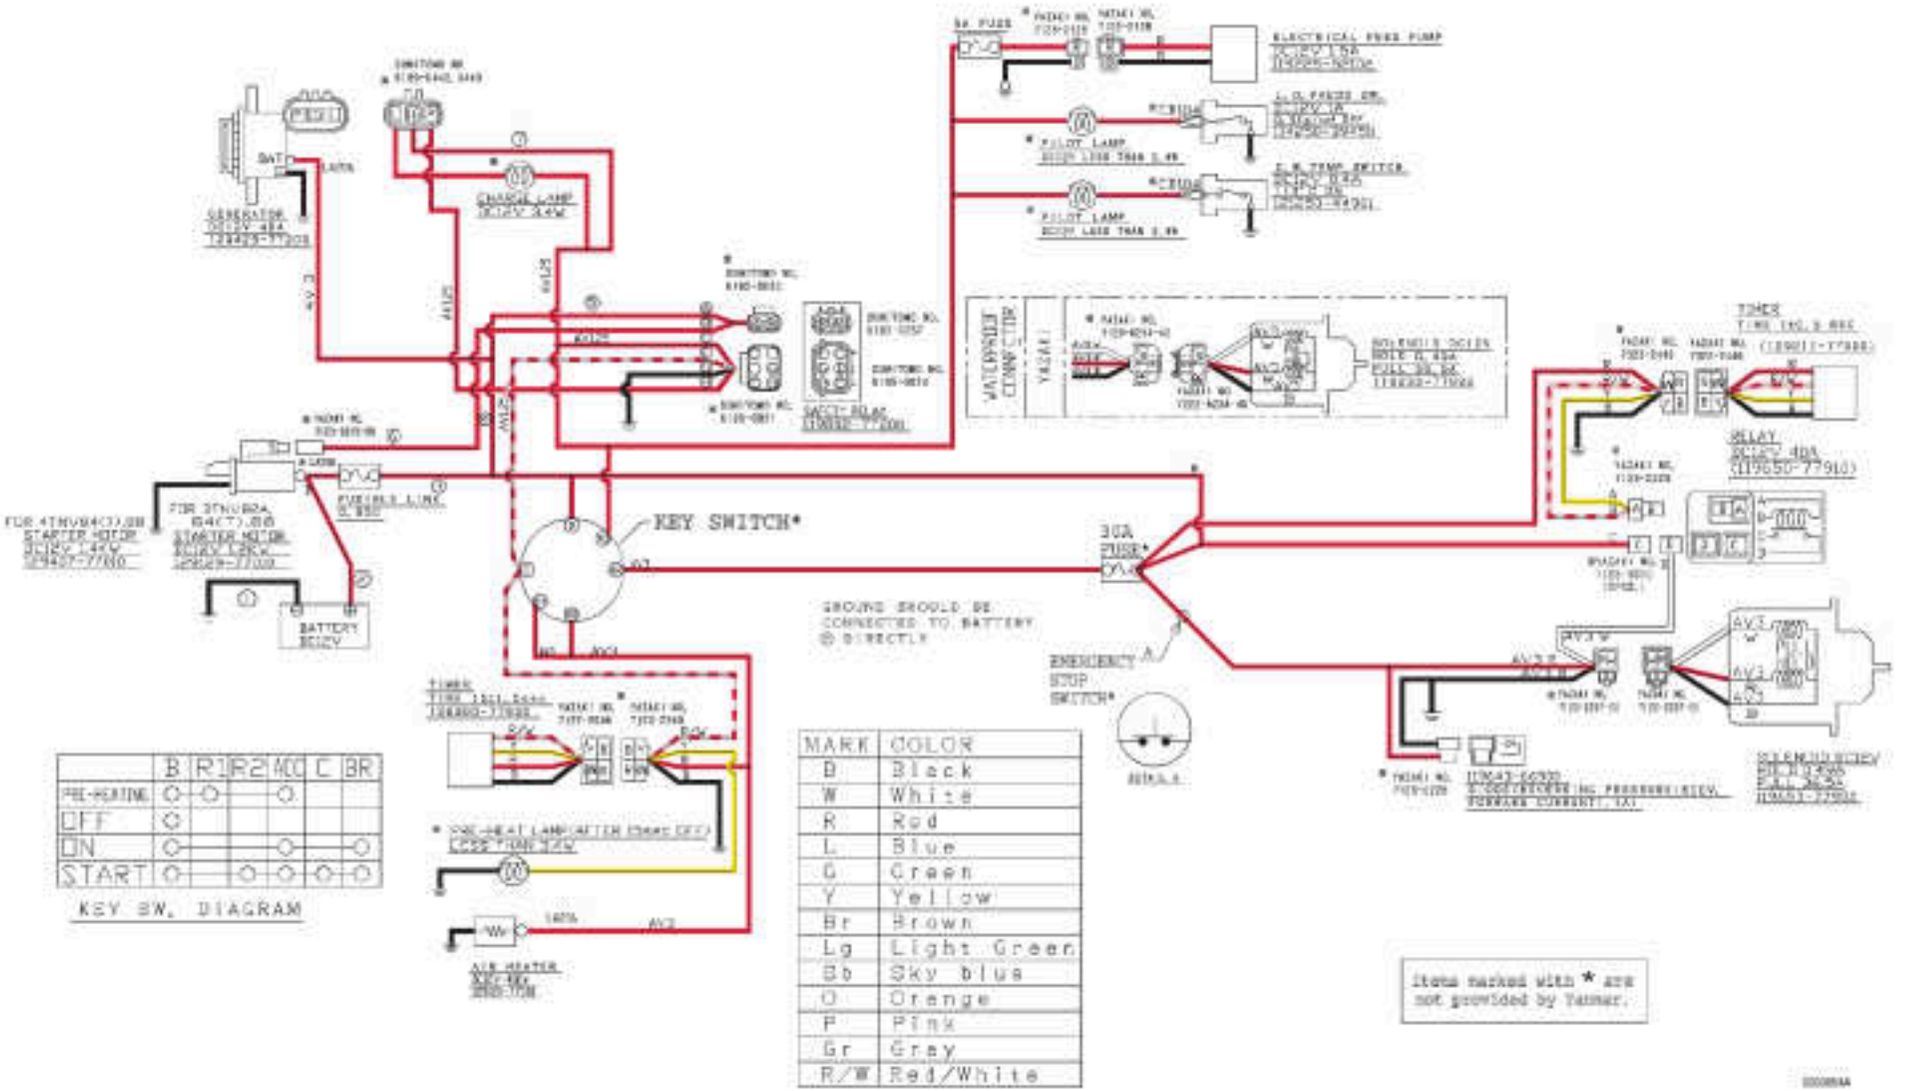

	B	R1	R2	M	C	BR
PRE-HEATING	○	○			○	
OFF	○					
ON	○			○		○
START	○		○	○	○	○

KEY SW. DIAGRAM

MARK	COLOR
B	Black
W	White
R	Red
L	Blue
G	Green
Y	Yellow
Br	Brown
Lg	Light Green
Sb	Sky blue
O	Orenge
P	Pink
Gr	Grey
R/W	Red/White

Order the manual at mid-west-tech.com >